 


# WORLD MARKET®

## Assembly Instructions





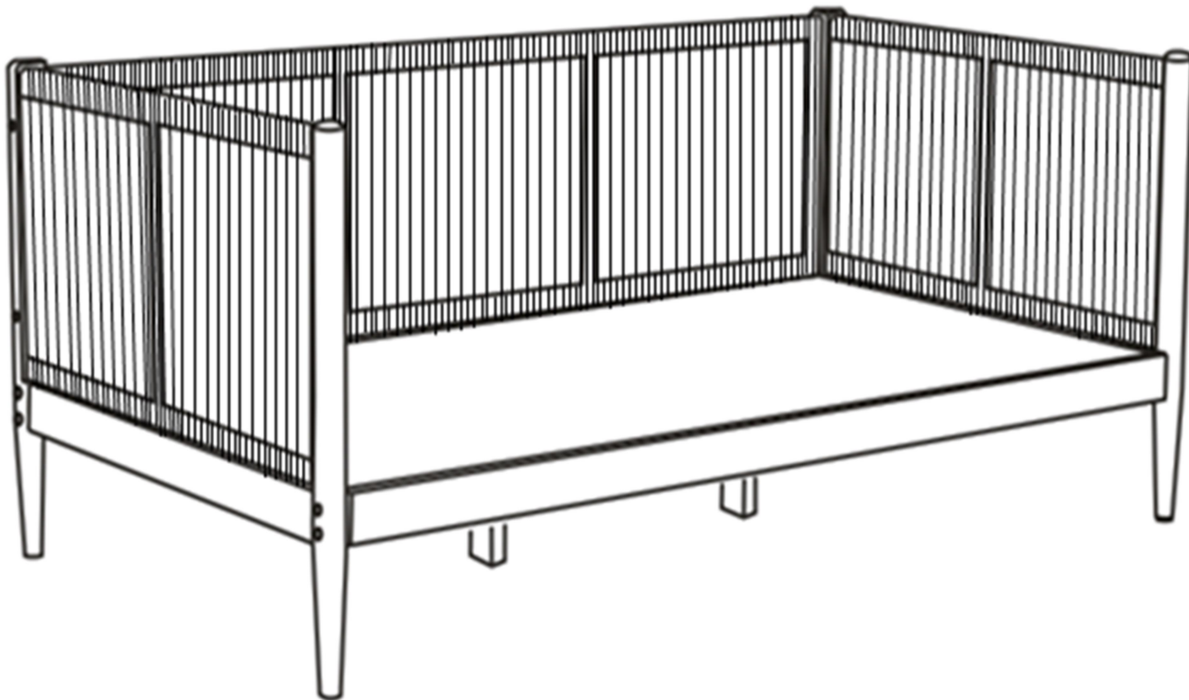

 
Waylen Rope Daybed  
SKU 646542







Thank you for your purchase. If you have any questions pertaining to the assembly of this furniture piece, please contact the nearest World Market store. If you are not near a store, please call our customer service call center toll free at 877-967-5362 for assistance.

ALL PRODUCTS SOLD AT WORLD MARKET ARE NOT  
FOR COMMERCIAL USE AND ARE INTENDED FOR  
RESIDENTIAL USE ONLY.


 

## Component List

LABEL	PICTURE	DESCRIPTION	QTY
A		Back Panel	1
B		Right Panel	1
C		Left Panel	1
D		Front Rail	1
E		Back Rail	1
F		Middle Rails	2
G		Mattress Panel	1

## Hardware List

 
LABEL	PICTURE	DESCRIPTION	QTY
H-1		Allen Bolt M8 50 mm	12
H-2		Washer M8 (pre-combined with H-1)	12
H-3		Wood Screw 50 mm	4
H-4		Wood Plug	13 (1 extra)

## Tool List

LABEL	PICTURE	DESCRIPTION	QTY
T-1		Allen Key M8	1
T-2		Phillips Screwdriver (not included)	not included
T-3		Rubber Mallet (not included)	not included

# Assembly Preparation

## Before Beginning:

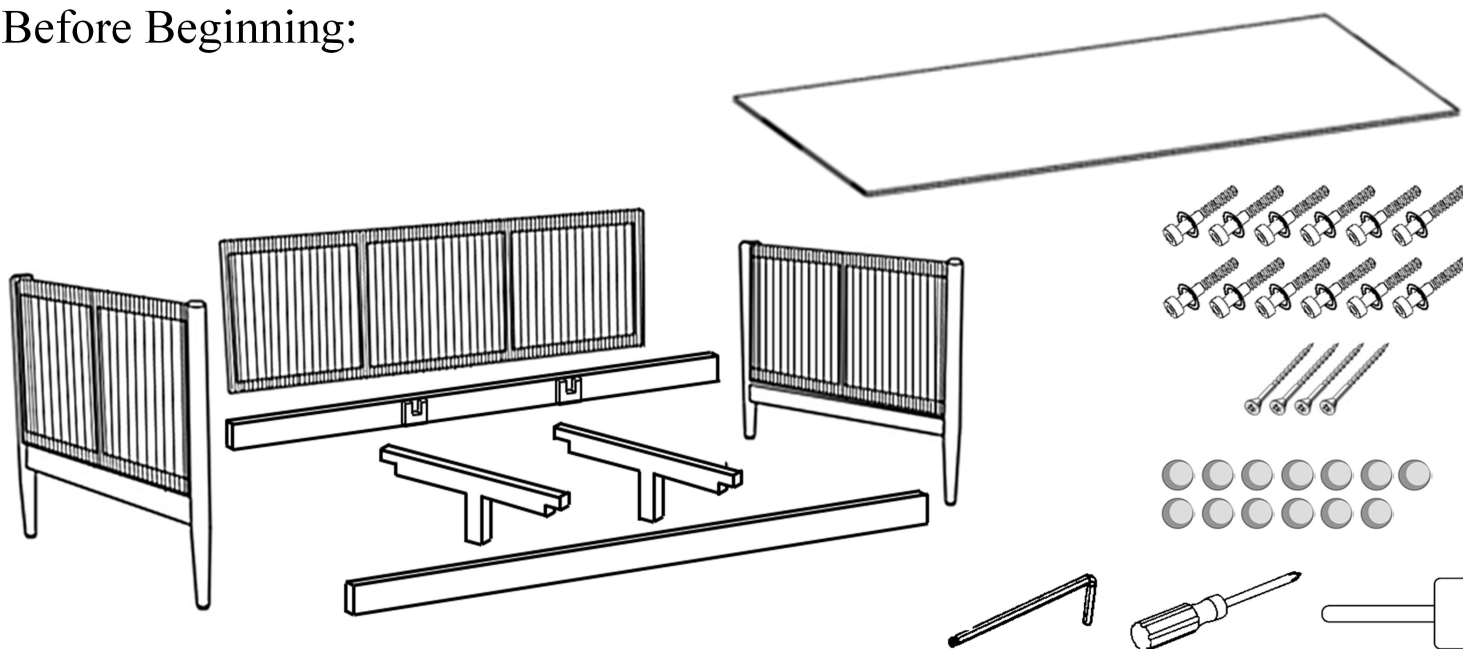

Unpack all hardware bags and components to ensure you have all parts. Take note of bolt hardware size differences and components that may have directional labels (Example: TOP or FRONT).



Depending on your furniture product, foam, packing dust, or residual film or finish may be present on the components. This is normal and can be wiped clean using a non-colored, lint-free dry cloth.



Read the assembly instructions, cover-to-cover. Save any **Care and Maintenance** instructions pages for after the assembly has been completed.



It is always recommended to have 2 adults on hand for assembly.



Do not assemble on hard, abrasive flooring or carpeted surfaces that can damage or get caught in the components during assembly.



Assemble on a clean non-marring surface (such as the product's packing foam).



Do not discard any packaging until the product has been fully assembled.



In case of missing parts, please contact your nearest World Market store or call our customer service call center at 1-877-967-5362.



**WARNING:** Small parts are a choking hazard. Adult supervision is required before, during, and after assembly.

# Assembly Steps

## Step 1



**IMPORTANT: TWO PEOPLE ARE REQUIRED FOR THIS ASSEMBLY STEP**




(H-1) Allen Bolt M8 x 50 mm x 4

(H-2) Washer M8 x4

(T-1) Allen Key

### NOTE:

The through holes should be toward the back of the assembly.

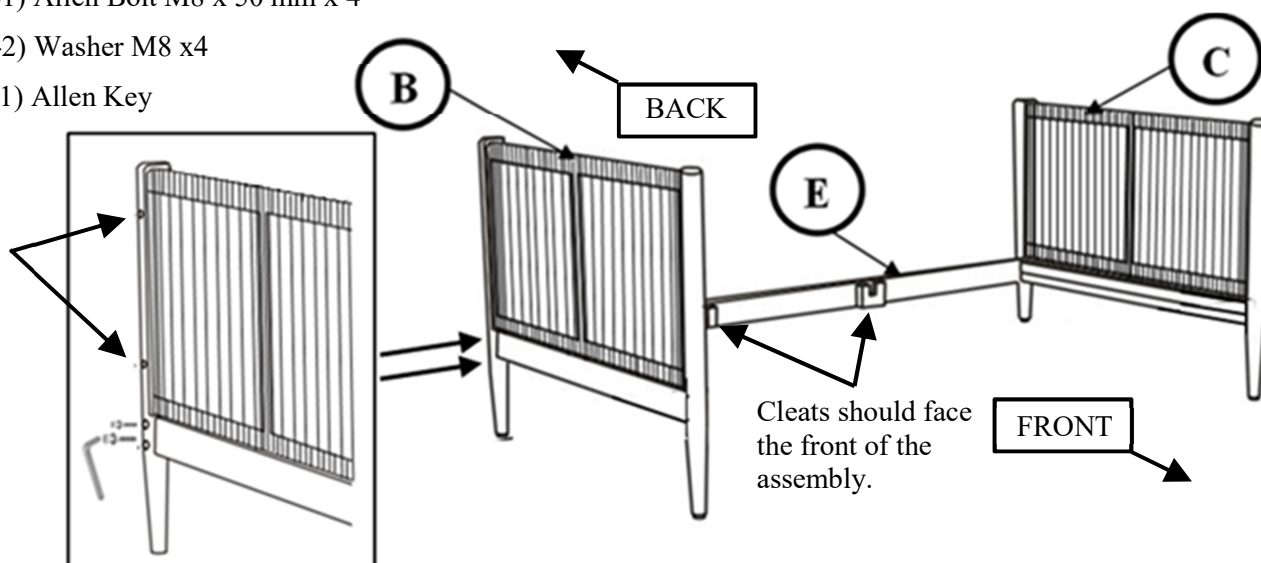

It is imperative to use the help of a second person during assembly. Place the Right Panel (B) on its legs. While one person holds the Right Panel (B), the second person can support the Back Rail (E) and secure it to the Right Panel (B) by aligning the holes and engaging two Allen Bolts (H-1) and Washers (H-2) through the outside of the back leg. Tighten about 90% using the provided Allen Key (T-1). While continuing to support the Right Panel (B) and Back Rail (E), position the Left Panel (C) on its legs. Perform the same operation to attach Back Rail (E).

## Step 2




**IMPORTANT: TWO PEOPLE ARE REQUIRED FOR THIS ASSEMBLY STEP**



(H-1) Allen Bolt M8 x 50 mm x 4

(H-2) Washer M8 x4


(T-1) Allen Key

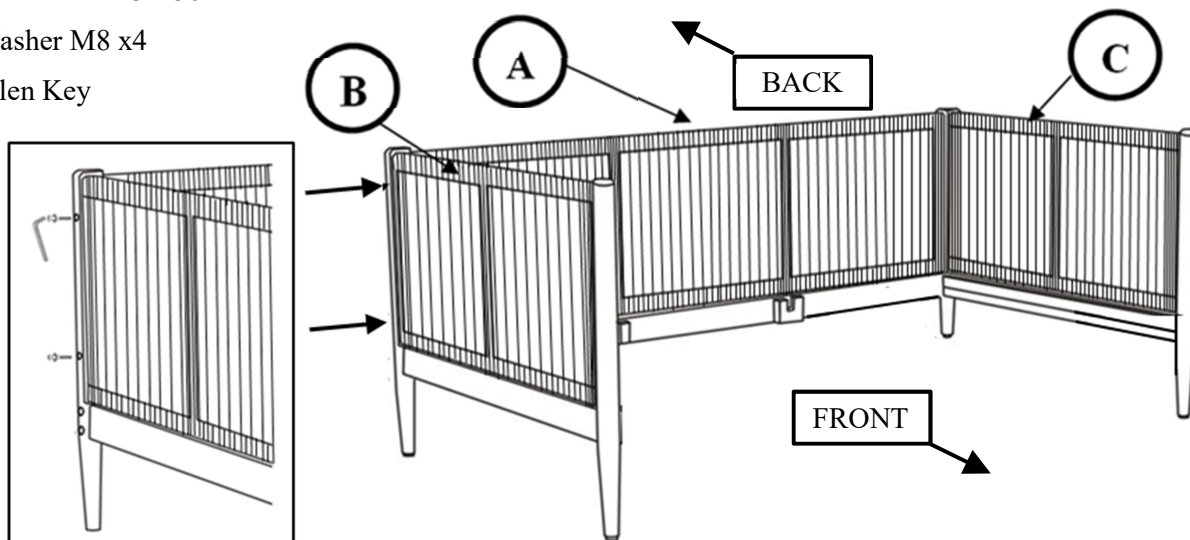

Very carefully, position the Back Panel (A) to the back of the assembly as shown. Ensure it is oriented correctly. Secure by engaging four Allen Bolts (H-1) and Washers (H-2) through each Side Panel (B/C). Tighten about 90% using the provided Allen Key (T-1). The assembly should be sturdy enough to now stand on its own, but do not bump or move the components to avoid breakage.

# Assembly Steps



## Step 3

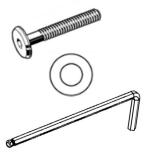

(H-1) Allen Bolt M8 x 50 mm x 4

(H-2) Washer M8 x 4

(T-1) Allen Key

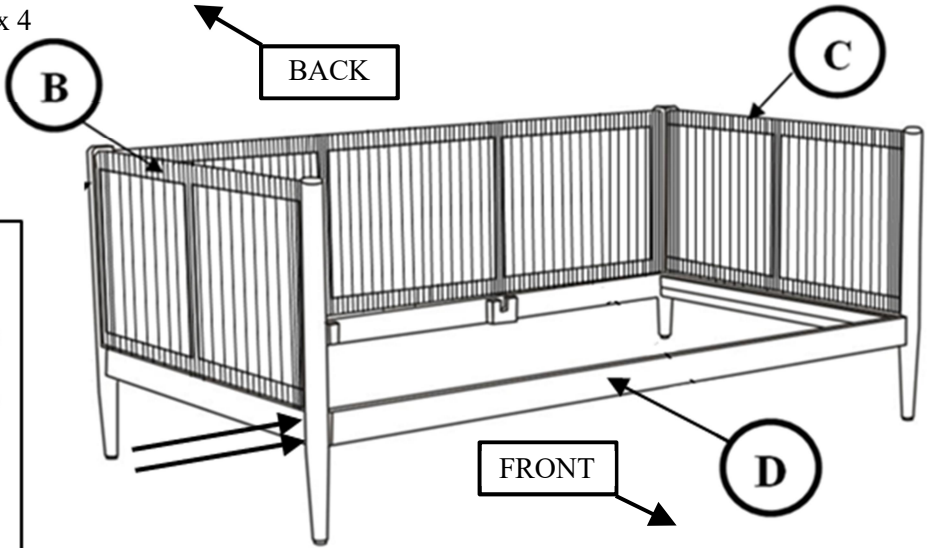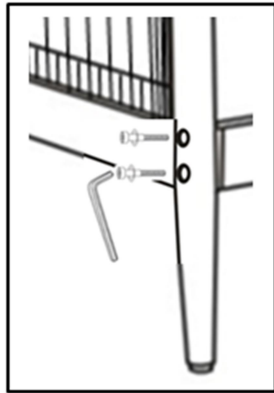

Position the Front Rail (D) to the front of the assembly. Ensure the cleats on the Front Rail (D) face toward those on the previously assembled Back Rail (E). Repeat the same process as step 1 to attach the Front Rail (D) to the Right/Left Panels (B/C).



## Step 4



(H-3) Wood Screw 50 mm x 4

(T-2) Phillips Screwdriver (not provided)

(T-1) Allen Key

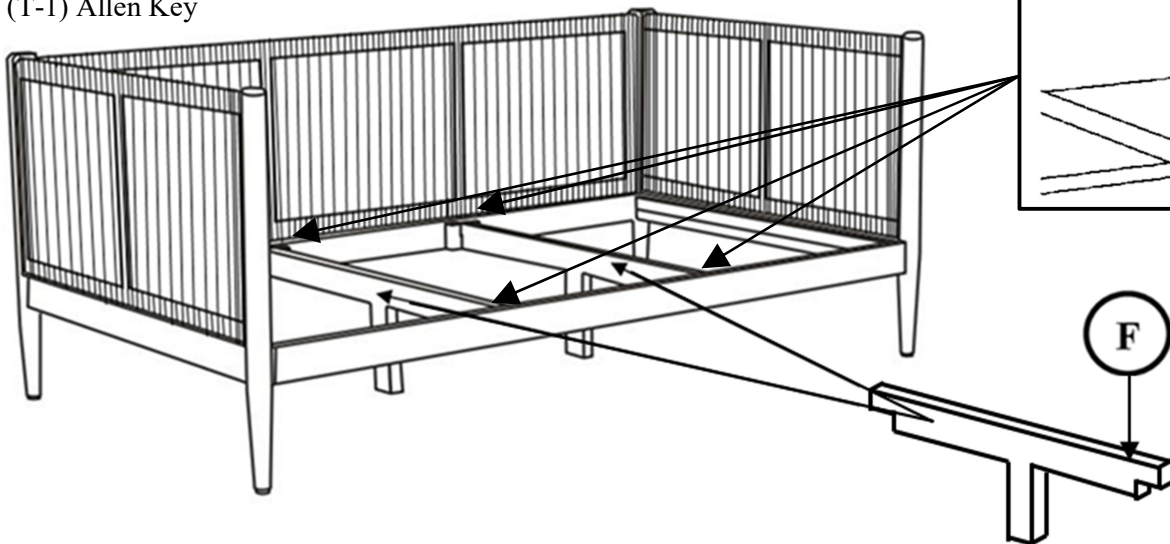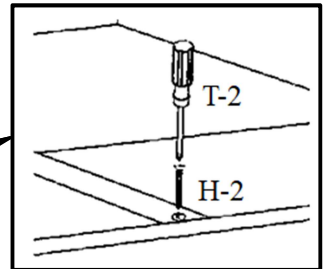


Position each of the two Middle Rails (F) by inserting the ends into the cleats located on the Front/Back Rails (D/E). Secure by engaging four Wood Screws (H-3) into each end and tighten using a Phillips Screwdriver (T-2; not included). Fully tighten ALL hardware from Steps 1-4 at this time using the provided Allen Key (T-1) and a Phillips Screwdriver (T-2; not included). **DO NOT OVERTIGHTEN.**




# Assembly Steps

## Step 5

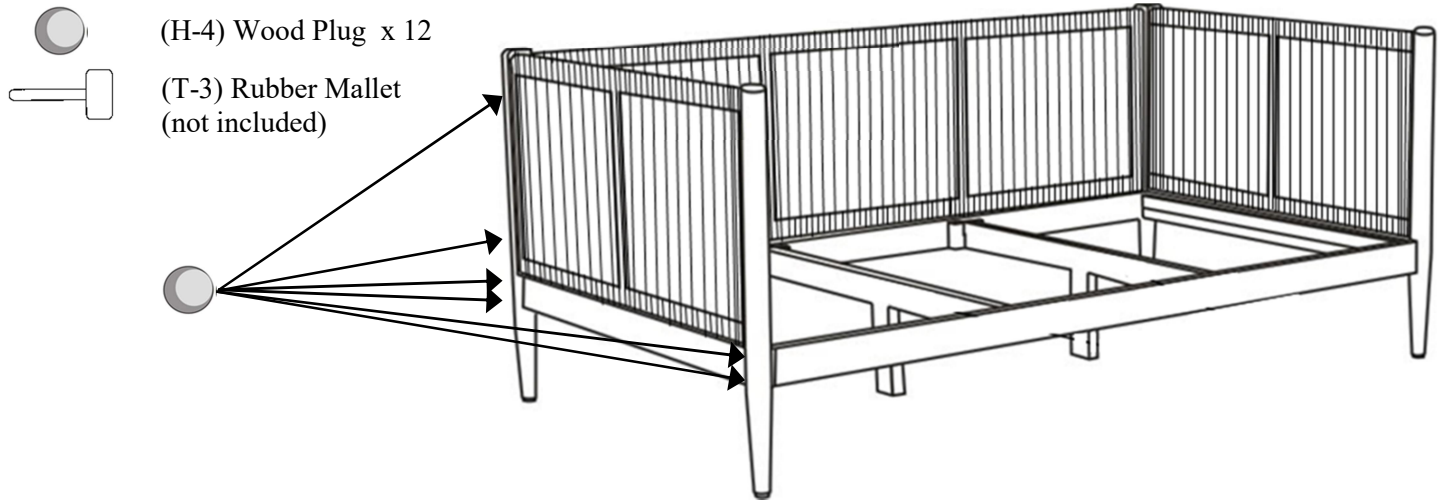

Insert the twelve Wood Plugs (H-4) into each hardware hole. Gently tap the Wood Plugs (H-4) with a Rubber Mallet (T-3; not provided) until they are securely fastened. **DO NOT USE A METAL HAMMER WITHOUT PROTECTION, SUCH AS PACKAGING MATERIAL, BETWEEN THE HAMMER AND THE PLUG.** It is highly recommended to use a Rubber Mallet.

## Step 6

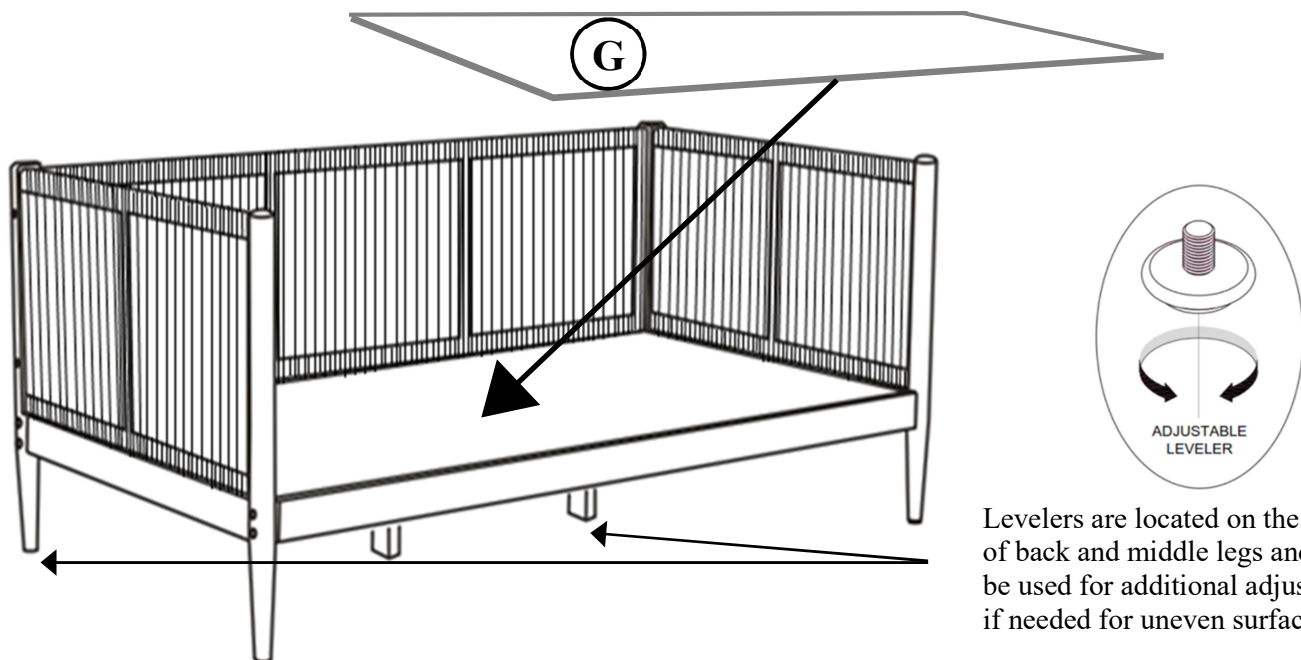

With the help of a second person, gently place the Mattress Panel (G) onto the assembly as shown. Carefully lift and move to your desired location.

Assembly is now complete and the product is ready for use. Adjustable levelers are located on the bottom of back and middle legs and may be adjusted by turning outwards, counter-clockwise to help account for uneven surfaces.

**NOTE :** Hardware may loosen over time. Periodically check that all connections remain tight and adjust as needed.

# Warnings



All products sold at World Market are not for commercial use and are intended for residential use only.



**WARNING:** Small parts are a choking hazard. Adult supervision is required before, during and after assembly.

# Care & Maintenance



**DO NOT** put hot items directly on furniture surface.



**DO NOT** clean furniture with harsh cleansers or polish.



**DO NOT** place furniture in direct sunlight.



**DO NOT** place furniture near heating or cooling vents.



**DO NOT** write on furniture without a padded barrier to protect the surface.



**DO NOT** place furniture outside. For INDOOR USE ONLY.



Dust and pick up spills using a clean, non-colored, lint-free dry cloth.



Treat any spills or stains immediately.

## **WORLD MARKET LIMITED ONE-YEAR WARRANTY – Indoor Furniture**

For your customer satisfaction, this product carries a LIMITED ONE-YEAR WARRANTY from the date of delivery. This limited warranty only applies to World Market brand furniture, and not to other furniture brands sold on World Market's website.

Where applicable, the limited warranty provides coverage for:

1. **Manufacturing, Material and Workmanship Defects:** Includes defects related to core frame/structure substrates (wood and metal); cracking, splitting, or complete breakage of hardwood, plywood or medium density fiberboard (MDF); cracking, splitting or lifting of wood veneer or laminated top surfaces caused by process failure; broken welds or improperly coated metal frame components (powder coating or painted); fabric or leather material defects including tears, misprints, fraying, crease marks, skip stitches or open seams; support webbing material and sinuous spring defects or damage, including method of attachment to frame; and other component failures that are a direct result of manufacturing or workmanship defects.
2. **Cushions & Cushions with Enclosed Steel Pocket Coils:** Failed or ruptured steel pocket coils enclosed inside of seat cushions, or loss of resiliency from a material breakdown of foam or fiber filling, which should not be confused with softening or settling during normal use.
3. **Leather:** Splitting or cracking of leather material. NOTE: The warranty does NOT cover natural hide markings, variations in the leather color or grain due to the authentic natural properties of processed cowhide leather.
4. **Bonded Leather or Bi-cast Leather:** Separation of the polyurethane coating, peeling or cracking of the inner layer or at the bonded seam edges (bi-cast straps).
5. **Furniture Components (Hardware & Mechanisms):** Includes defects to pre-installed components or hardware provided to the customer for assembly such as office chair hydraulic lifts, lift mechanisms, metal bases and casters, swivel plate mechanisms; for drawers, metal glides, handles/knobs; for doors, hinges, magnetic latches; and other components such as bent or stripped threaded leg posts and adjustable levelers. For missing, damaged, corroded, or misplaced hardware components such as bolts or washers, please contact Customer Service at: 877-967-5362.

**This LIMITED ONE-YEAR WARRANTY does NOT cover:**

1. Damage due to mishandling during transportation from store or transportation without original protective packaging.
2. Abuse, negligence (product misuse) or wear and tear that may result in or from:
  - a. **Wood & Veneer:** Mishandling, exposure to moisture, peeling or discoloration caused by exposure to moisture or excessive sunlight, heat; splintered, dented or nicked panels, legs or component edges or paint/finish blemishes; or treatment with corrosive chemicals (dyes, inks, paints or harsh cleaning products).
  - b. **Fabric & Leather (Including Bonded or Bi-Cast Leathers):** cuts, punctures, tears, burns, pet damage, or treatment with corrosive chemicals (dyes, inks, paints or harsh cleaning products), exposure to direct sunlight, fire, high heat, water, or any bright light source (natural or artificial) that may cause splitting, peeling or flaking with time.
  - c. **Foam (Cushions):** Flattening, relaxing or settling/softening of foam components that comes with normal use.
  - d. **Hardware Components:** improper installation or misuse/substitution of hardware components not defined in the Assembly Instructions for the product (if applicable)
3. Damage due to environmental exposure to direct sunlight, fire, high heat, water or extreme humidity, any bright light source (natural or artificial), or any environment that the product is not intended for.
4. This warranty is applicable for indoor furniture products purchased for residential use only.

For additional information on returns, please visit: <https://www.worldmarket.com/customer-service/return-policy.html>

**All products sold at World Market are NOT FOR COMMERCIAL USE and are intended for residential use only. Products purchased for commercial use will VOID all warranty provisions as listed above.**

Any claims under this LIMITED ONE-YEAR WARRANTY are valid and applicable only as to the original purchaser and must be accompanied by proof of purchase. Warranty claims should be submitted to a World Market store or through World Market Customer Service Call Center, Toll Free at 877-967-5362.

For valid warranty claims, World Market will repair or replace the product, or offer a full or partial credit, in the sole discretion of World Market. This LIMITED ONE-YEAR WARRANTY gives you specific legal rights and you may also have other rights which vary from state to state.

(INDOOR FURNITURE 1LW\_v1.7\_041224)