


WALKER EDISON
TM

Ezra Round Dining Table

SKU# WEEZR12474

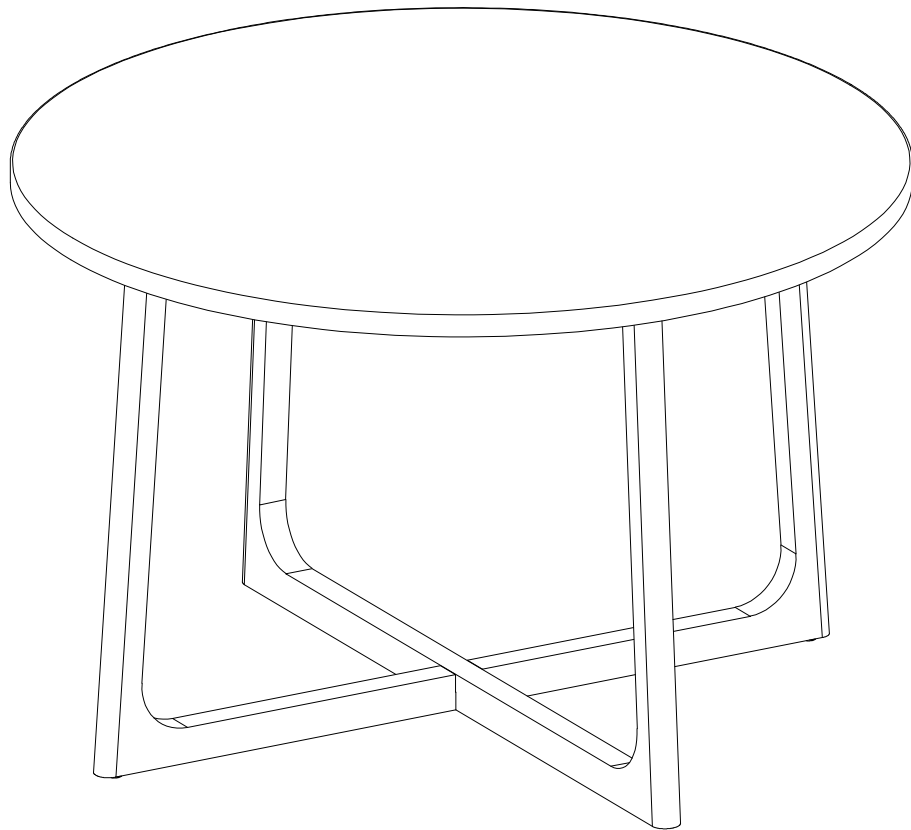

For Residential Use Only


Please visit our website for the most current instructions, assembly tips, report damage, or request parts. www.walker-edison.com



Time to get started


Set up a clean and soft workplace to get started and avoid damage during the assembly. It also helps to double-check you've got all the pieces and parts before diving in to assembly.

Estimated time for assembly

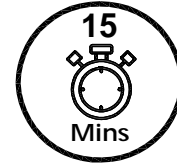

People recommended for assembly


Make it a team effort! Grab a friend for quicker, easier assembly.

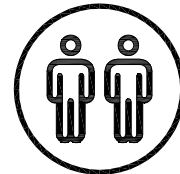

2 People Build

Use power tools with caution

You can cause cracking or damage to the material and easily strip the hardware. If you choose to use a power tool, your product will no longer be covered under Walker Edison' warranty.




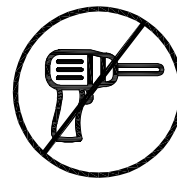


Ezra

Scan to get assembly tips and help!





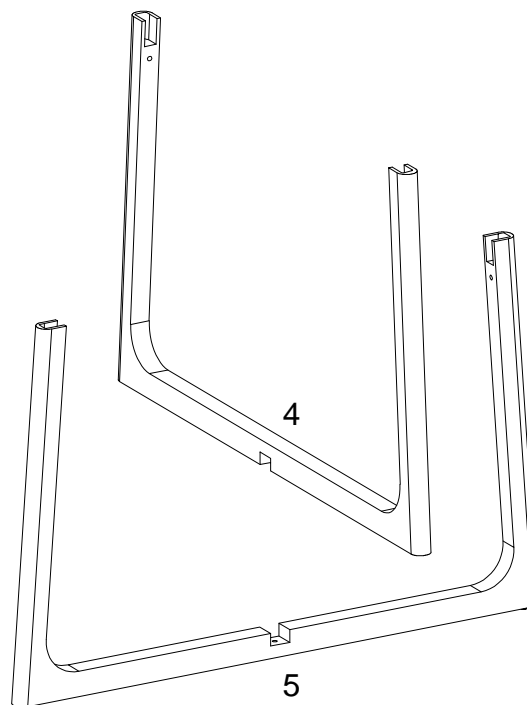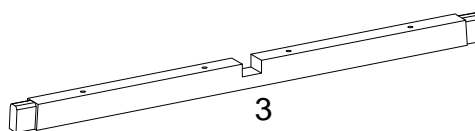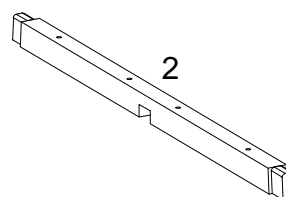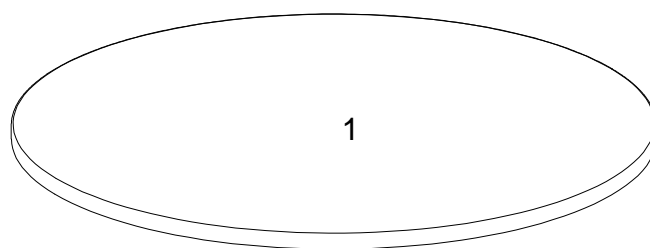


WE Parts List

Part Number	Description	Quantity
1	Tabletop	1
2	Top Rail	1
3	Bottom Rail	1
4	Top Leg Frame	1
5	Bottom Leg Frame	1





 
Hardware List

Part	Size	Name	Quantity
A	 Ø5/16"x45mm	Bolt	1
B	 Ø5/16"x25mm	Bolt	8
C	 Ø5/16"x60mm	Bolt	8
D	 Ø5/16"x22mm	Washer	17
E	 Ø5/16"mm	Lock washer	17
F	 50x50xT3mm	L shape bracket	4
G	 M 5mm	Hex key	1

*The hardware quantities listed above are required for proper assembly.
Extra hardware pieces may be included.*


Step 1

Let's get started! Connect the Bottom Leg Frame (5) to the Top Leg Frame (4) using the Bolt (A), Lock washer (E), and the Washer (D). Tighten with the Hex Key (G)

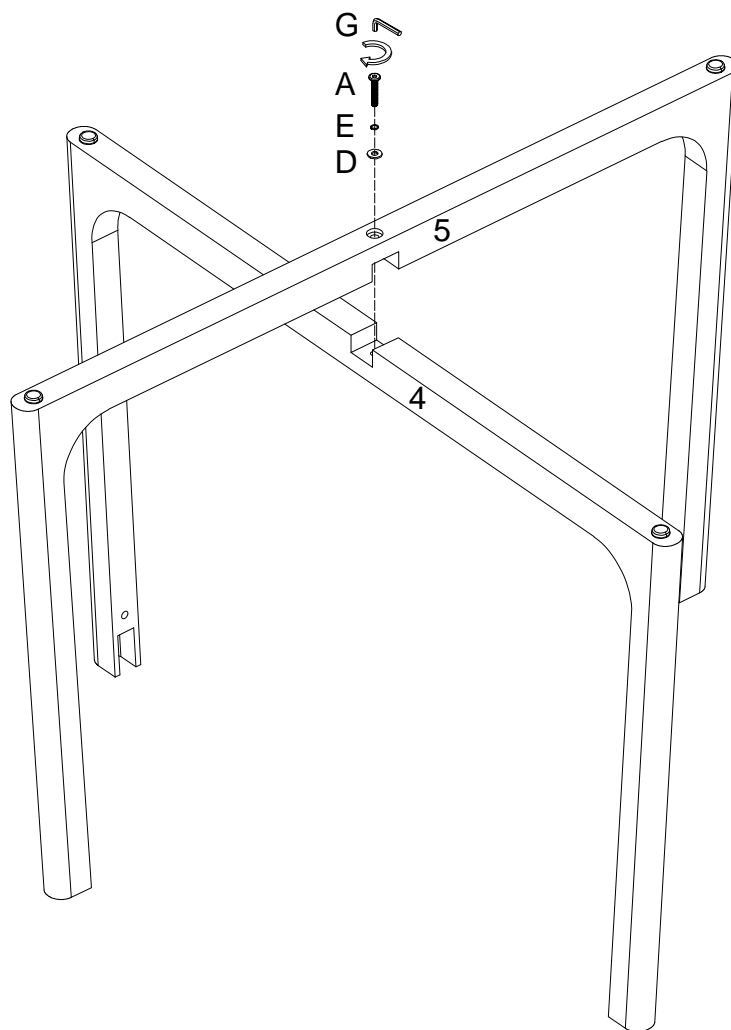


Step 2

Align the cutouts on the Top Rail (2) and the Bottom Rail (3) and connect the two pieces. Slide the connected, Leg Frames (4) and (5) onto the now-connected Rails, ensuring that each corner fits together seamlessly. On all four legs, secure the connection with an L shape bracket (F), Bolt (B), Lock washer (E), and a Washer (D). Tighten with the Hex Key (G).

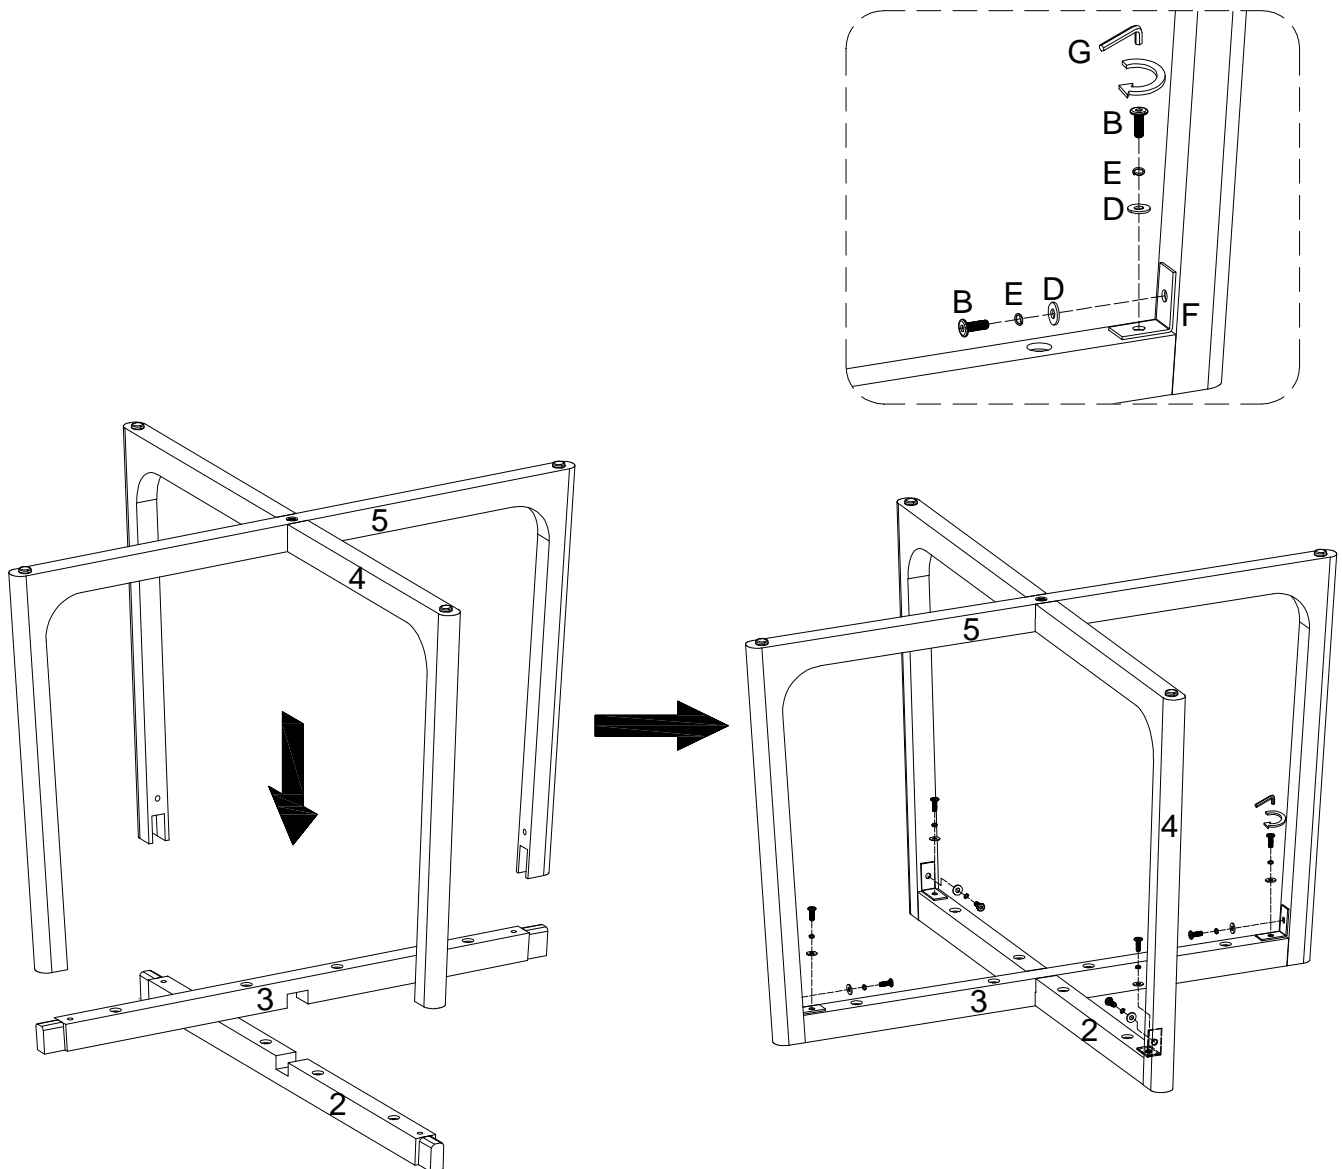


Step 3

You're almost done! Connect the Leg Framework to the Tabletop (1) using a Bolt (C), Lock washer (E), and Washer (D). Tighten with the Hex Key (G).

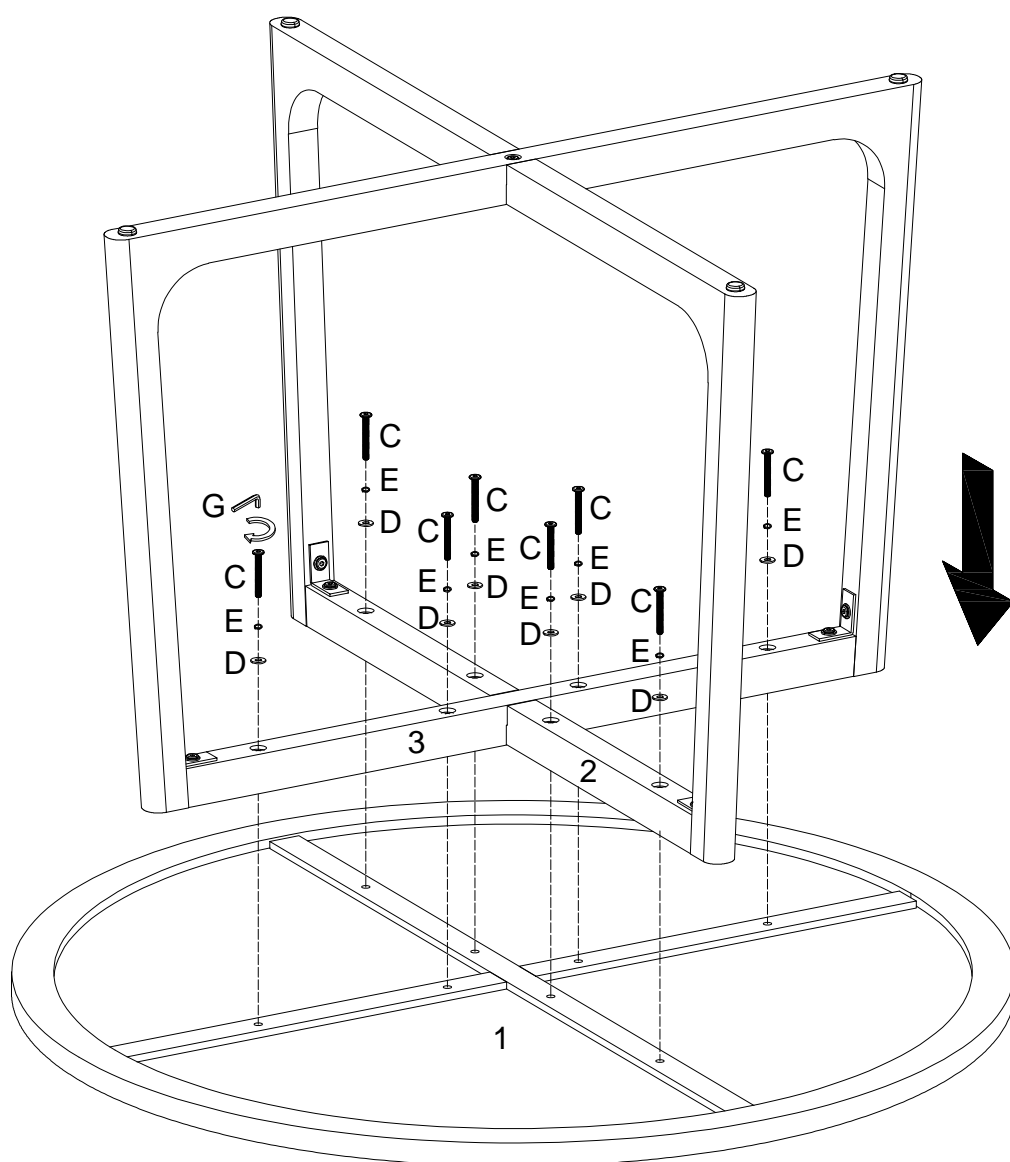


Step 4

Use the adjustable feet to ensure a level surface.

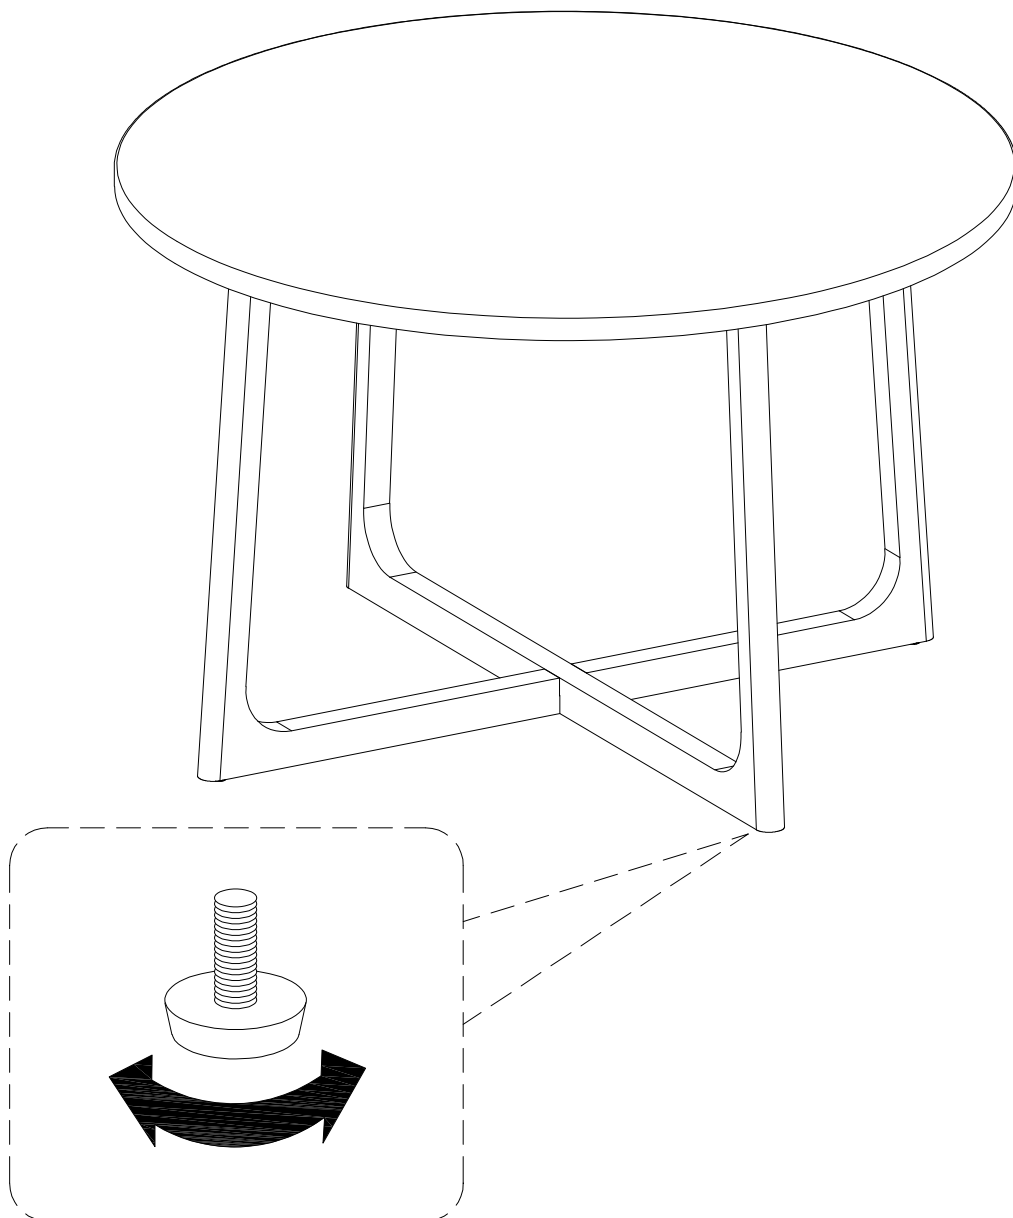

Final Assembly

You did it! Enjoy your new table!

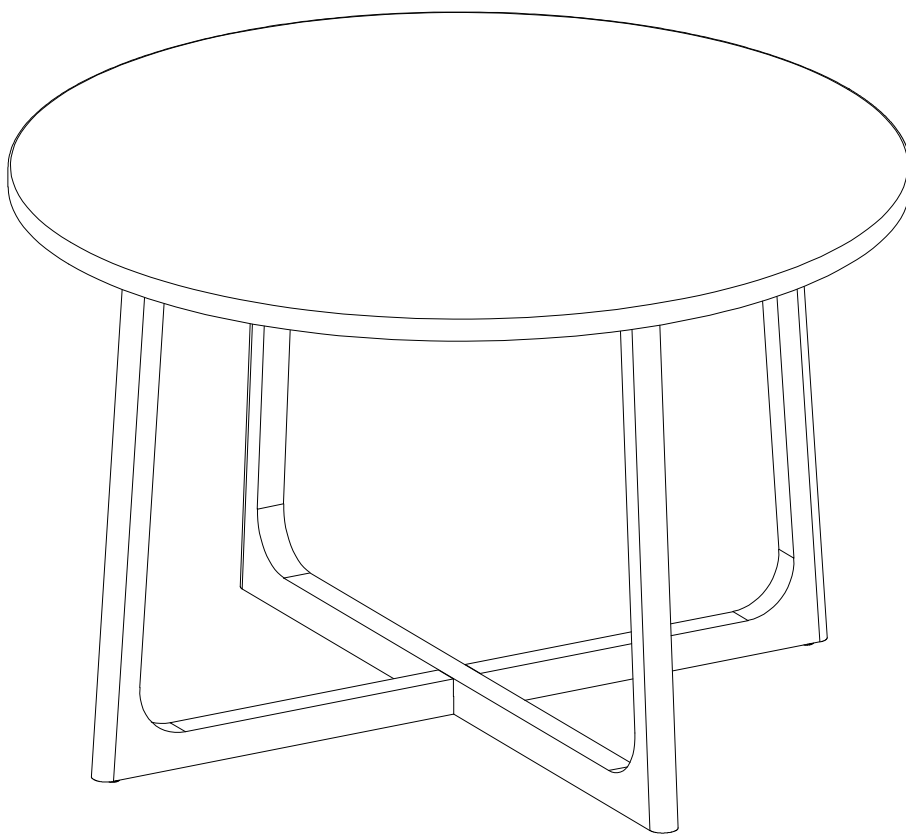

Congratulations on your new piece of furniture!

We would love to hear about it and see it.
Please leave us a review or post a picture with
#mywalkerredisonhome

Assembling furniture can be tricky sometimes.

Our customer service team, located in Utah, is here for product information, help assembling a product, or for any other customer support issue

Call us at **801-433-3008**

Email us at service@walkeredison.com

Visit our Customer Service website at
walkeredison.com/pages/customer-service

We are available to help Monday -Thursday 8am-5pm, Friday
8am-3pm MST

For details on Assembly Videos, Assembly Instructions,
Replacement Parts, and Customer service,
SCAN HERE

