


# WORLD MARKET®

## Assembly Instructions

Chillasan Flamingo Chair & Cushion

SKU- 622668

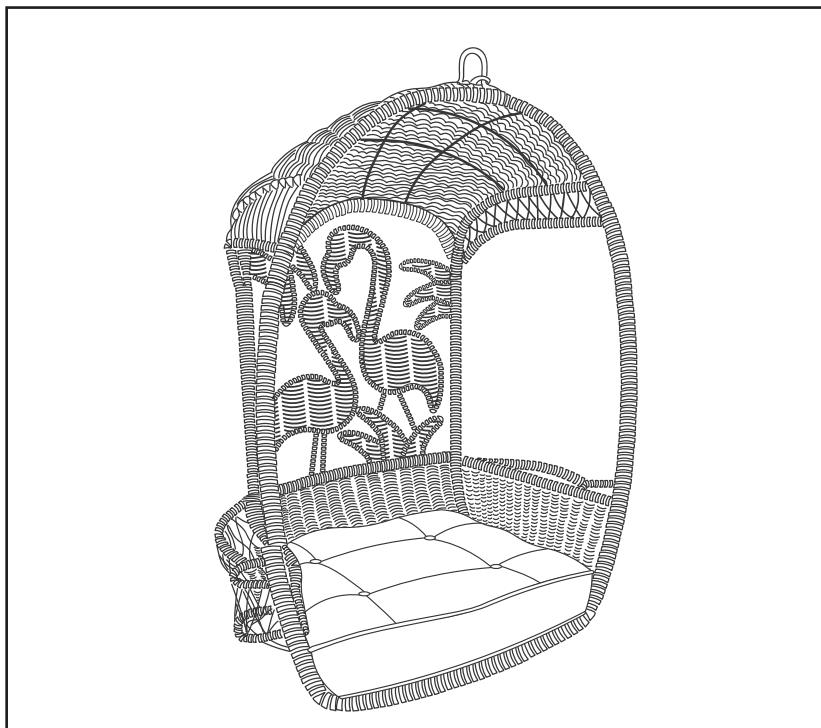

THANK YOU FOR YOUR PURCHASE. IF YOU HAVE ANY QUESTION PERTAINING TO ASSEMBLY OF THIS FURNITURE PIECE, PLEASE CONTACT THE NEAREST WORLD MARKET STORE. IF YOU ARE NOT NEAR A STORE, PLEASE CALL OUR CUSTOMER SERVICE CALL CENTER TOLL FREE AT 877- 967-5362 FOR ASSISTANCE.

ALL PRODUCTS SOLD AT WORLD MARKET ARE NOT FOR COMMERCIAL USE AND ARE INTENDED FOR RESIDENTIAL USE ONLY


# Important Safety Instructions

## **⚠ WARNING - to avoid risk of falling:**



- **WEIGHT LIMIT 250LBS.**
- Chillasan Chair is intended to be used by one person at a time.
- Chair and Chillasan Frame (sold separately) must be used with all provided parts. Ensure all parts are installed according to instructions and inspected for damage before use.
- Chair comes pre-installed with Nylon Strap attached to the chair loop and must be used as part of the assembly.
- Ensure that all bolts and hardware are securely tightened and installed before use.
- Always inspect your chair, hardware, and Chillasan Frame (if applicable) for damage before use.
- Never place infants or pets in the chair.
- Never allow young children to use chair without adult supervision.
- Do not jump, stand, or twist in chair.
- Chair is designed for minimal swing motion. Use care when getting in and out of chair.
- If using Chillasan Frame (sold separately), ensure that chair is installed facing forward.
- If using Chillasan Frame, the chair must be tethered to the frame using the Covered Bungee Cord (included with SKU 606740 Chillasan Frame).

## **General Instructions**

- Chair is intended to be used with SKU 606740 Chillasan Frame (sold separately). Hardware needed to hang the chair on an anchor or mount other than the Chillasan Frame is not provided. If chair is used without the Chillasan Frame, consult a professional for installation and anchor hardware requirements.
- The chair comes with a pre-installed Nylon Strap and must be used for ALL assemblies with or without SKU 606740 Chillasan Frame (sold separately).
- Ensure that all hardware is securely fastened before use. Check and tighten all hardware periodically throughout use of the product. DO NOT use if hardware is missing or damaged.
- Unpack the Chair carefully. DO NOT use blades to open the packaging. Use scissors to cut the string and zip-ties if needed.

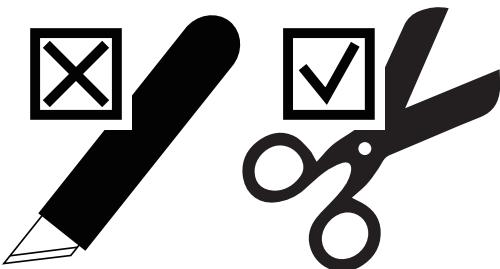

# Component List

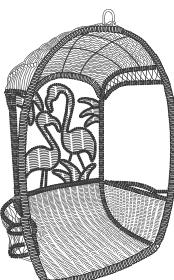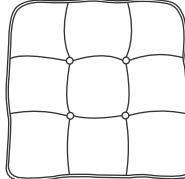
LABEL	DESCRIPTION	QTY
A		Chillasan Chair 1
B		Cushion 1

# Hardware List

BELOW HARDWARE ARE PRE-INSTALLED.

LABEL	DESCRIPTION	QTY
H-1		Nylon Strap 1
H-2		Thumb Screw 1/4 in x 1 in 1
H-3		Locking Washer 2
H-4		Wingnut 1

# Assembly Preparation

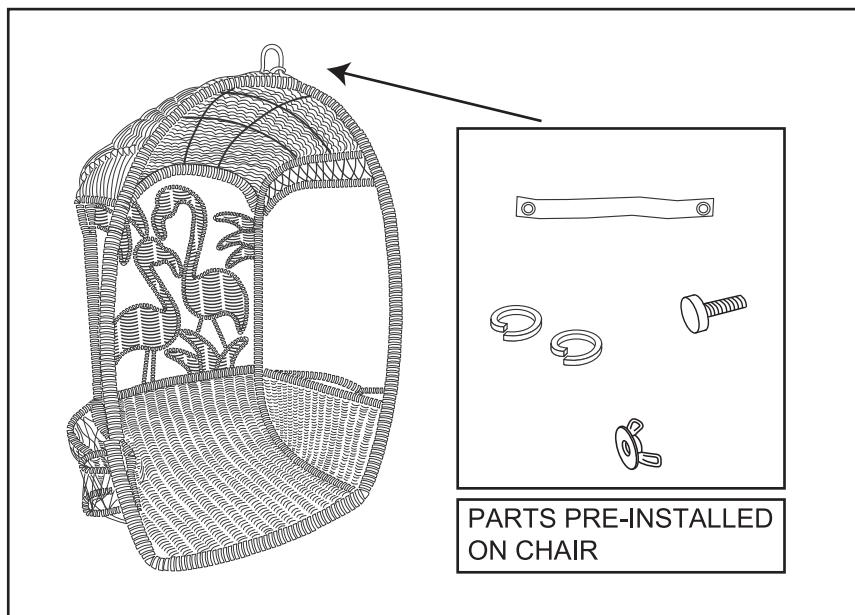

- Unpack all hardware bags and components to ensure you have all parts -
- Read instructions, cover to cover -
- Have 2 adults on hand for assembly -
- Do not assemble on flooring or carpet -
- Assemble on a clean non-marring surface (packing foam) -
- Save all packaging until finished -
- In case of missing parts, please contact your nearest World Market store or call our customer service call center at call 1-877-967-5632.

**⚠** • **WARNING:** Small parts are a chocking hazard. Adult Supervision is required before, during and after assembly.


# Information on Nylon Safety Strap

**IMPORTANT:** If mounting/hanging this chair WITHOUT the 606740 Chillasan Frame (available separately), professional installation is recommended. The nylon strap is REQUIRED to be used with or without the 606740 Chillasan Frame. Additional hardware may be required based on the installation type, consult a professional.


**NOTE:** The Nylon Safety strap assembly comes pre-installed on the Chillasan chair. If the strap becomes loose or re-installation is required, follow the steps below to ensure the nylon safety is properly installed.

## Step 1

 (1) Nylon Strap

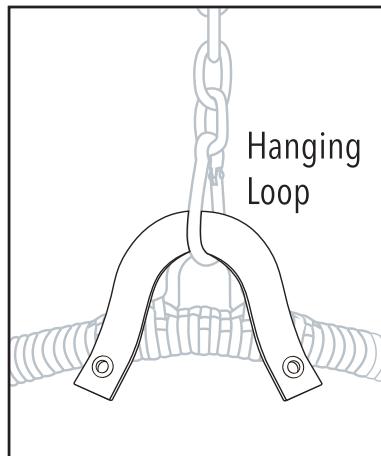

1.1

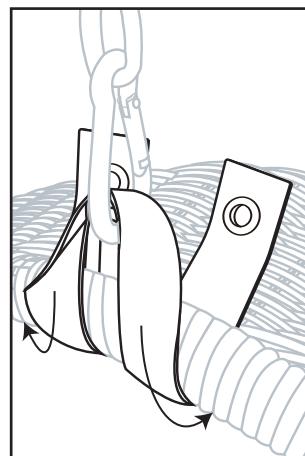

1.2

To install Nylon Strap (H-1) to hanging loop, insert the strap through the carabiner. Ensure the carabiner on the chain is securely tightened before use.

Pull strap ends to the front of main chair frame, then wrap and tuck through the chair weave until they are behind the loop. Ensure the Nylon Strap (H-1) is inserted through the carabiner and wrapped around chair frame.


## Step 2

 (1) Nylon Strap


 (1) Thumb Screw  
1/4in x 1in

 (2) Locking Washer


 (1) Wingnut

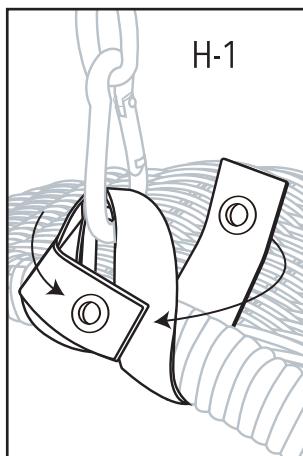

2.1

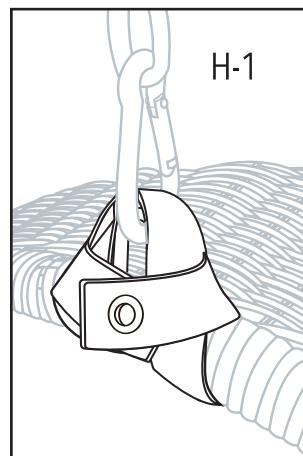

2.2

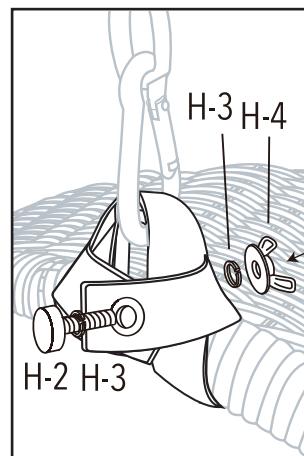

2.3

Pull the strap ends around the hanging loop and align the holes on each strap together. Secure using the provided Thumb Screw (H-2), Washers (H-3) and Wing Nut (H-4), stacking the hardware in the order as shown. Ensure Thumb Screw (H-2) passes through each of the holes in the strap as well as the chair hanging loop.

## Step 3




(1) Nylon Strap



(2) Lockiing Washer




(1) Wingnut

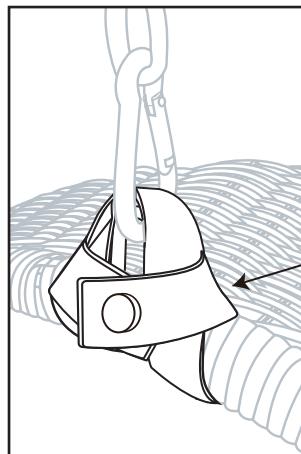


Wing  
Nut

- Fully tighten Wing Nut (H-4) by hand.
- After installation, ensure the strap fits tightly around the chair and chair loop.
- Chair is now ready to hang.
- Inspect the strap regularly to ensure assembly is secure.


## Placing cushion on Chillasan Chair

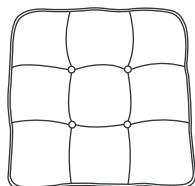

(1) Cusion

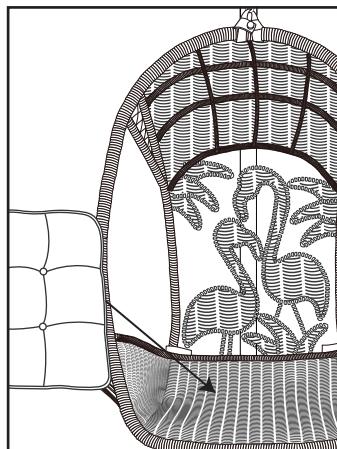


1.1

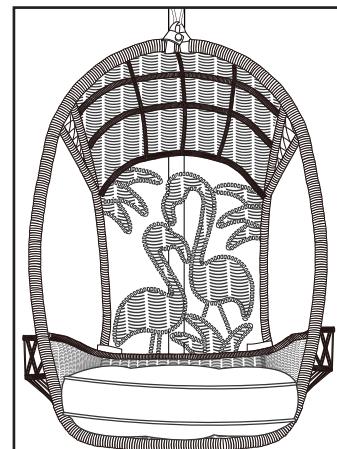


1.2


# Chillasan Chair Assembly On Sku 606740 Chillasan Frame

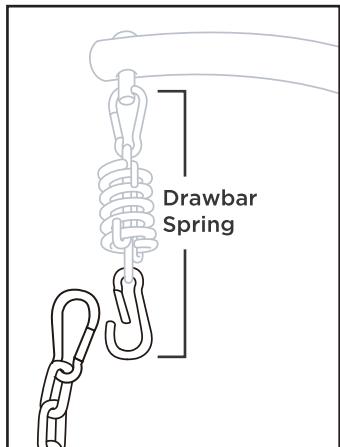


1.1

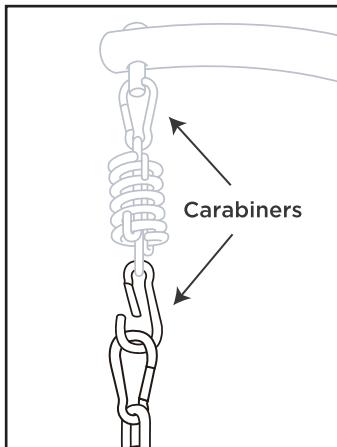


1.2

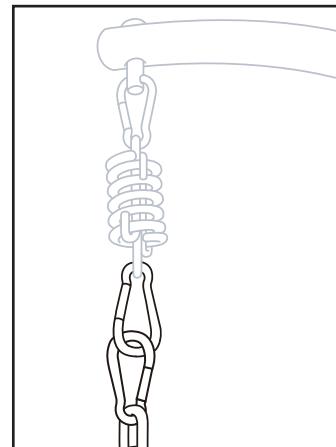

1.3

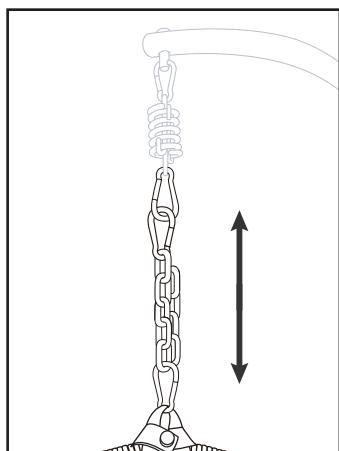


1.4

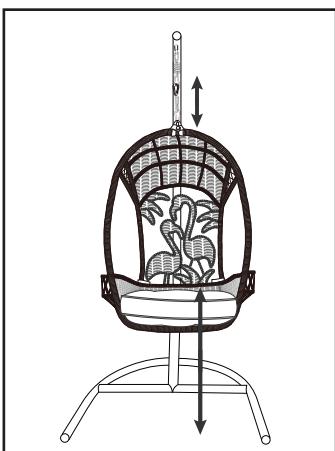


1.5

Hang the carabiner at the top of Chair assembly onto the lower carabiner of the drawbar spring assembly (provided with Chillasan Frame) as shown. Select different chainlinks to adjust the usable seat height of the chair. Ensure that the upper and lower carabiners are securely fastened before use. Height from the ground may vary depending on the model of chair.

# Installing Covered Bungee Cord (Included With 606740 Chillasan Frame)

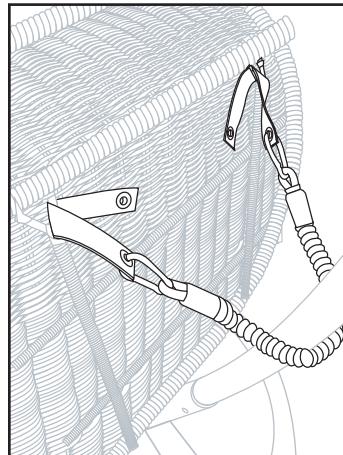

1.1

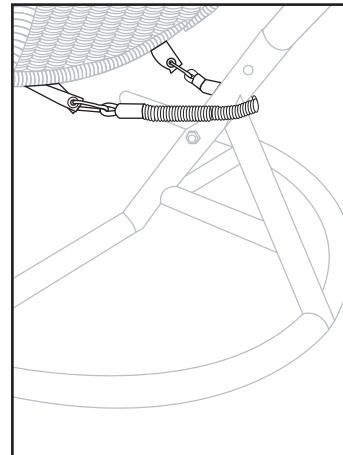

1.2

**NOTE:** Only attach bungee cord (H-6) to metal frame portions of the chair. Do not loop it through any of the all weather wicker/woven portions of the chair.

- Loop one end of the strap through the small triangulated metal support along the back underside area of the seat frame as shown. wrap around the metal frame of the stand, and loop the other end of the strap through the second triangulated metal support. Each carabiner should pass through both holes on its corresponding strap.
- Not applicable if mounting or hanging without frame.
- Check and tighten all bolts and hardware periodically throughout use of the product. Do not use if bolts or hardware is missing or damaged.

# Care & Maintenance



- Do not put hot items directly on furniture surface.



- Do not clean furniture with solvent-type solutions or chlorine based cleansers.



- Do not write on furniture without a padded barrier to protect the surface.



- ALL PRODUCTS SOLD AT WORLD MARKET ARE NOT FOR COMMERCIAL USE AND ARE INTENDED FOR RESIDENTIAL USE ONLY



- Remove from outdoor elements during cold or inclement weather.



- Dust with a damp, soft towel.

# WORLD MARKET® LIMITED ONE-YEAR WARRANTY – Outdoor Furniture

For your customer satisfaction, this product carries a **LIMITED ONE-YEAR WARRANTY** from the date of purchase. This limited warranty only applies to World Market brand furniture, and not to other furniture brands sold on World Market's website.

Where applicable, the limited warranty provides coverage for:

1. **Manufacturing, Material and Workmanship Defects:** Includes defects related to core frame/structure substrates (wood, metal and stone/tile); complete breakage of hardwood; cracking, splitting or lifting of wood veneer or laminated top surfaces caused by process failure; broken welds or improperly coated metal frame components (powder coating or painted); outdoor fabric, nautical rope and woven Textilene® defects including tears, misprints, fraying, crease marks, skip stitches or open seams; synthetic resin wicker breakage or unraveling; and other component failures that are a direct result of manufacturing or workmanship defects.
2. **Cushions:** Loss of resiliency from a material breakdown of foam or fiber filling, which should not be confused with softening or settling during normal use.
3. **Outdoor Furniture Components (Hardware & Mechanisms):** Includes defects to pre-installed components or hardware provided to the customer for assembly such as metal bases, swivel plate mechanisms; for umbrellas, canopy crank mechanism, spring loaded pole pins (for adjusting height); and other components such as bent or stripped threaded leg posts and adjustable levelers. Coverage also includes protection against rust and corrosion on hardware. For missing, damaged, corroded, or misplaced hardware components such as bolts or washers, please contact Customer Service at: 877-967-5362.

This **LIMITED ONE-YEAR WARRANTY** does **NOT** cover:

1. Damage due to mishandling during transportation from store or transportation without original protective packaging.
2. Abuse, negligence (product misuse), improper storage, stacking or wear and tear that may result in or from:
  - a. **Wood & Veneer:** Mishandling, prolonged exposure to moisture, peeling or discoloration caused by exposure to moisture or excessive sunlight, heat; splintered, dented or nicked panels, legs or component edges or paint/finish blemishes; or treatment with corrosive chemicals (dyes, inks, paints or harsh cleaning products). **NOTE: As with any outdoor rated wood, the color may fade if left in direct sunlight or inclement weather. Minor cracking may occur with age. These are naturally occurring features of wood and do not affect product performance.**
  - b. **Fabric (Including Sunbrella® Fabrics), Rope, Textilene®, All-Weather Wicker:** cuts, punctures, tears, burns, pet damage, or treatment with corrosive chemicals (dyes, inks, paints or harsh cleaning products), exposure to fire, high heat, water, or prolonged exposure to direct sunlight that may cause splitting, peeling, fraying or discoloration with time.
  - c. **Foam (Cushions):** Flattening, relaxing or settling/softening of foam components that comes with normal use.
  - d. **Hardware Components:** improper installation or misuse/substitution of hardware components not defined in the Assembly Instructions for the product (if applicable)
3. Damage due to prolonged environmental/inclement weather exposure such as direct sunlight, extreme heat, water or extreme humidity, strong winds, any bright light source (natural or artificial), chlorine or saltwater pools, or any environment that the product is not intended for. We HIGHLY recommend storing furniture, umbrellas and cushions with outdoor rated furniture covers and out of direct exposure during the winter or inclement weather events.
4. This warranty is applicable for outdoor furniture products purchased for residential use only.

For additional information on returns, please visit: <https://www.worldmarket.com/category/customer-service/returns.do>

**All products sold at World Market are NOT FOR COMMERCIAL USE and are intended for residential use only. Products purchased for commercial use will VOID all warranty provisions as listed above.**

Any claims under this **LIMITED ONE-YEAR WARRANTY** are valid and applicable only as to the original purchaser and must be accompanied by proof of purchase. Warranty claims should be submitted to a World Market store or through World Market Customer Service Call Center, Toll Free at 877-967-5362.

For valid warranty claims, World Market will repair or replace the product, or offer a full or partial credit, in the sole discretion of World Market. This **LIMITED ONE-YEAR WARRANTY** gives you specific legal rights and you may also have other rights which vary from state to state.

(OUTDOOR FURNITURE 1LW\_v1.3\_051122)