



Contact 1.888.398.8643 for assistance.  
Do not return to place of purchase.

## Assembly Instructions

Model No. S-1142, S-1146, S-1632

### Hardware/Parts

Part	Description	Qty
1	Screen	1
2	Door Knob	2
3	Front Foot	2
4	Back Foot	2
A	Screw	10
B	Nut	8

### Tools Required for Assembly (Not Included)

Phillips Head Screw Driver and Adjustable Wrench.

### Steps

#### Step 1

Attach door knob to screen using 2 screws (A).

#### Step 2

Attach back feet to screen using 4 screws (A) and 4 nuts (B).

#### Step 3

Attach front feet to screen using 4 screws (A) and 4 nuts (B).

**CAUTION:** Keep this product clean by using a damp cloth. DO NOT use abrasive cleaners, as it will cause parts to tarnish.

