 


# WORLD MARKET®

## Assembly Instructions

Amira Arch-Top 4-Door Cabinet

 
 
 
 
 
 
 
 
 
SKU 618189

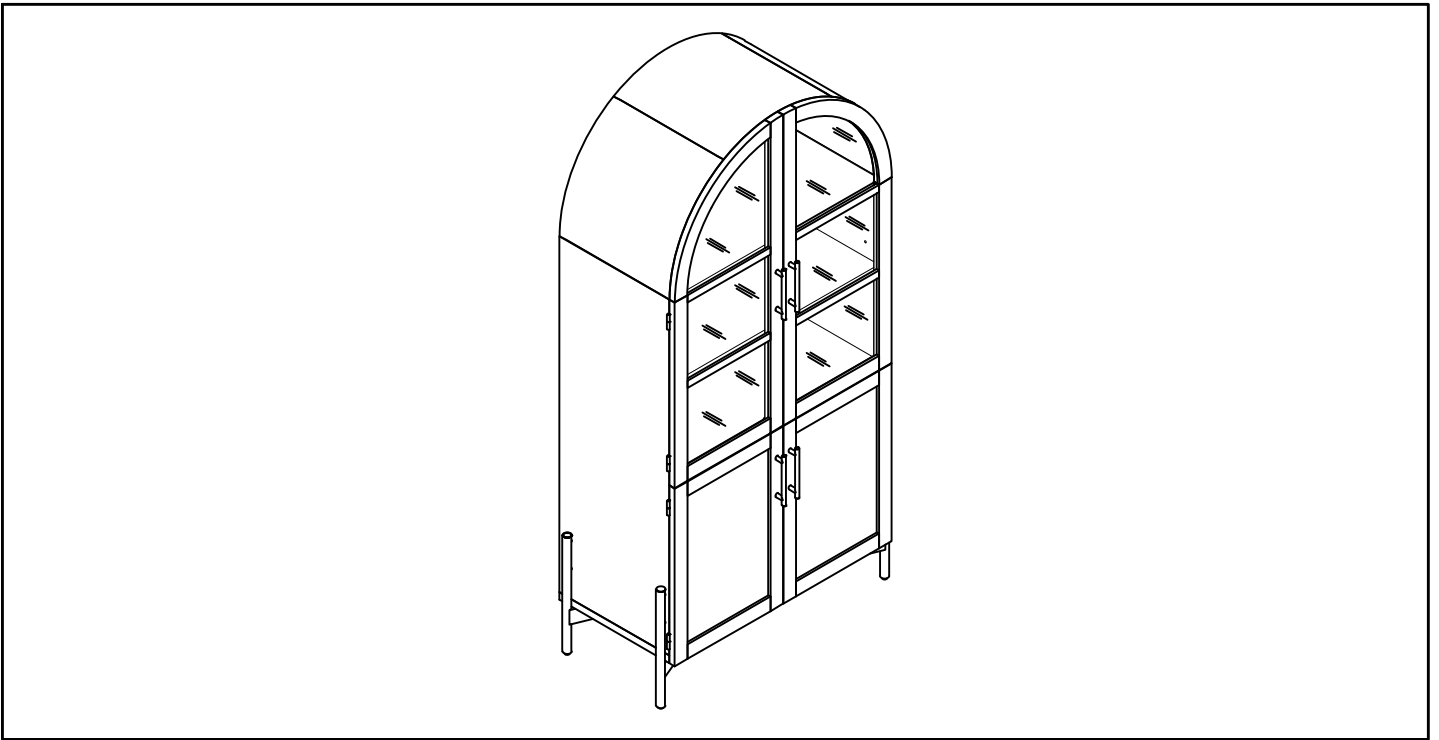


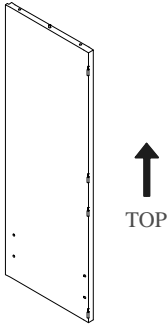 
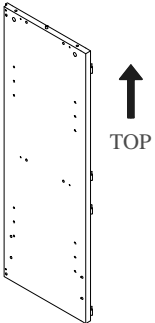 
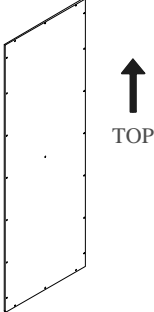 
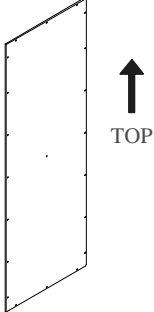 
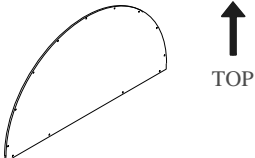 
Thank you for your purchase. If you have any questions pertaining to the assembly of this furniture piece, please contact the nearest World Market store. If you are not near a store, please call our customer service call center toll free at 877-967-5362 for assistance.

ALL PRODUCTS SOLD AT WORLD MARKET ARE NOT  
FOR COMMERCIAL USE AND ARE INTENDED FOR  
RESIDENTIAL USE ONLY








# Component List

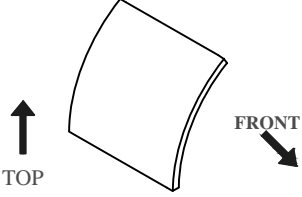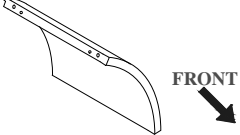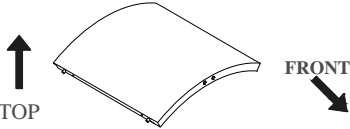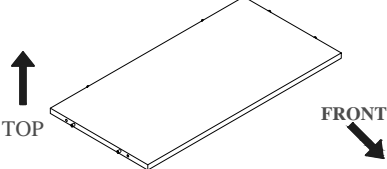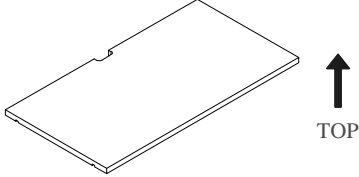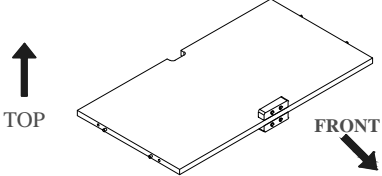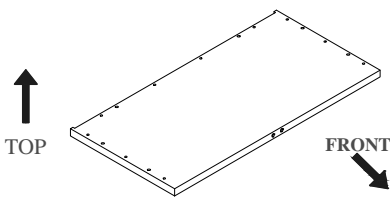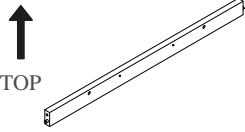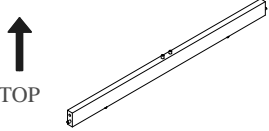       LABEL	PICTURE	DESCRIPTION	Q.TY
A	 <p>Diagram of the Left Top Frame component. It is a curved, rectangular frame piece. An upward arrow labeled 'TOP' is positioned to the left of the component, and a downward arrow labeled 'FRONT' is positioned to the right of the component.</p>	Left Top Frame	1
B	 <p>Diagram of the Right Top Frame component. It is a curved, rectangular frame piece. An upward arrow labeled 'TOP' is positioned to the left of the component, and a downward arrow labeled 'FRONT' is positioned to the right of the component.</p>	Right Top Frame	1
C	 <p>Diagram of the Middle Top Frame component. It is a curved, rectangular frame piece. An upward arrow labeled 'TOP' is positioned to the left of the component, and a downward arrow labeled 'FRONT' is positioned to the right of the component.</p>	Middle Top Frame	1
D	 <p>Diagram of the Fixed Upper Shelf component. It is a flat, rectangular shelf. An upward arrow labeled 'TOP' is positioned to the left of the component, and a downward arrow labeled 'FRONT' is positioned to the right of the component.</p>	Fixed Upper Shelf	1
E	 <p>Diagram of the Adjustable Shelf component. It is a flat, rectangular shelf with a notch on the left side. An upward arrow labeled 'TOP' is positioned to the right of the component.</p>	Adjustable Shelf	2
F	 <p>Diagram of the Fixed Lower Shelf component. It is a flat, rectangular shelf with a notch on the left side and a small protrusion on the right side. An upward arrow labeled 'TOP' is positioned to the left of the component, and a downward arrow labeled 'FRONT' is positioned to the right of the component.</p>	Fixed Lower Shelf	1
G	 <p>Diagram of the Bottom Panel component. It is a flat, rectangular panel with a grid of small holes. An upward arrow labeled 'TOP' is positioned to the left of the component, and a downward arrow labeled 'FRONT' is positioned to the right of the component.</p>	Bottom Panel	1
H	 <p>Diagram of the Upper Horizontal Back Support component. It is a long, thin, rectangular support bar with a notch on the top edge. An upward arrow labeled 'TOP' is positioned to the left of the component.</p>	Upper Horizontal Back Support	1
J	 <p>Diagram of the Lower Horizontal Back Support component. It is a long, thin, rectangular support bar with a notch on the top edge. An upward arrow labeled 'TOP' is positioned to the left of the component.</p>	Lower Horizontal Back Support	1

 
 
 
 


 


 

 
# Component List

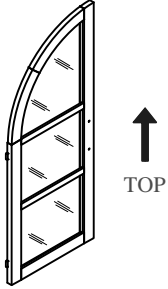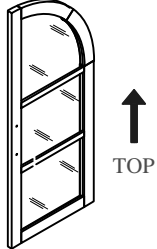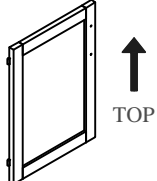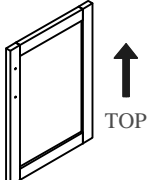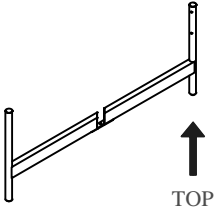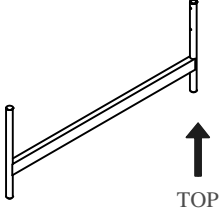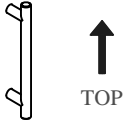LABEL	PICTURE	DESCRIPTION	Q.TY
K		Vertical Back Support	1
L-1		Left Side Frame	1
L-2		Right Side Frame	1
M-1		Lower Left Back Panel	1
M-2		Lower Right Back Panel	1
N		Upper Back Panel	1


 

# Component List

LABEL	PICTURE	DESCRIPTION	Q.TY
P-1		Upper Left Door (Tempered Glass)	1
P-2		Upper Right Door (Tempered Glass)	1
Q-1		Lower Left Door	1
Q-2		Lower Right Door	1
R		Base Frame 1	1
S		Base Frame 2	1
T		Handle	4

# Hardware List

 
 
LABEL	PICTURE	DESCRIPTION	Q.TY
H-1		Cam lock Ø15 mm	22
H-2		Cam Screw	22
H-3		Connecting Screw M7 x 50 mm	10
H-4		Shelf Pin Ø6	10
H-5		Pan head Screw M3.5 x 15 mm	56
H-6		Short Allen Bolt M6 x 25 mm	1
H-7		Long Allen Bolt M6 x 50 mm	8
H-8		Lock Washer Ø6 x Ø10.5 x T2 mm	9
H-9		Flat Washer Ø6 x Ø16 x T2 mm	9
H-10		Handle Bolt M4 x 30 mm	8
H-11		Flat Washer Ø5 x Ø10 x T1 mm	8
H-12		Anti Tip-kit	1

# Tool List

LABEL	PICTURE	DESCRIPTION	QTY
T-1		Allen Key 4 x 110 x 30 mm	1
T-2		Phillips Screwdriver (Not Included)	1
T-3		Triangle	1

# Assembly Preparation

## Before Beginning:

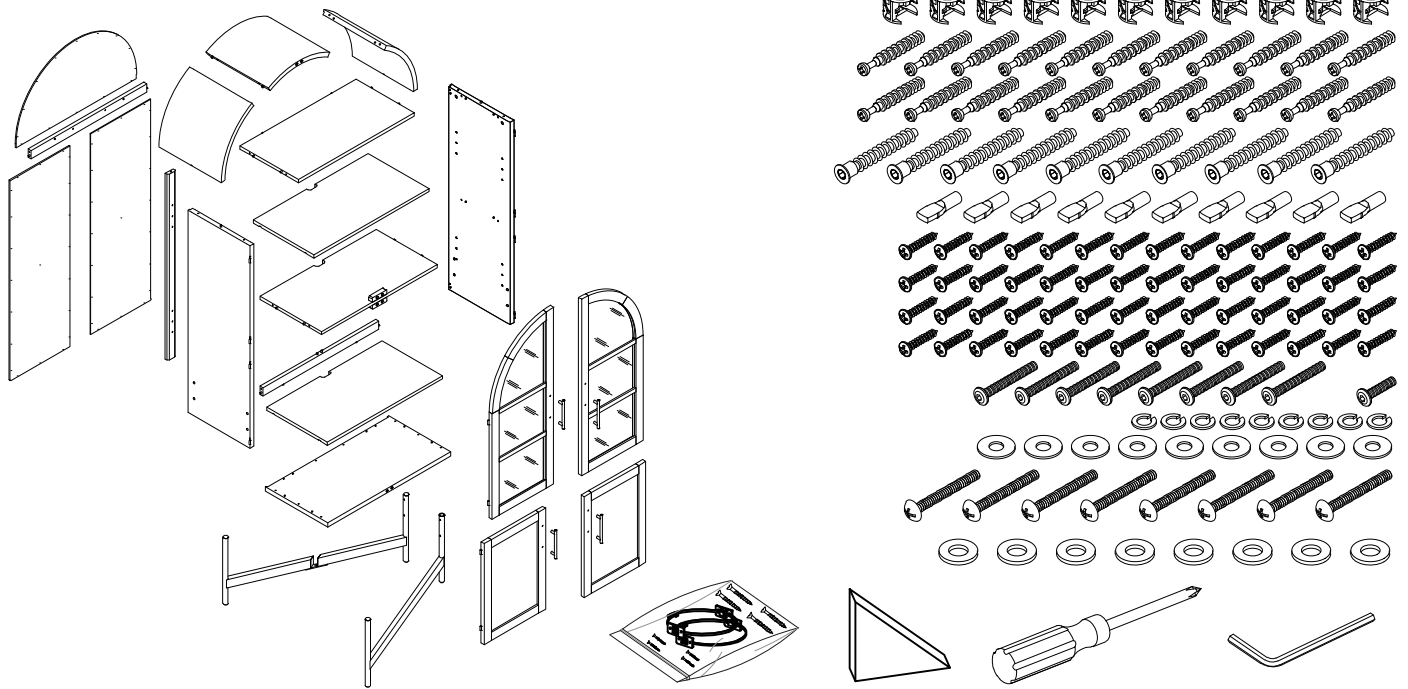

Unpack all hardware bags and components to ensure you have all parts. Take note of bolt hardware size differences and components that may have directional labels (Example: TOP or FRONT).




Read the assembly instructions, cover-to-cover. Save any **Care and Maintenance** instructions pages for after the assembly has been completed.




It is always recommended to have 2 adults on hand for assembly.



Do not assemble on hard, abrasive flooring or carpeted surfaces that can damage or get caught in the components during assembly.

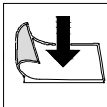

Assemble on a clean non-marring surface (such as the product's packing foam).

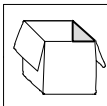

Do not discard any packaging until the product has been fully assembled.




In case of missing parts, please contact your nearest World Market store or call our customer service call center at call 1-877-967-5362.



**WARNING:** Small parts are a choking hazard. Adult supervision is required before, during, and after assembly.

# Assembly Steps

## Step 1

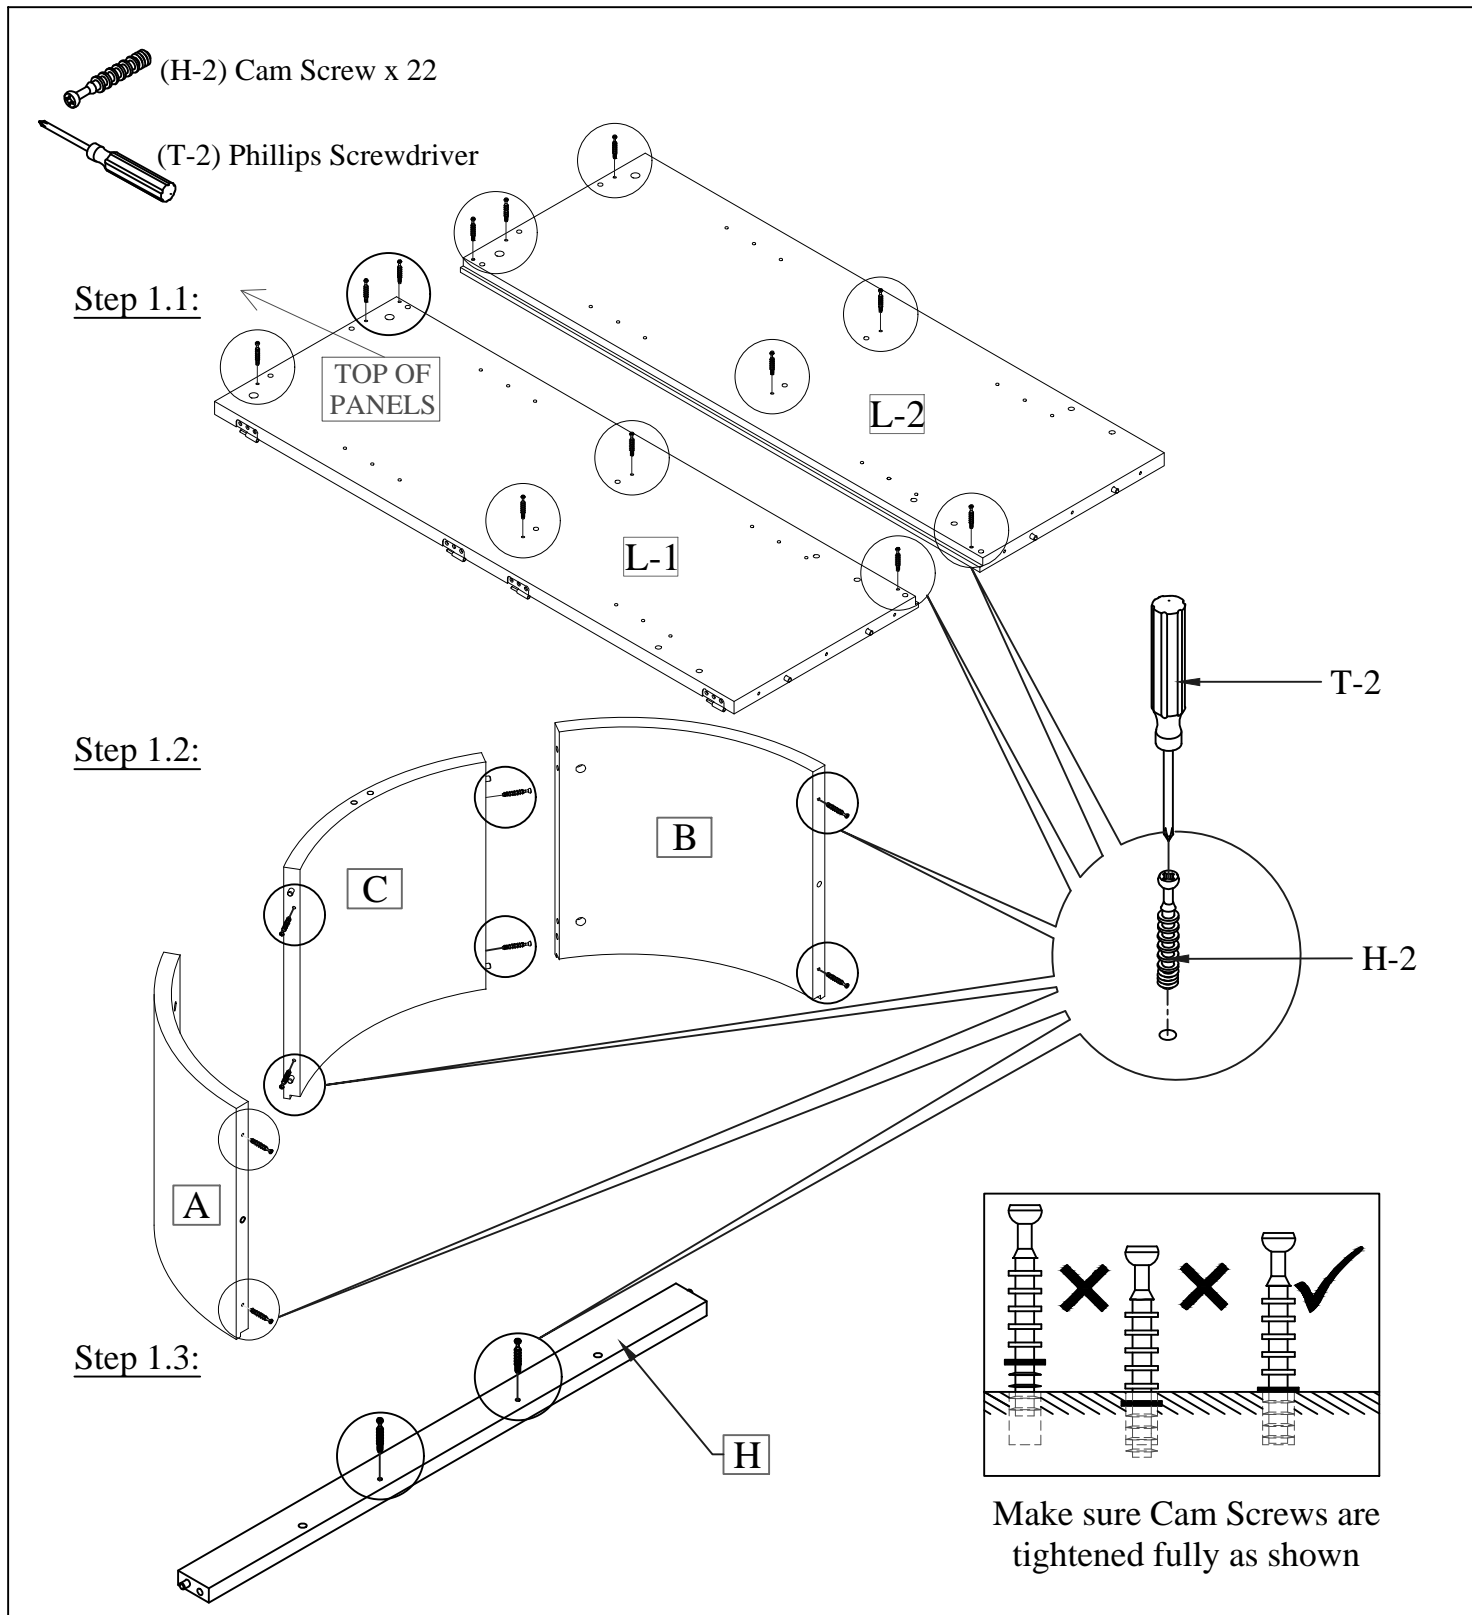


**Step 1.1:** Install Cam Screws (H-2) into the pre-drilled holes on Left Side Frame (L-1) and Right Side Frame (L-2) as shown. Fully tighten using a Phillips screwdriver (T-2, not included) per illustration above.

**Step 1.2:** Place Left Top Frame (A), Right Top Frame (B) and Middle Top Frame (C) on their front edges onto a padded, non-marring surface. Install Cam Screws (H-2) into the pre-drilled holes on Top Frame (A/B/C) as shown. Fully tighten using a Phillips screwdriver (T-2, not included) per illustration above.

**Step 1.3:** Install Cam Screws (H-2) into the pre-drilled holes on Upper Horizontal Back Support (H) as shown. Fully tighten using a Phillips screwdriver (T-2, not included) per illustration above.


## Step 2

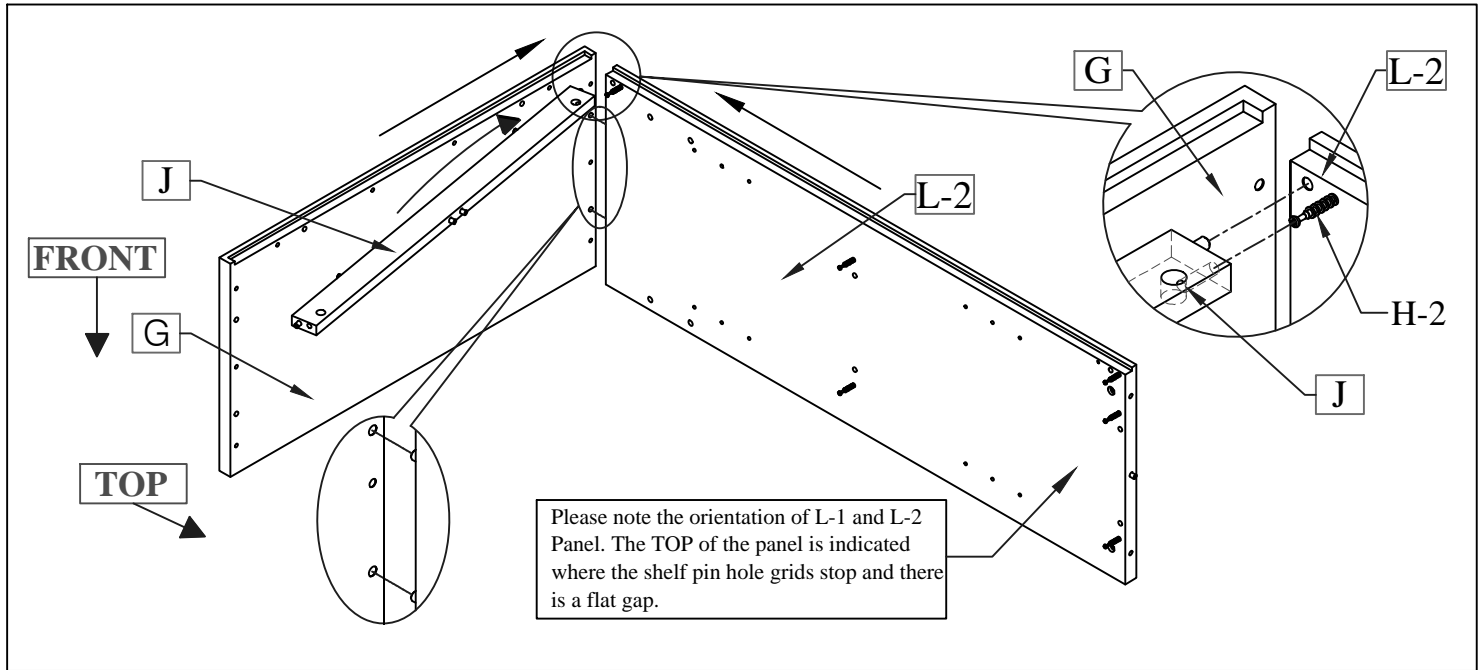

Using a second person to assist you, attach Lower Horizontal Back Support (J) to Right Side Frame (L-2) by inserting previously installed Cam Screws (H-2) and dowels into receiving holes. Next, temporarily secure assembly to Bottom Panel (G) by inserting pre-installed dowels into receiving holes on Bottom Panel (G).

NOTE: Do not yet secure assembly with Connecting Screws (H-3) or Cam Locks (H-1).

## Step 3.1

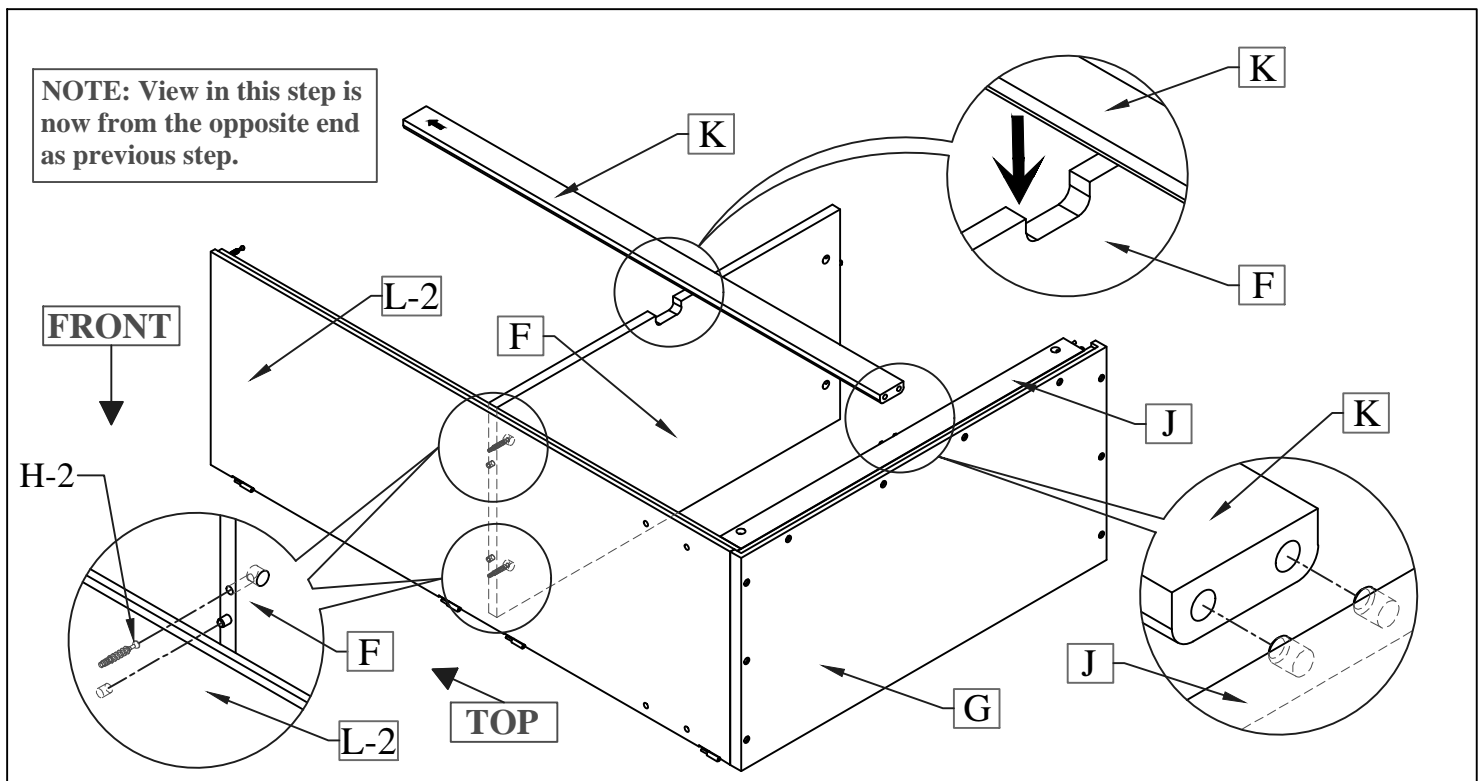


Attach the Fixed Lower Shelf (F) to the Right Side Frame (L-2) by inserting pre-installed Cam Screws and dowels as shown. Insert the BOTTOM end of Vertical Back Support (K) into the corresponding holes on Lower Horizontal Back Support (J). Take note of the directional arrow on Vertical Back Support (K). Attach the Vertical Back Support (K) in the rear slot of the Fixed Lower Shelf (F).

Note: A second person should hold the Right Side Frame/Bottom Panel assembly while performing this assembly step.




## Step 3.2

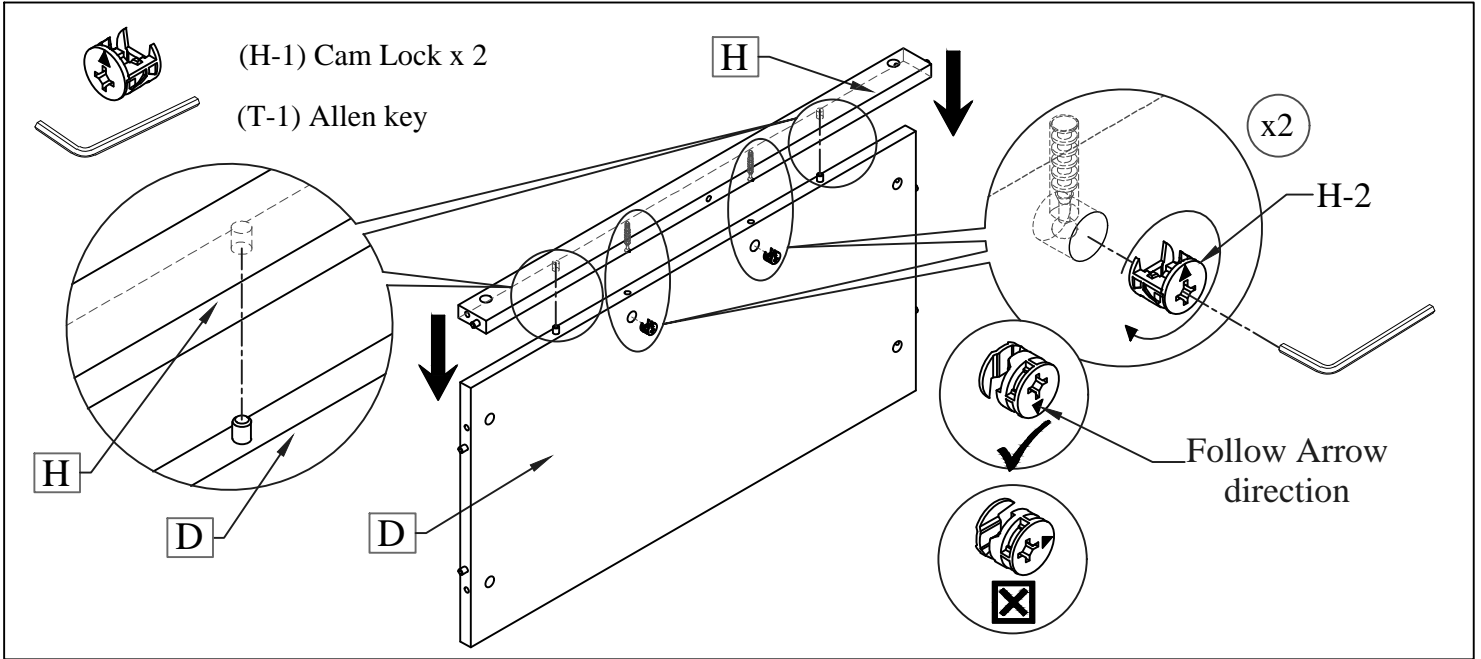

Attach Upper Horizontal Back Support (H) to the Fixed Upper Shelf (D) by inserting pre-installed dowels as shown. There are 2 Cam Locks (H-1) to install into the corresponding holes along Fixed Upper Shelf (D) as illustrated. Make sure arrows on Cam Locks point to the screw upon insertion. Secure all Cam Locks (H-1) using Allen Key (T-1), turning them clockwise until they are snug. **DO NOT OVERTIGHTEN** the Cam Locks.

## Step 3.3

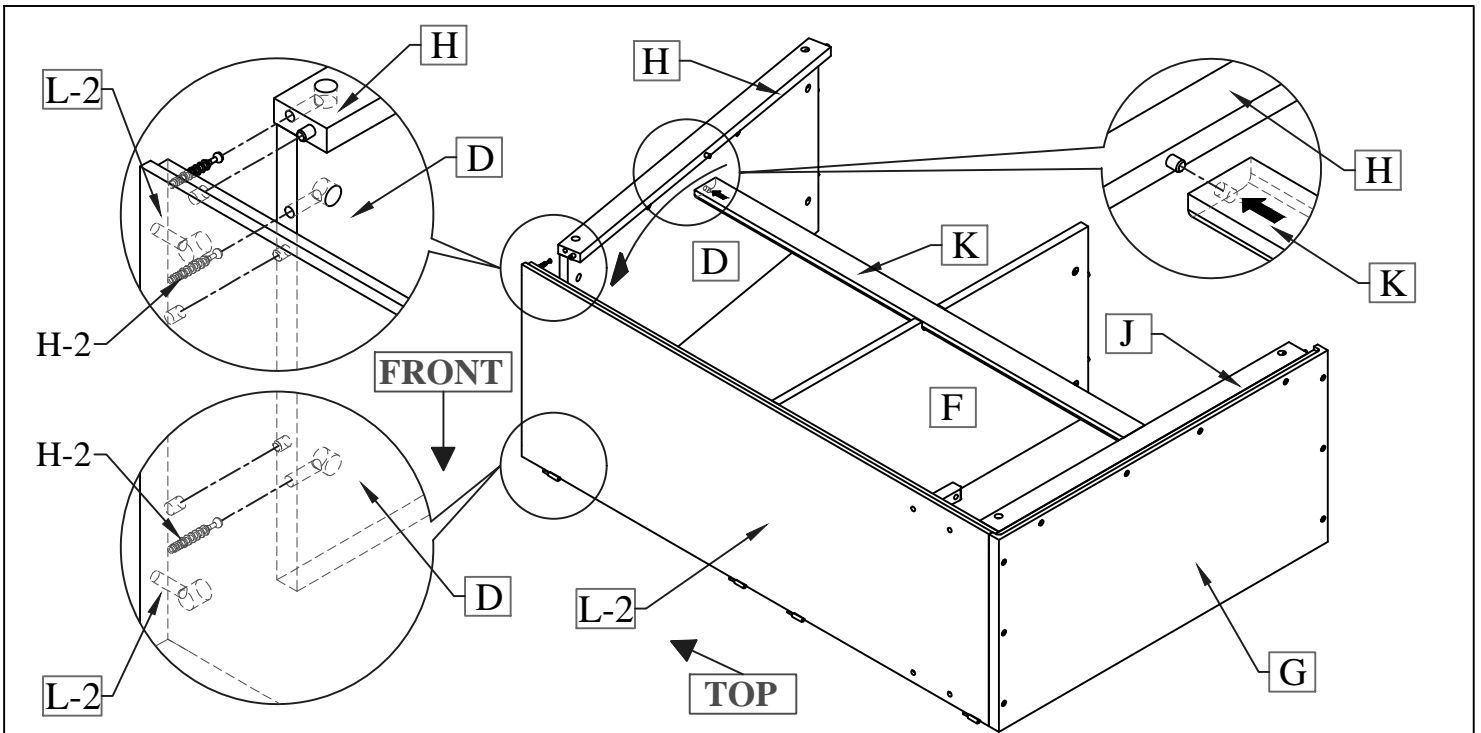


Attach the assembly from step 3.2 to the Right Side Frame (L-2) by inserting pre-installed Cam Screws and dowels as shown. Attach Upper Horizontal Back Support (H) to the TOP end of the Vertical Back Support (K) and to the Right Side Frame (L-2) by inserting pre-installed Cam Screws and dowels as shown.

\* Note:


- A second person should hold the Right Side Frame/Bottom Panel assembly while performing this assembly step.
- The orientation of the Fixed Upper Shelf (D). Cam lock holes should face the Fixed Lower Shelf (F).
- Slightly separate Upper Horizontal Back Support (H) from the Fixed Upper Shelf (D) (if needed) to get the cam screws and dowels to insert.

## Step 3.4

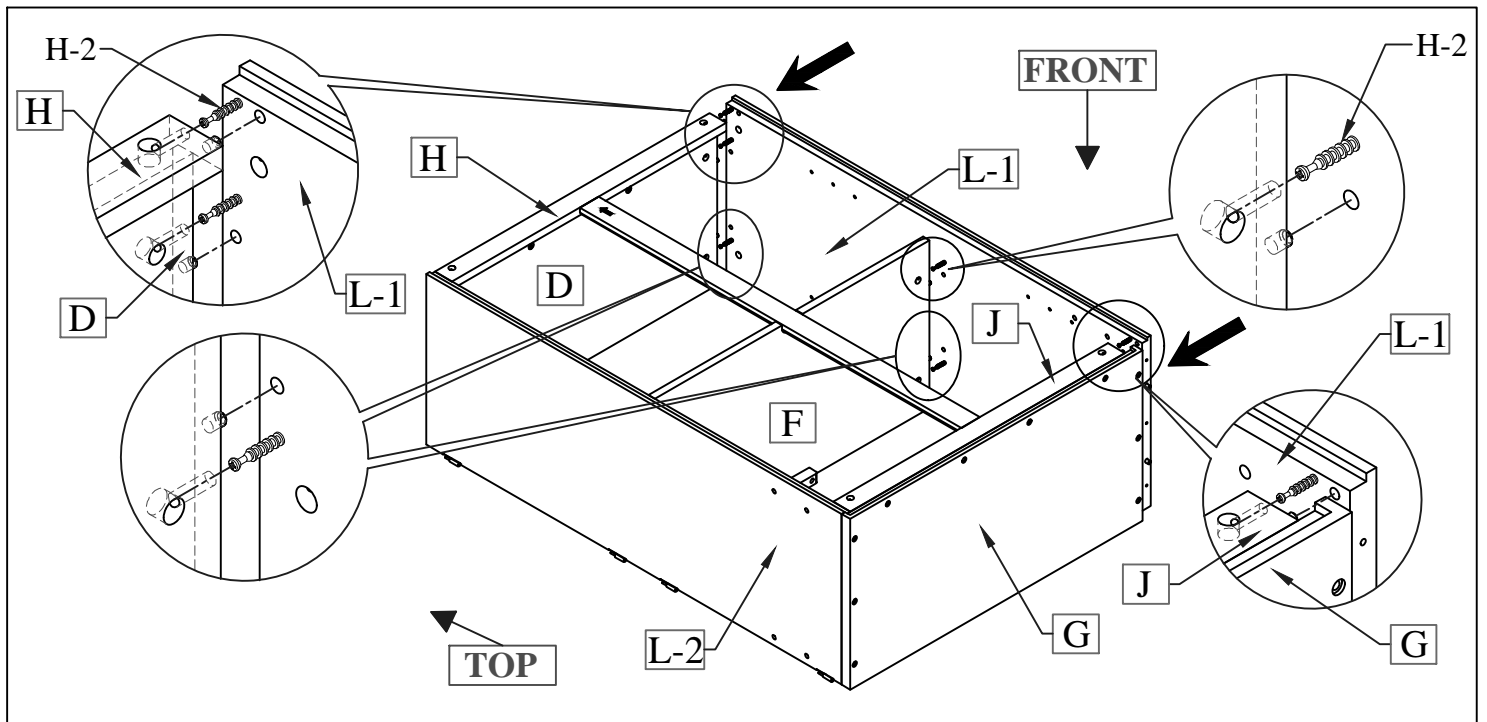


Using a second person to carefully hold the assembly, attach Fixed Upper/ Lower Shelf (D/F), Upper/ Lower Horizontal Back Support (H/J) and Bottom Panel (G) to Left Side Frame (L-1) by inserting pre-installed Cam Screws (H-2) and dowels into corresponding holes. After this step, entire assembly should be able to stand on its own.

# Step 4.1

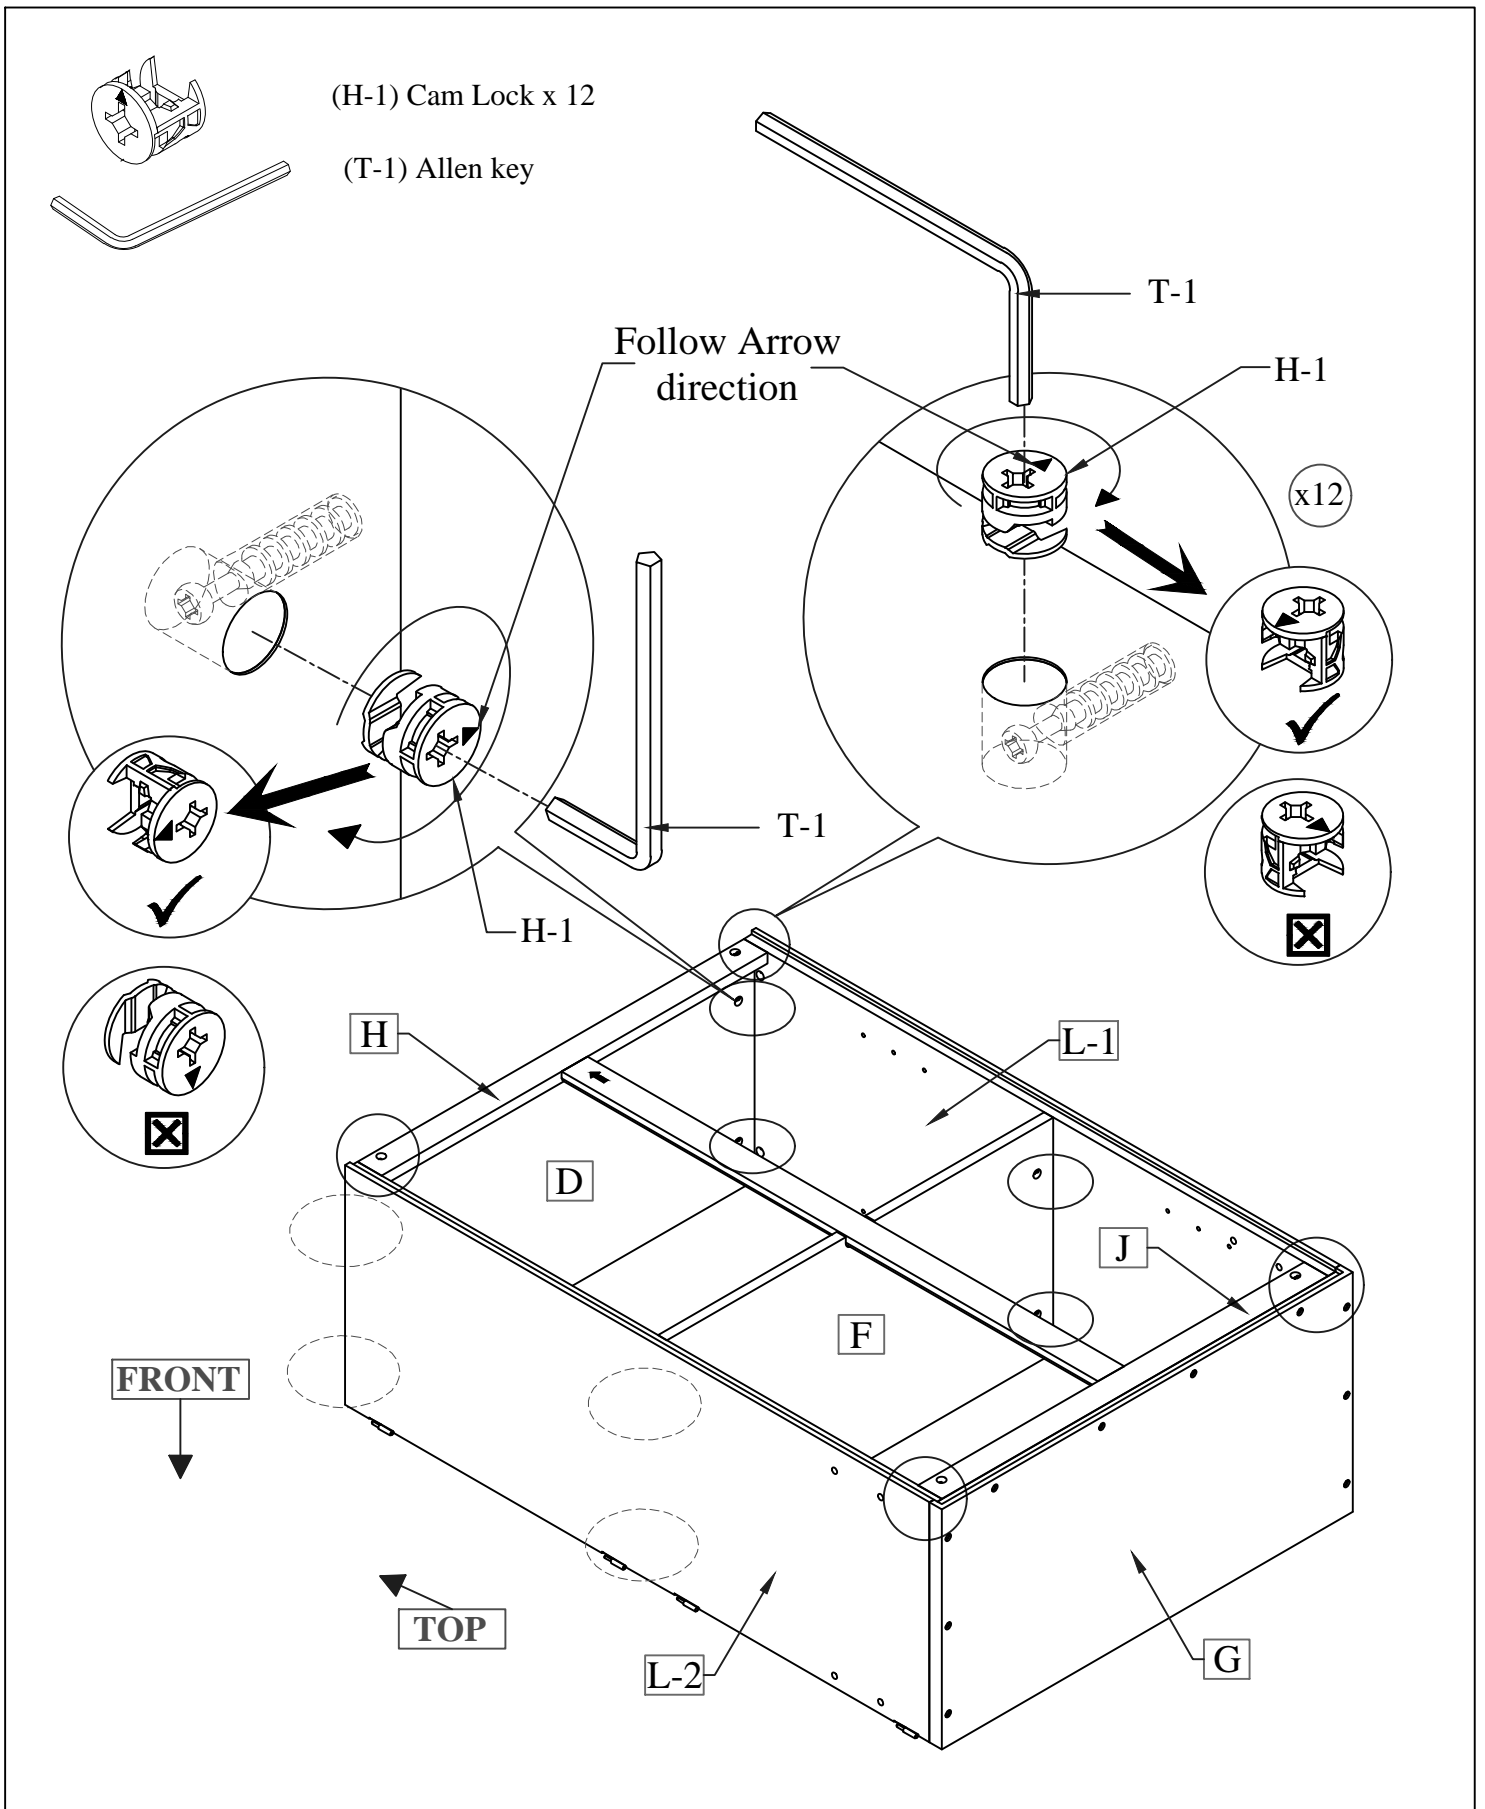


There are a total of 12 Cam Locks (H-1) to install into the corresponding holes along Upper Horizontal Back Support (H), Lower Horizontal Back Support (J), Fixed Upper Shelf (D) and Fixed Lower Shelf (F) as illustrated. Make sure arrows on Cam Locks point to the screw upon insertion. Secure all Cam Locks (H-1) using Allen Key (T-1), turning them clockwise until they are snug. **DO NOT OVERTIGHTEN** the Cam Locks.

## Step 4.2

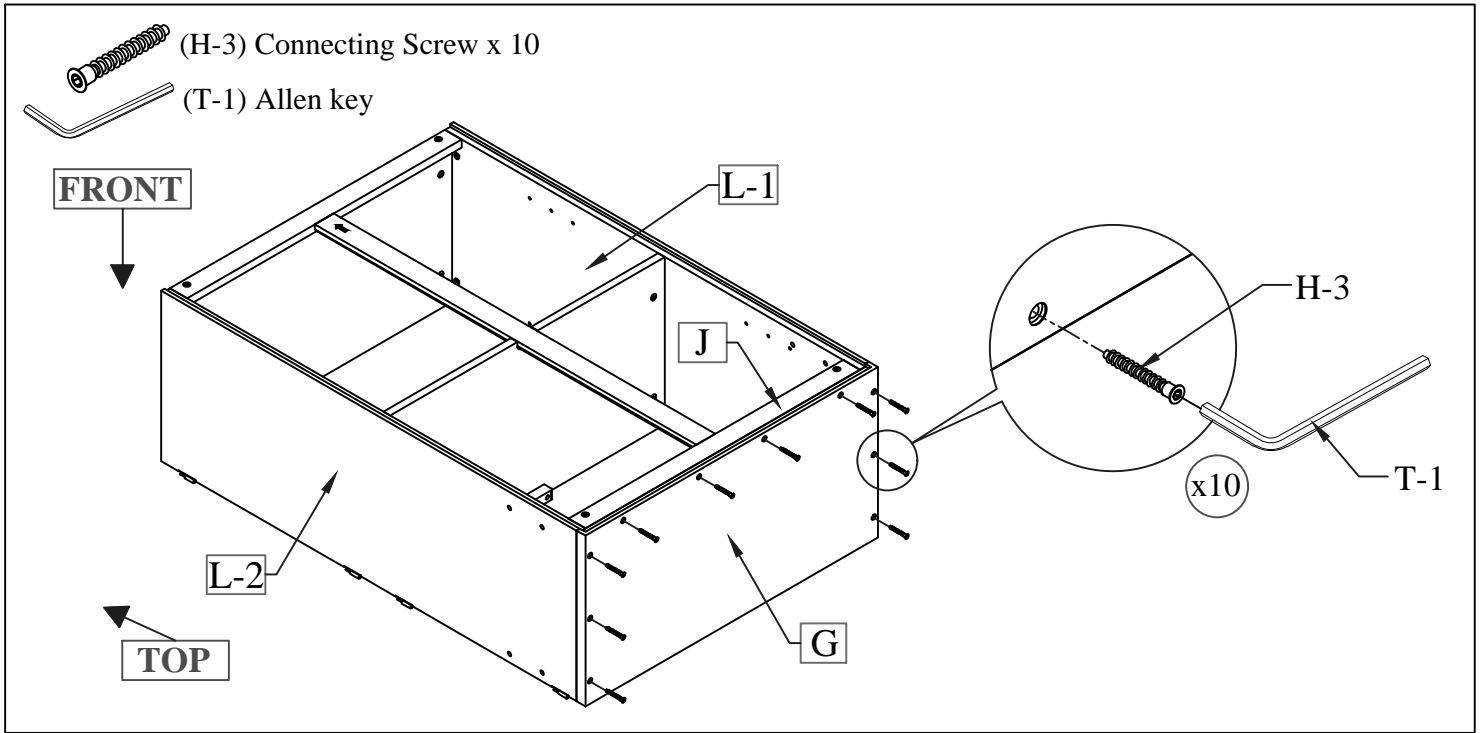


Install and secure Lower Horizontal Back Support (J), Left Side Frame (L-1) and Right Side Frame (L-2) to Bottom Panel (G) using Connecting Screws (H-3). Engage all screws before fully tightening using Allen Key (T-1).

## Step 5

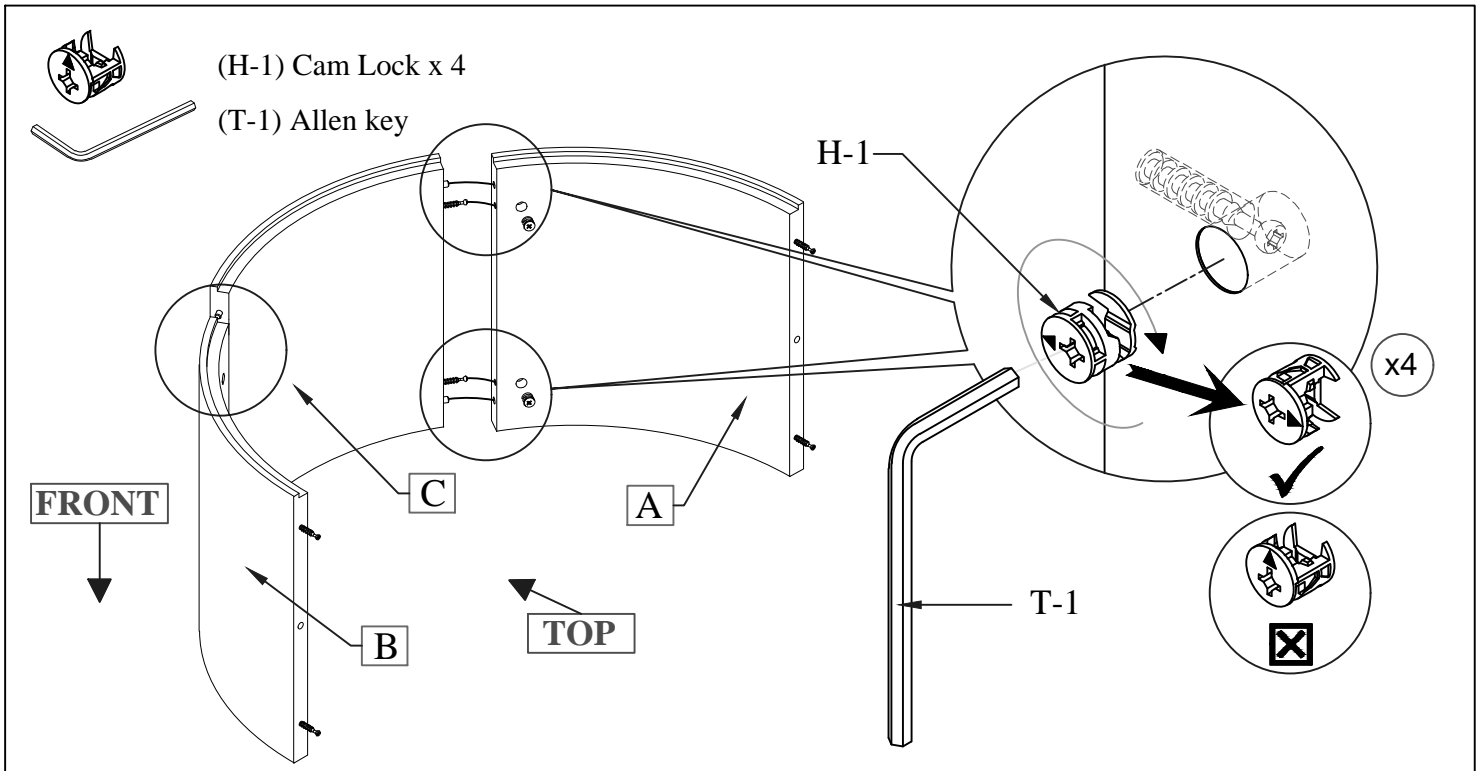


There are a total of 4 Cam Locks (H-1) to install into the corresponding holes along Left/ Right/ Middle Top Frame (A/B/C) as illustrated. Make sure arrows on Cam Locks point to the screw upon insertion. Secure all Cam Locks (H-1) using Allen Key (T-1), turning them clockwise until they are snug. **DO NOT OVERTIGHTEN** the Cam Locks.

## Step 6

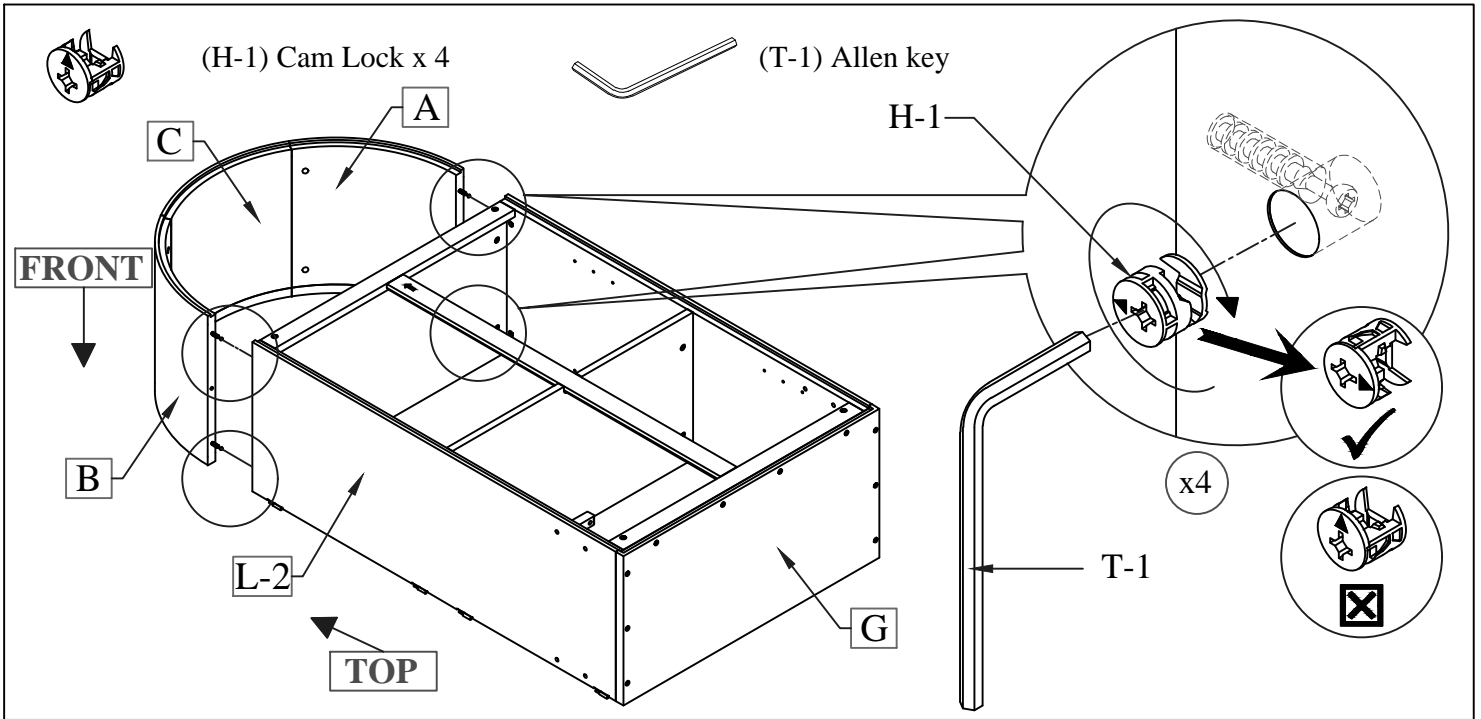


Insert Cam Locks (H-1) into the Left/ Right Side Frame (L-1/L-2) following the orientation directions above. The arrow on the Cam Lock (H-1) must point towards the Cam Screw (H-2) when first inserting the Cam Lock. There are two Cam Locks per each of the panels. After installing all Cam Locks (H-1), ensure the Top frame assembly is fully seated down onto the Left/ Right Side Frame (L-1/L-2). Once confirmed, fully tighten all Cam Locks (H-1) by turning clockwise using Allen Key (T-1) until they are snug. DO NOT over tighten Cam Locks.

## Step 7

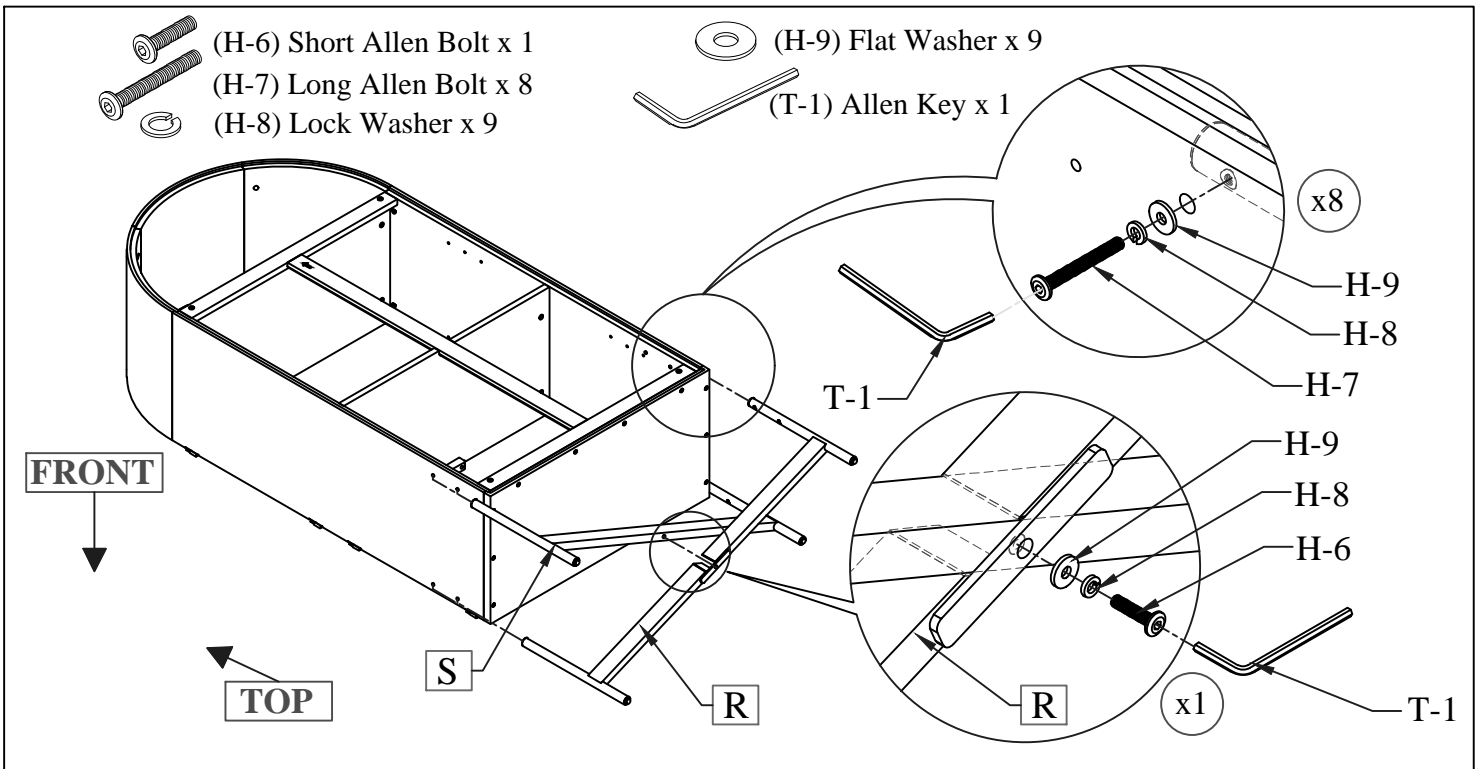


Install and secure Base Frame 1 (R) and Base Frame 2 (S) to Left/ Right Side Frame (L-1/L-2) using the Long Allen Bolt (H-7), Lock Washer (H-8) and Flat Washer (H-9), stacking the hardware in the order as shown. Install and secure Base Frame 1 (R) to Base Frame 2 (S) using the Short Allen Bolt (H-6), Lock Washer (H-8) and Flat Washer (H-9), stacking the hardware in the order as shown. Engage all bolts by hand first, then tighten using an Allen Key (T-1).

## Step 8.1

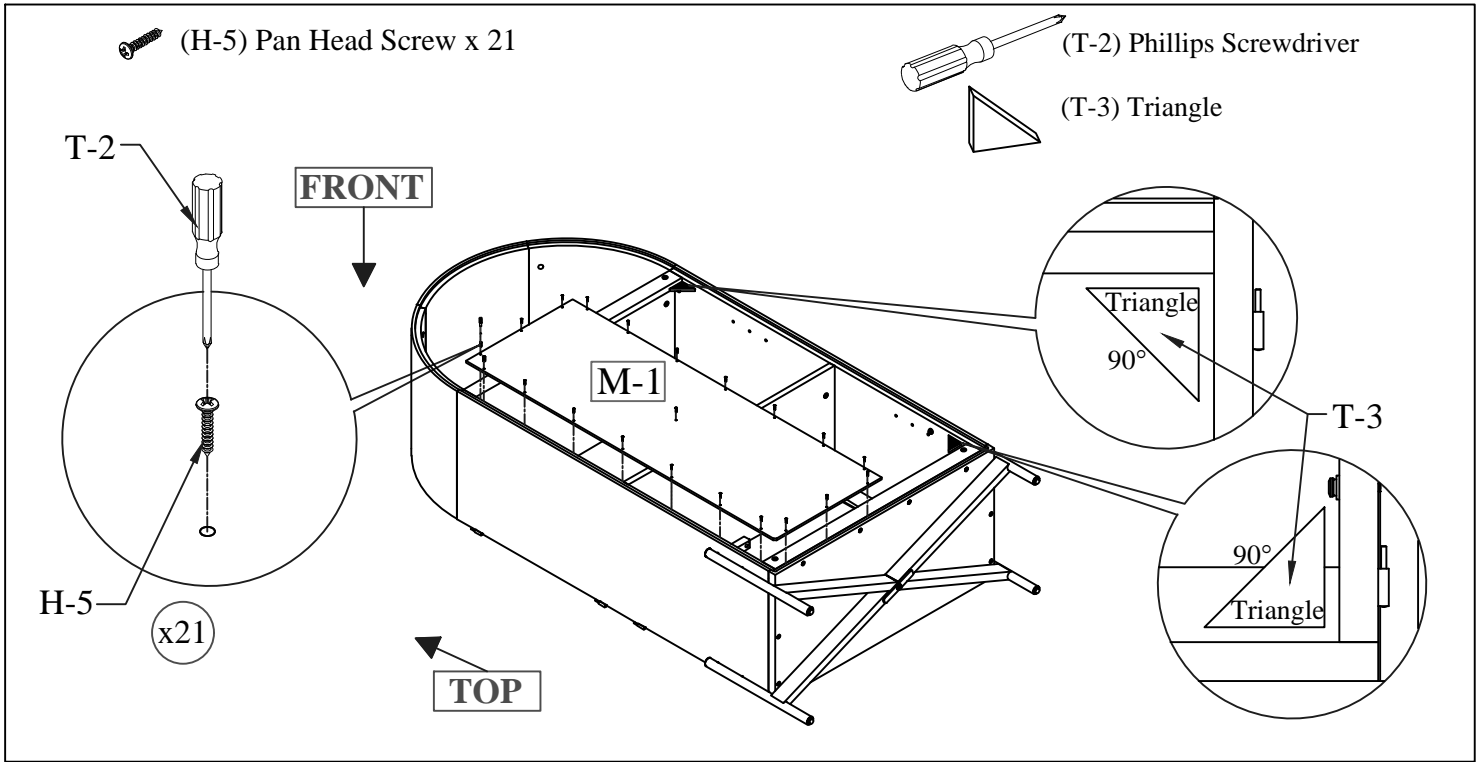


Using the provided Triangle (T-3) check each corner of the assembly to ensure it is square. Adjust assembly as needed. Once satisfied, carefully attach the Lower Left Back Panel (M-1) to the back of the assembly as shown. Take note the direction on the Lower Left Back Panel (M-1). Secure using Pan Head Screw (H-5). Tighten, but do not over tighten, using Phillips Screwdriver (T-2).

## Step 8.2

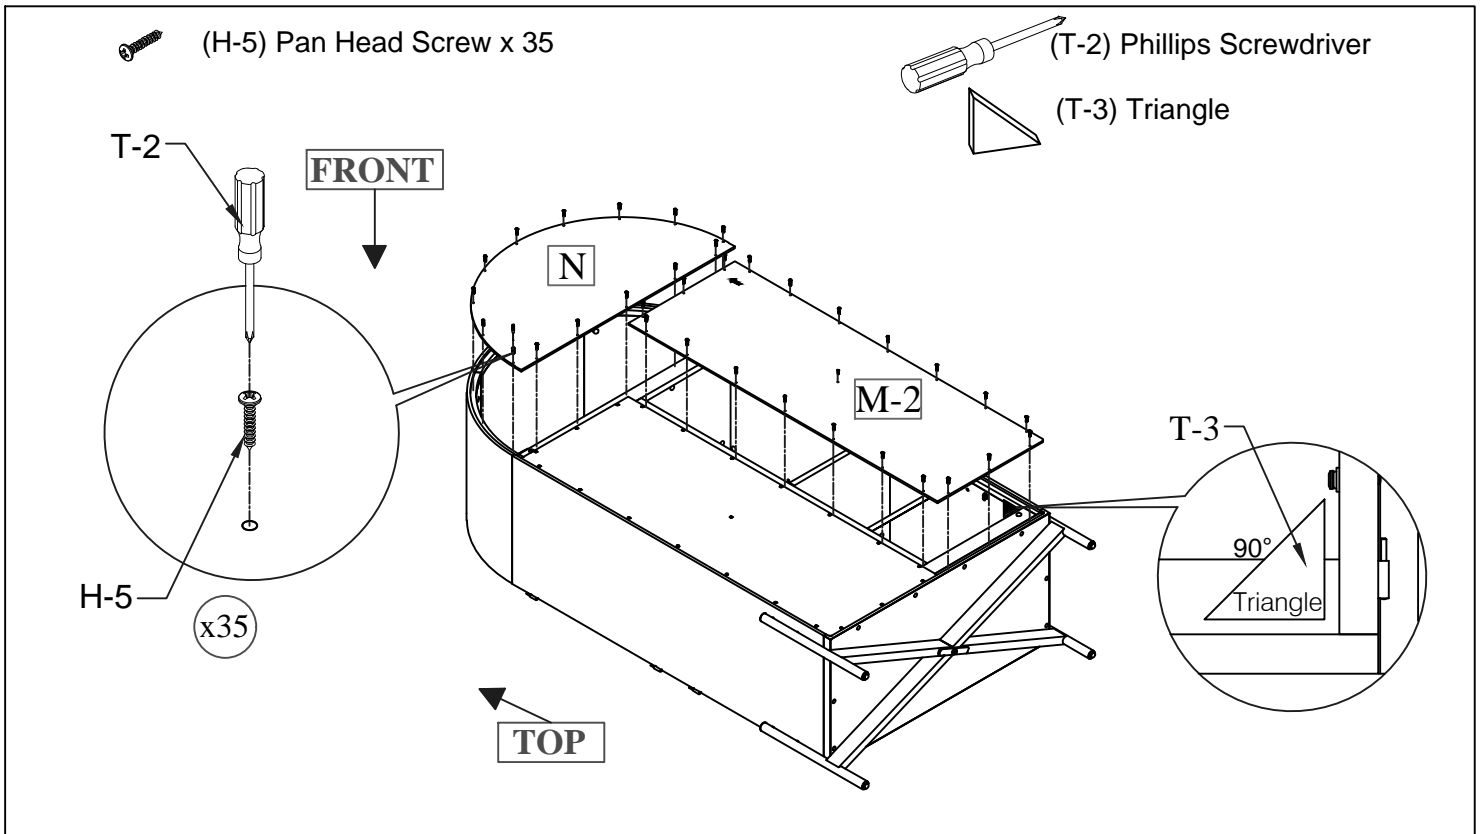


Attach Lower Right Back Panel (M-2) and Upper Back Panel (N) using the same process as Lower Left Back Panel (M-1). Careful to keep the cabinet square.

## Step 9

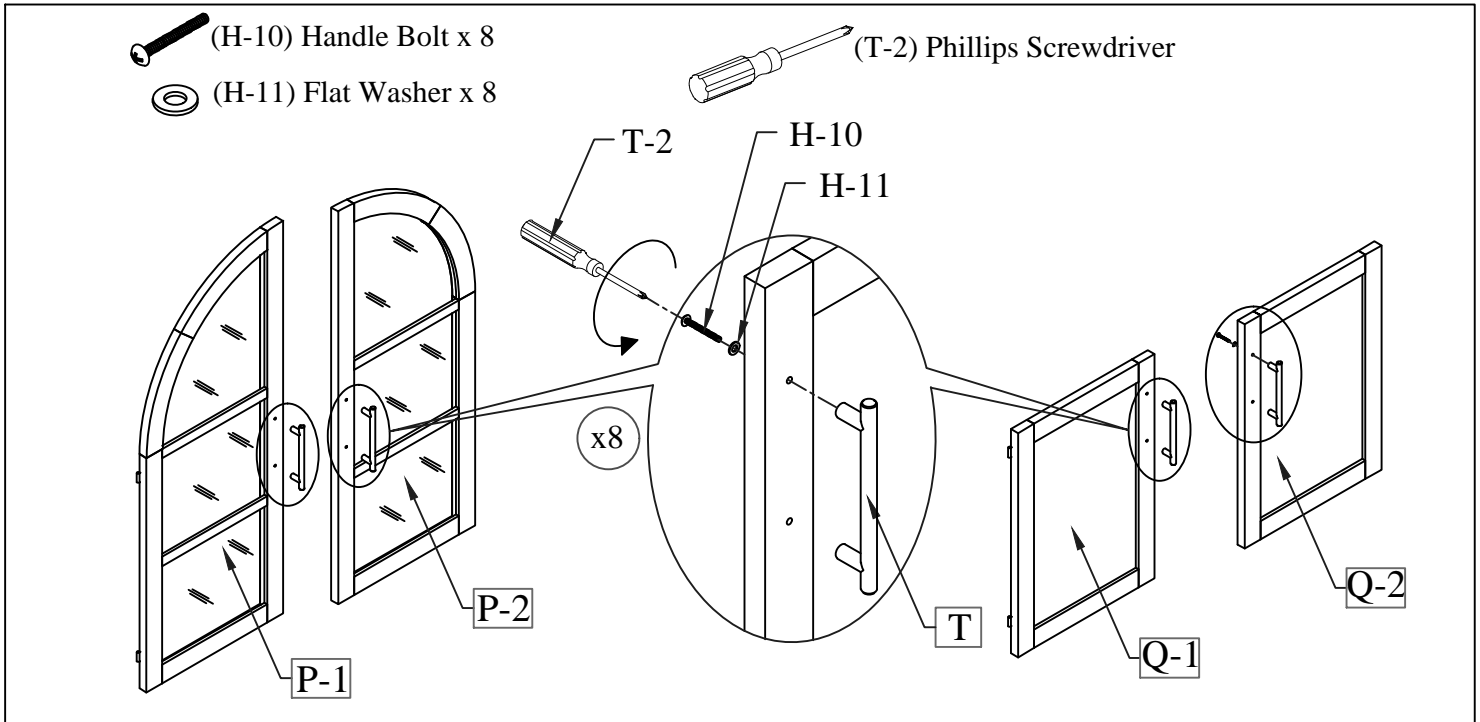


Position and secure Handles (T) to Upper Left/ Right Door (P-1/P-2) and Lower Left/ Right Door (Q-1/Q-2) with Handle Bolts (H-10) and Flat Washers (H-11), stacking the hardware in the order as shown. Tighten the bolts using a Phillips Screwdriver (T-2) (not included). NOTE: All glass is tempered.

## Step 10

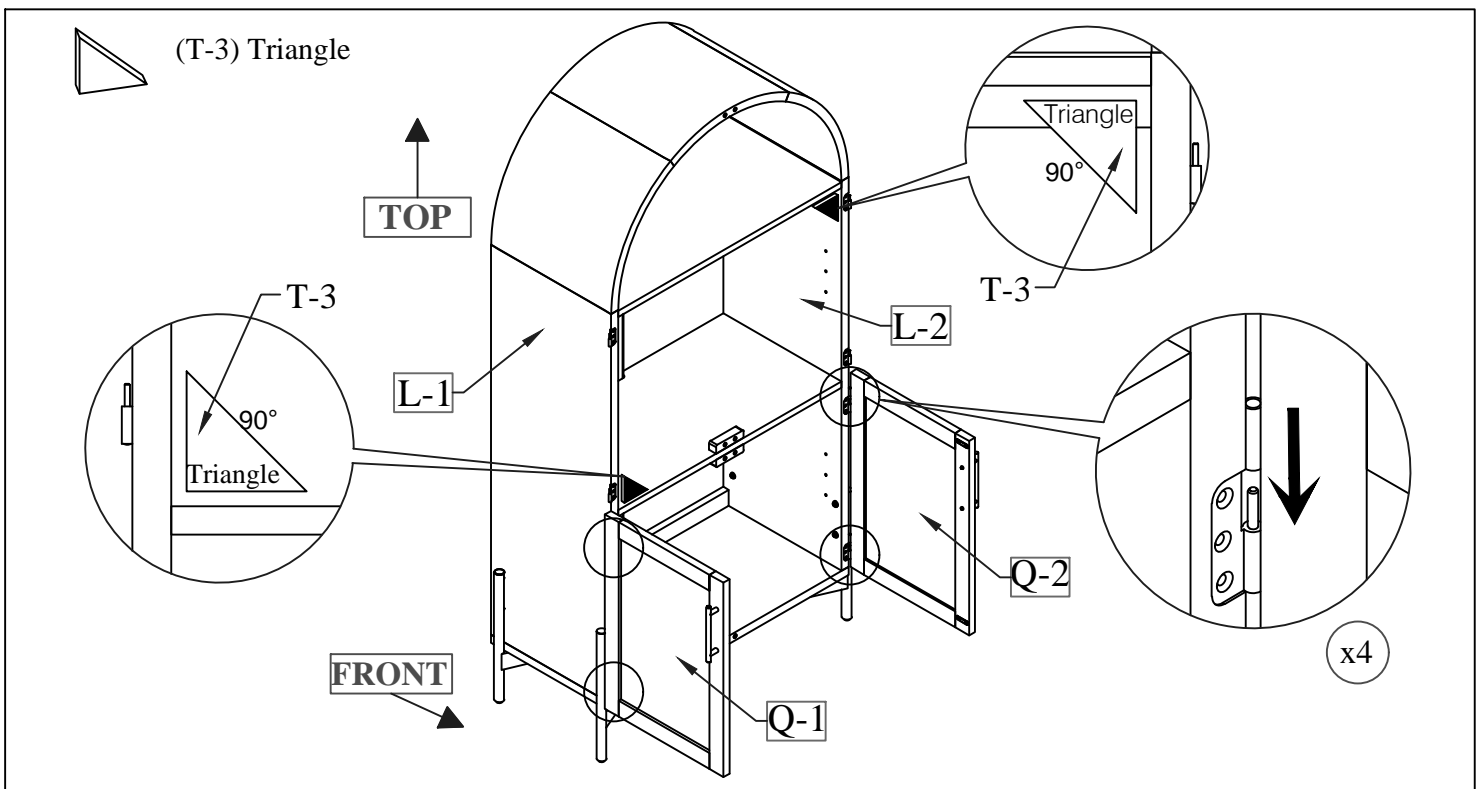


Using a second person to assist you, carefully turn the assembled unit upright as shown. Use provided Triangle (T-3) to ensure the cabinet has remained square and level. If it appears NOT square, continue with assembly and reference step 13 for corrective measures. Position and secure Lower Left Door (Q-1) and Lower Right Door (Q-2) to Left Side Frame (L-1) and Right Side Frame (L-2) by inserting pre-installed male hinges into female hinges.

## Step 11

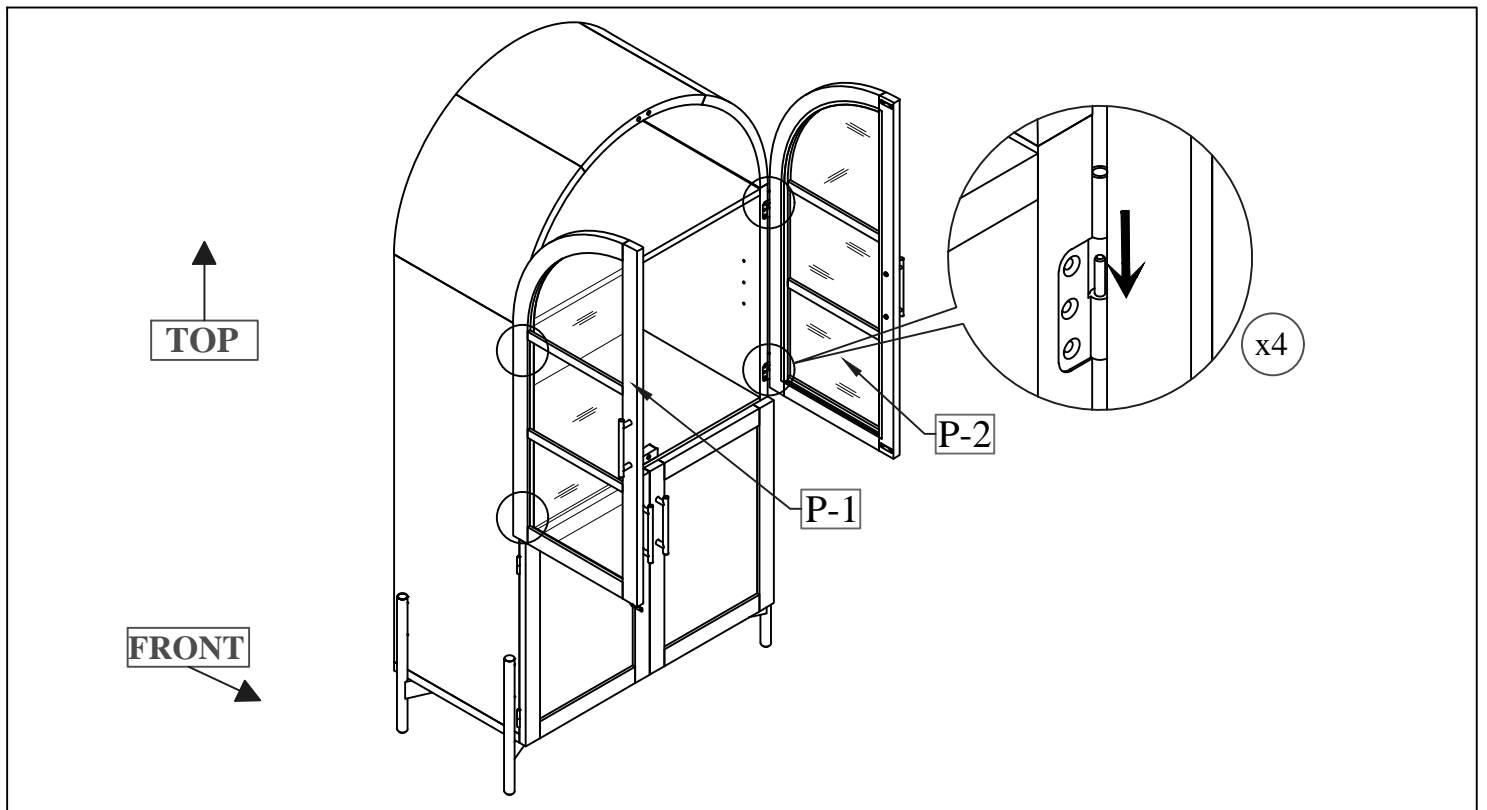

Position and secure Upper Left Door (P-1) and Upper Right Door (P-2) to Left Side Frame (L-1) & Right Side Frame (L-2) by inserting male hinges into female hinges, which are pre-installed.



## Step 12

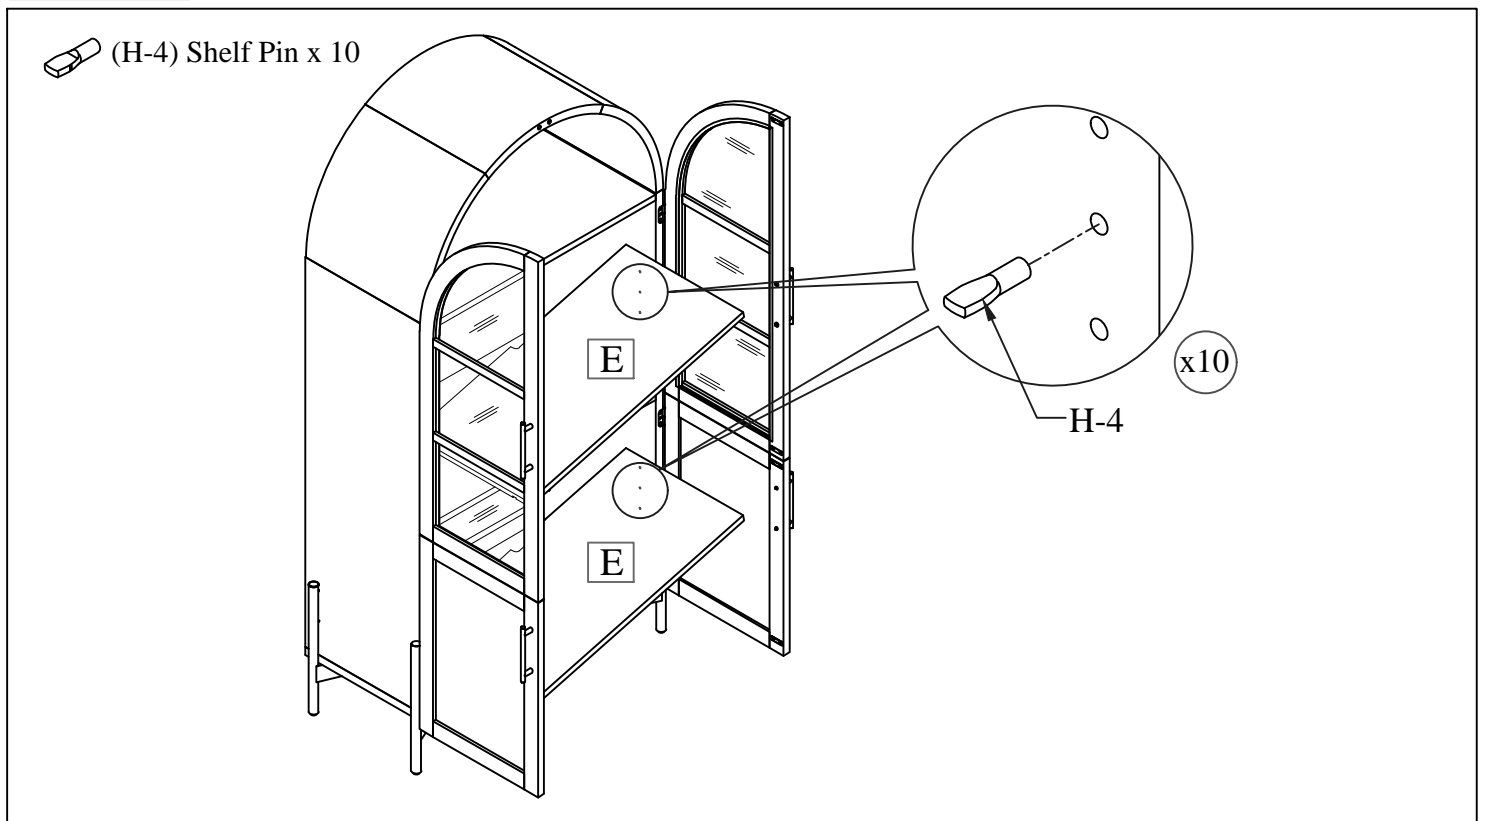

Insert Shelf Pins (H-4) into the desired hole locations on Left Side Frame (L-1), Right Side Frames (L-2) and Vertical Back Support (K). Turn Adjustable Shelf (E) diagonally and carefully insert into position as shown, making sure they rest evenly on each Shelf Pin (H-4).





# Step 13: Leveling Instruction

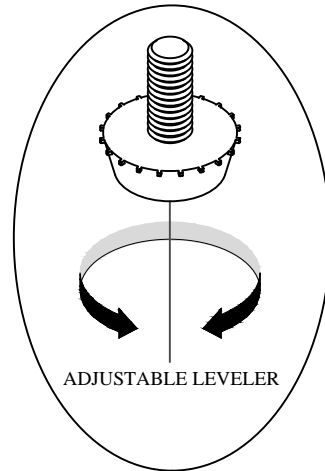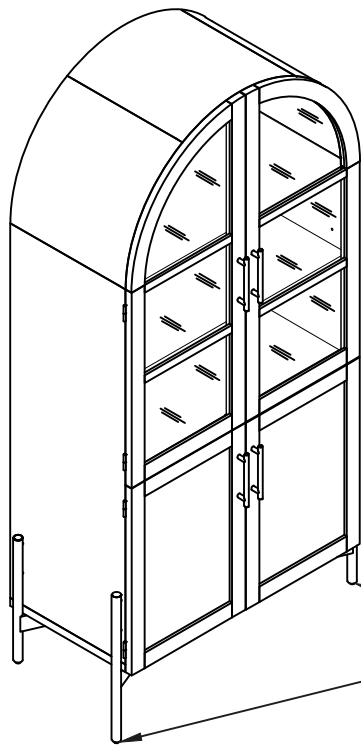

**NOTE: Levelers can be used for adjustment if needed.**



If RIGHT DOOR appears higher than the LEFT DOOR

Adjust the FRONT LEFT leveler until doors are even.

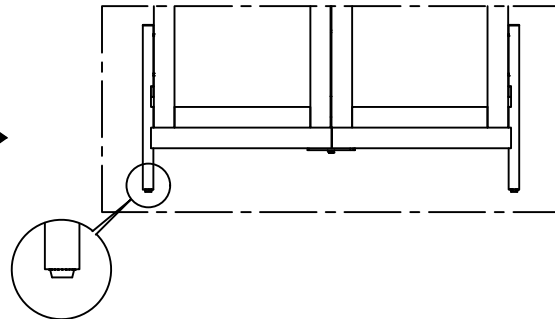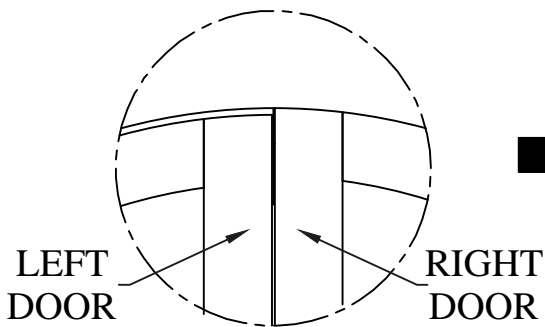

If LEFT DOOR appears higher than the RIGHT DOOR

Adjust the FRONT RIGHT leveler until doors are even.

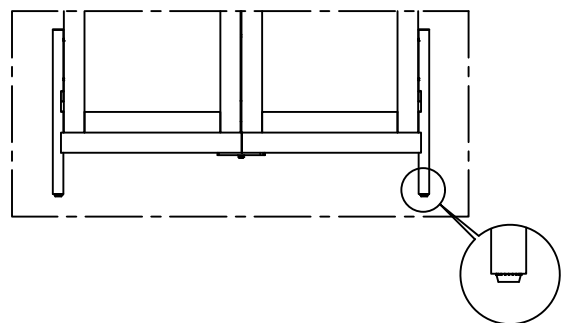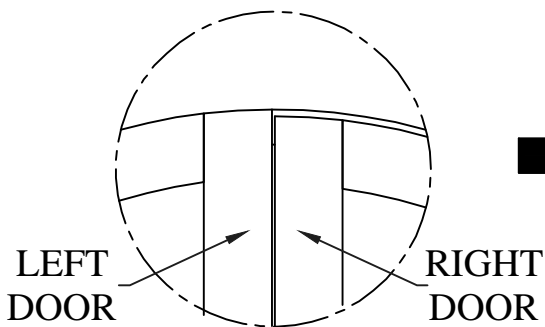


Ensure that all bolts have been fully tightened. Assembly is now complete and the cabinet is ready for use.

\* Note: Once the cabinet is assembled and is level and square, the adjustable levelers can be used for further adjustment. First make sure all levelers rest evenly on the floor. If the RIGHT DOOR appears higher than the left door, adjust the LEFT FRONT leveler until the doors align. Adjust the RIGHT FRONT leveler if the LEFT DOOR is higher.


# Anti-Tip Measures

## ! WARNING

Furniture tip overs can result in death or serious injuries. To reduce the likelihood of tip over, this product should be used with the enclosed Anti-Tip Kit. This Anti-Tip Kit is only a deterrent. It is not a substitute for proper adult supervision. Manufacturer and retailer assume no liability for improper installation or excess loads placed on screws, brackets, or straps. When properly installed, this restraint provides protection against unexpected tipping of furniture. This Anti-Tip Kit **MUST** be installed into the wall using proper mounting hardware **OR** into a wall stud using appropriate screws. Position of the Anti-Tip Kit depends on the product and the location of the wall studs. The hardware provided is not a comprehensive solution for all wall types. Be sure to consult a professional or your local hardware store to determine the hardware needed for your specific wall type (plaster, drywall, concrete, etc.).

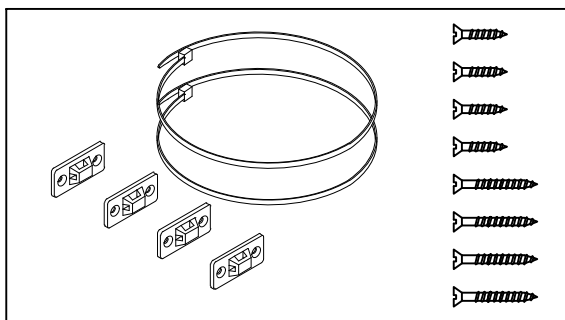

Anti-Tip kit contents

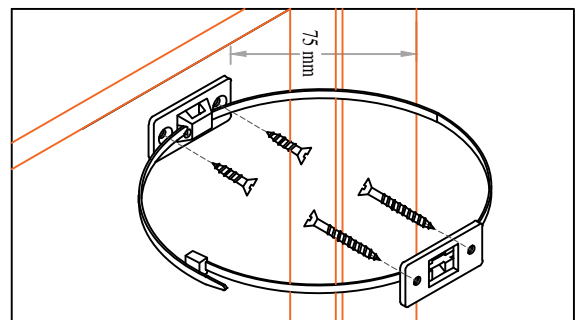

Anti-Tip kit installation

Using a second person to assist you, place the unit in the desired final location against a wall. It is suggested to use a stud finder to find wall studs along the length of the unit and roughly 1 inch below the top. Where possible, mark a drill hole position on the wall where there is a stud and use a Drill or Screwdriver (NOT INCLUDED) to attach Wall Brackets to the wall using Long Screws in the location of the wall studs.

In a case where there is no wall stud, hold Brackets on wall and mark the drill hole positions so that they are roughly 1 inch below the top of the piece. Using a Drill (NOT INCLUDED) with a drill bit roughly the diameter of the plastic Wall Plugs, drill pilot holes in marked positions. Insert the plastic Wall Plugs into the holes until the tops are roughly flush with the wall. Align the holes and insert the Long Screws through Brackets and into the corresponding holes in the wall using a Phillips Head Screwdriver (NOT INCLUDED).

Next, attach remaining 2 Brackets to the back of the piece using Short Screws so they align with Brackets installed on the wall. Loop Straps through Brackets (A) on the furniture piece, then through Brackets on the wall and tighten until snug. Installation is now complete.

**IMPORTANT:** Check that the Wall Brackets are firmly screwed into the wall and the Cable Ties are snug.

If there is any hesitation, please consult a professional or your local hardware store.

# Warnings

## ⚠ WARNING



Children have died from furniture tip over. To reduce the risk of furniture tip over:

- **ALWAYS** install Anti-Tip device provided.
- **NEVER** put a TV on this product.
- **NEVER** allow children to stand, climb or hang on any drawers, doors or shelves.
- **NEVER** open more than one drawer at a time.
- **DO NOT** defeat or remove any drawer interlock system if included with the product; it is an important stability and safety system.
- **Place heaviest items in the lowest drawers.**



Not intended for clothing storage use.



All products sold at World Market are not for commercial use and are intended for residential use only.

# Care & Maintenance



**DO NOT** put hot items directly on furniture surface.



**DO NOT** clean furniture with harsh cleansers or polish.



**DO NOT** place furniture in direct sunlight.



**DO NOT** place furniture near heating or cooling vents.



**DO NOT** write on furniture without a padded barrier to protect the surface.



**DO NOT** place furniture outside. For **INDOOR USE ONLY**.



Dust and pick up spills using a clean, non-colored, lint-free dry cloth.

# **WORLD MARKET** LIMITED ONE-YEAR WARRANTY – Indoor Furniture

For your customer satisfaction, this product carries a LIMITED ONE-YEAR WARRANTY from the date of delivery. This limited warranty only applies to World Market brand furniture, and not to other furniture brands sold on World Market's website.

Where applicable, the limited warranty provides coverage for:

1. **Manufacturing, Material and Workmanship Defects:** Includes defects related to core frame/structure substrates (wood and metal); cracking, splitting, or complete breakage of hardwood, plywood or medium density fiberboard (MDF); cracking, splitting or lifting of wood veneer or laminated top surfaces caused by process failure; broken welds or improperly coated metal frame components (powder coating or painted); fabric or leather material defects including tears, misprints, fraying, crease marks, skip stitches or open seams; support webbing material and sinuous spring defects or damage, including method of attachment to frame; and other component failures that are a direct result of manufacturing or workmanship defects.
2. **Cushions & Cushions with Enclosed Steel Pocket Coils:** Failed or ruptured steel pocket coils enclosed inside of seat cushions, or loss of resiliency from a material breakdown of foam or fiber filling, which should not be confused with softening or settling during normal use.
3. **Leather:** Splitting or cracking of leather material. NOTE: The warranty does NOT cover natural hide markings, variations in the leather color or grain due to the authentic natural properties of processed cowhide leather.
4. **Bonded Leather or Bi-cast Leather:** Separation of the polyurethane coating, peeling or cracking of the inner layer or at the bonded seam edges (bi-cast straps).
5. **Furniture Components (Hardware & Mechanisms):** Includes defects to pre-installed components or hardware provided to the customer for assembly such as office chair hydraulic lifts, lift mechanisms, metal bases and casters, swivel plate mechanisms; for drawers, metal glides, handles/knobs; for doors, hinges, magnetic latches; and other components such as bent or stripped threaded leg posts and adjustable levelers. For missing, damaged, corroded, or misplaced hardware components such as bolts or washers, please contact Customer Service at: 877-967-5362.

## **This LIMITED ONE-YEAR WARRANTY does NOT cover:**

1. Damage due to mishandling during transportation from store or transportation without original protective packaging.
2. Abuse, negligence (product misuse) or wear and tear that may result in or from:
  - a. **Wood & Veneer:** Mishandling, exposure to moisture, peeling or discoloration caused by exposure to moisture or excessive sunlight, heat; splintered, dented or nicked panels, legs or component edges or paint/finish blemishes; or treatment with corrosive chemicals (dyes, inks, paints or harsh cleaning products).
  - b. **Fabric & Leather (Including Bonded or Bi-Cast Leathers):** cuts, punctures, tears, burns, pet damage, or treatment with corrosive chemicals (dyes, inks, paints or harsh cleaning products), exposure to direct sunlight, fire, high heat, water, or any bright light source (natural or artificial) that may cause splitting, peeling or flaking with time.
  - c. **Foam (Cushions):** Flattening, relaxing or settling/softening of foam components that comes with normal use.
  - d. **Hardware Components:** improper installation or misuse/substitution of hardware components not defined in the Assembly Instructions for the product (if applicable)
3. Damage due to environmental exposure to direct sunlight, fire, high heat, water or extreme humidity, any bright light source (natural or artificial), or any environment that the product is not intended for.
4. This warranty is applicable for indoor furniture products purchased for residential use only.

For additional information on returns, please visit: <https://www.worldmarket.com/category/customer-service/returns.do>

**All products sold at World Market are NOT FOR COMMERCIAL USE and are intended for residential use only. Products purchased for commercial use will VOID all warranty provisions as listed above.**

Any claims under this LIMITED ONE-YEAR WARRANTY are valid and applicable only as to the original purchaser and must be accompanied by proof of purchase. Warranty claims should be submitted to a World Market store or through World Market Customer Service Call Center, Toll Free at 877-967-5362.

For valid warranty claims, World Market will repair or replace the product, or offer a full or partial credit, in the sole discretion of World Market. This LIMITED ONE-YEAR WARRANTY gives you specific legal rights and you may also have other rights which vary from state to state.