 


WORLD MARKET®

Assembly Instructions

Butler Arch Tall Bookcase




SKU 659259

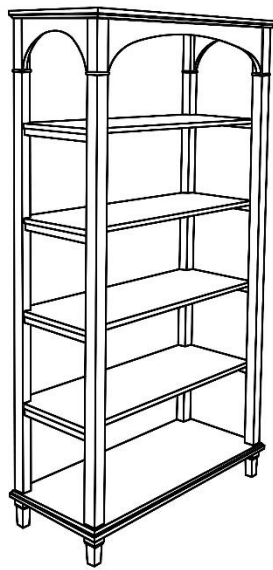


Thank you for your purchase. If you have any questions pertaining to the assembly of this furniture piece, please contact the nearest World Market store. If you are not near a store, please call our customer service call center toll free at 877-967-5362 for assistance.

ALL PRODUCTS SOLD AT WORLD MARKET ARE NOT
FOR COMMERCIAL USE AND ARE INTENDED FOR
RESIDENTIAL USE ONLY.

   Component List

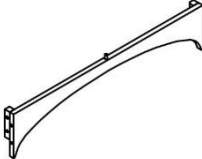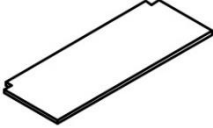LABEL		DESCRIPTION	QTY
A		Top Panel	1
B		Left Side Frame	1
C		Right Side Frame	1
D		Upper Front Apron	1
E		Fixed Shelf	2
F		Removable Shelf	2
G		Bottom Panel	1
H		Leg	4
I		Right Back Panel	1
J		Left Back Panel	1

 Hardware List


LABEL		DESCRIPTION	QTY
H-1		Short Allen Bolt Ø 1/4"x 30 mm.	20
H-2		Long Allen Bolt Ø 1/4"x 50 mm.	4
H-3		Lock Washer Ø 4 x 1mm.	24
H-4		Flat Washer Ø 6-16 x 1mm.	24
H-5		Wood Screw M4 x 25mm.	32

Tool List

LABEL		DESCRIPTION	QTY
T-1		Allen Key	1
T-2	 (NOT PROVIDED)	Phillips Screwdriver	1

Assembly Preparation

 Before Beginning:

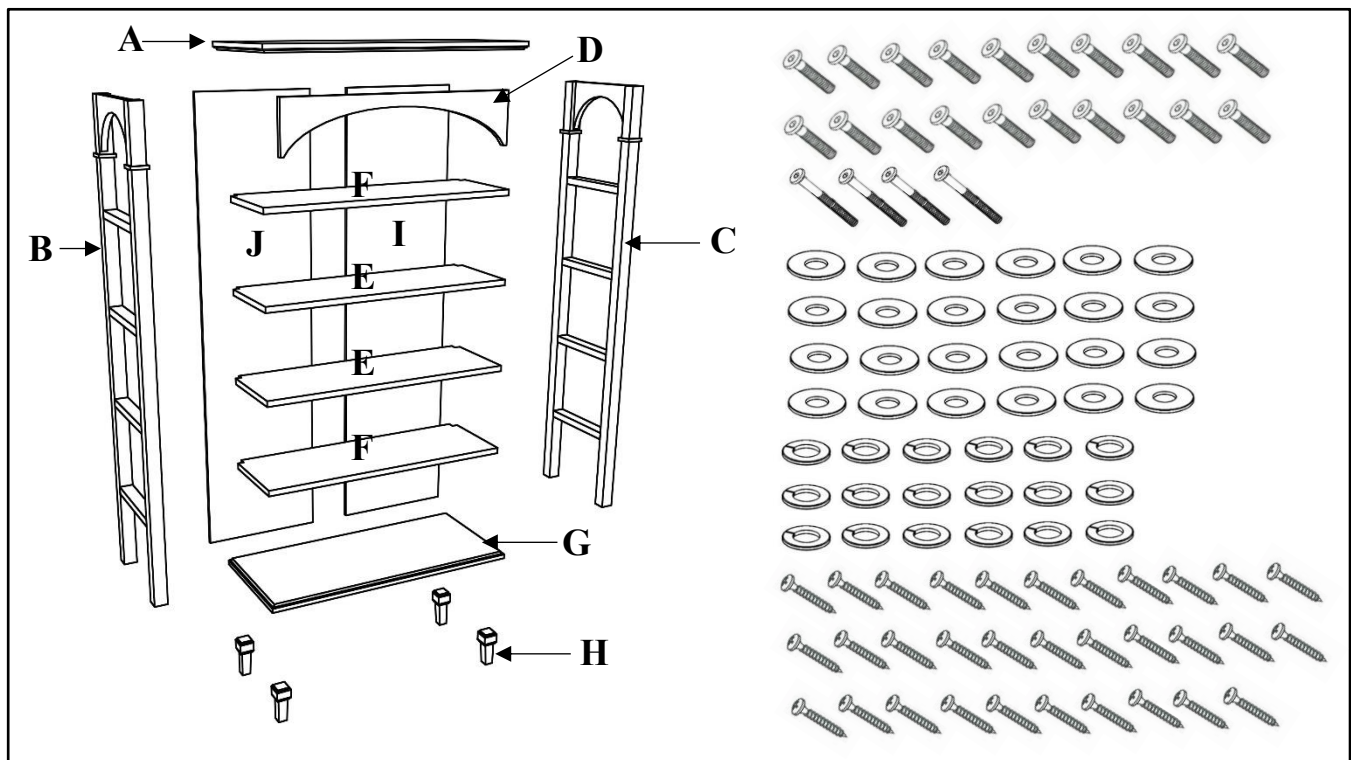

Unpack all hardware bags and components to ensure you have all parts. Take note of bolt hardware size differences and components that may have directional labels (Example: TOP or FRONT).



Depending on your furniture product, foam, packing dust, or residual film or finish may be present on the components. This is normal and can be wiped clean using a non-colored, lint-free dry cloth.



Read the assembly instructions, cover-to-cover. Save any **Care and Maintenance** instructions pages for after the assembly has been completed.



It is always recommended to have 2 adults on hand for assembly.



Do not assemble on hard, abrasive flooring or carpeted surfaces that can damage or get caught in the components during assembly.



Assemble on a clean non-marring surface (such as the product's packing foam).



Do not discard any packaging until the product has been fully assembled.




In case of missing parts, please contact your nearest World Market store or call our customer service call center at 1-877-967-5362.



WARNING: Small parts are a choking hazard. Adult supervision is required before, during, and after assembly.


Assembly Steps

Step 1

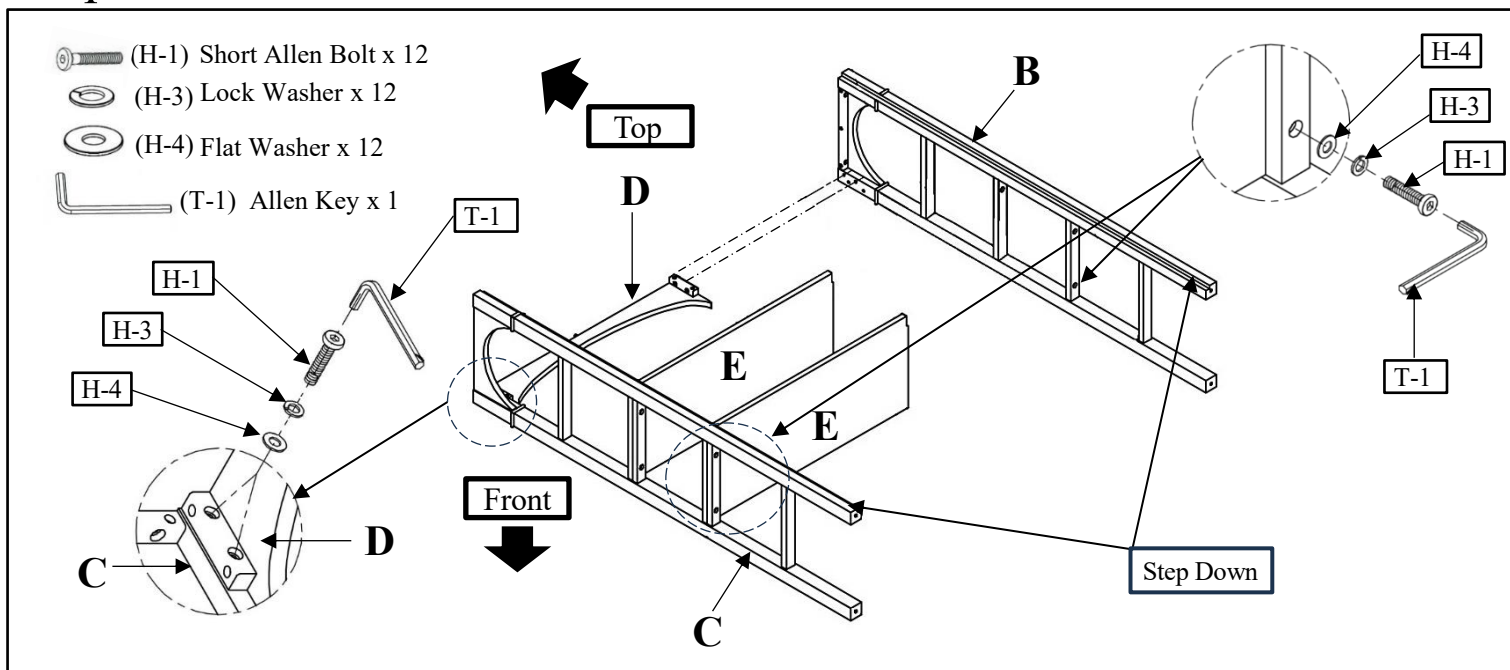

Place the Left/Right Side Frame (B/C) on a padded, non-marring surface. Ensure the step down is facing up. Position the Upper Front Apron (D) and the two Fixed Shelves (E) with the Left/Right Side Frames (B/D), as shown, and aligning pre-drilled holes. Secure by engaging 12 (four per each component) Flat Washers (H-4), Lock Washers (H-3) and Short Allen Bolts (H-1), stacking the hardware in the order as shown. Once engaged, fully tighten using the provided Allen Key (T-1). DO NOT OVER TIGHTEN.


Step 2

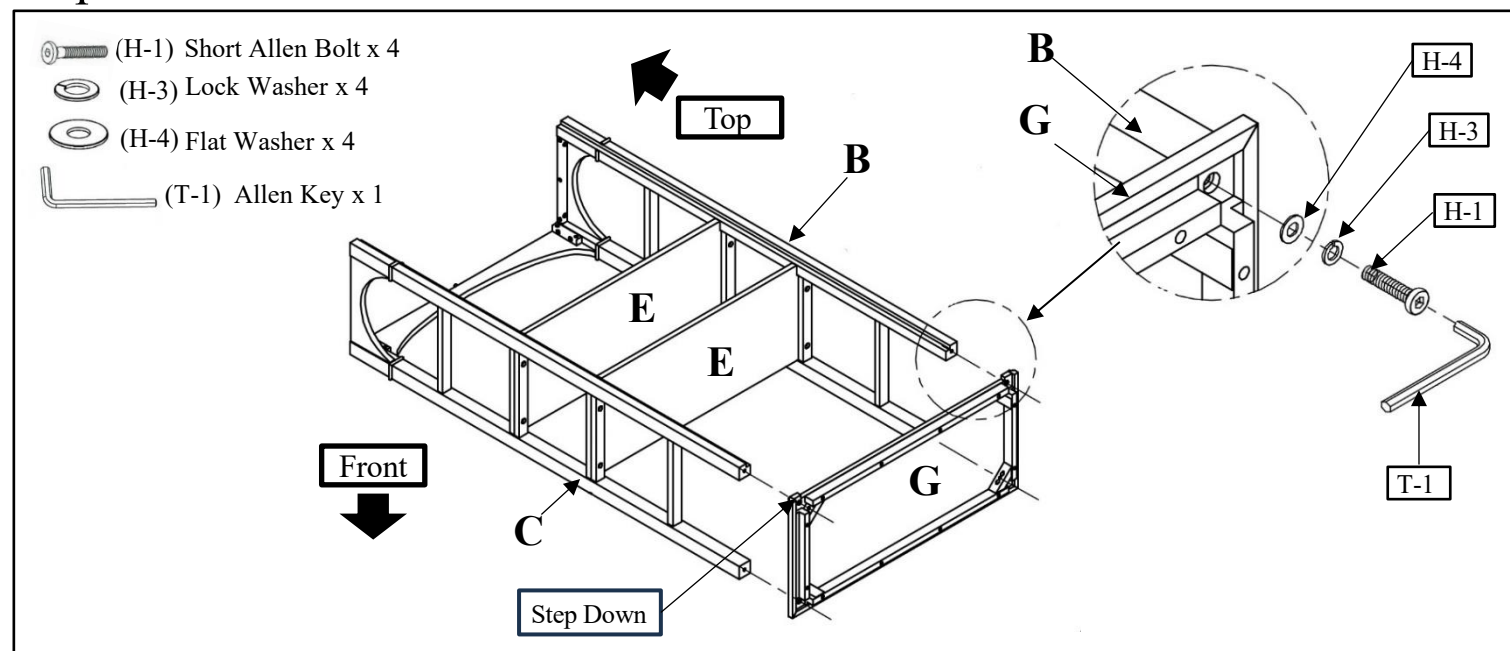

Position the Bottom Panel (G) with the assembly, ensuring the step down is facing up, and align the pre-drilled holes. Secure by engaging four (one per corner) Flat Washers (H-4), Lock Washers (H-3) and Short Allen Bolts (H-1), stacking the hardware in the order as shown. Once engaged, fully tighten using the provided Allen Key (T-1). DO NOT OVER TIGHTEN.


Assembly Steps

Step 3

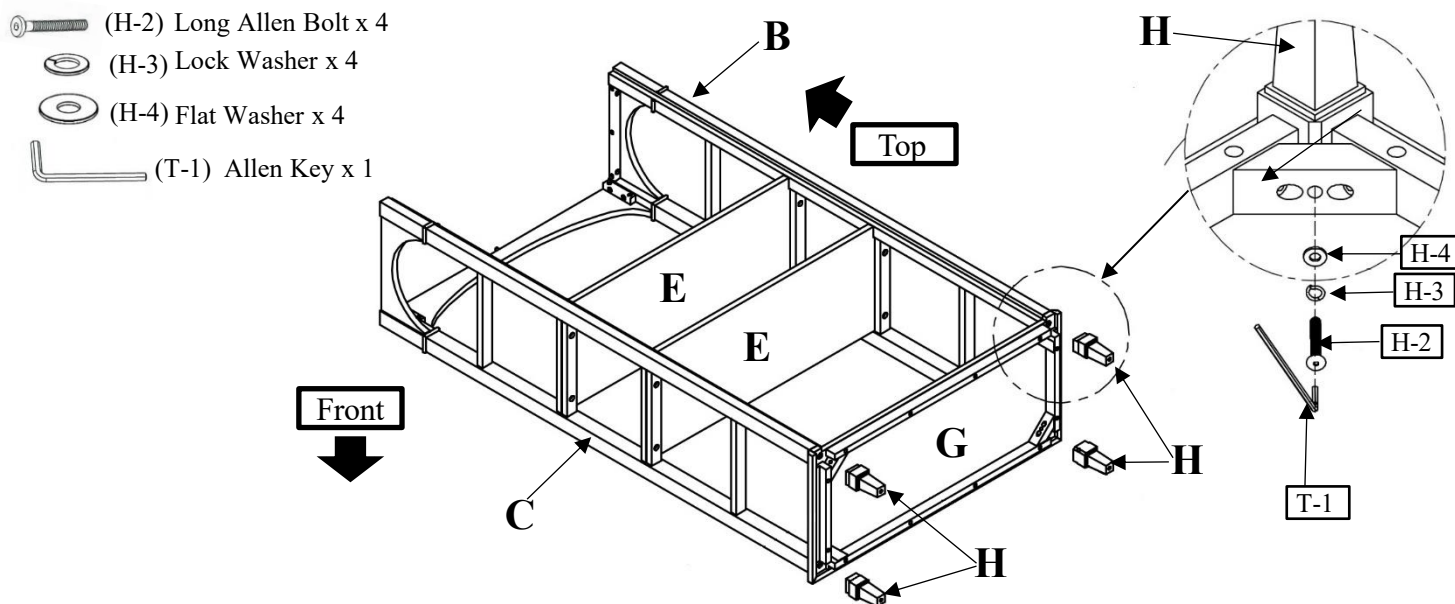

Position the Legs (H) to each corner of the Bottom Panel (G), aligning the pre-drilled holes on both sides. Secure by engaging four (one per leg) Flat Washers (H-4), Lock Washers (H-3) and Long Allen Bolts (H-2), stacking the hardware in the order as shown. Once engaged, fully tighten using the provided Allen Key (T-1). DO NOT OVER TIGHTEN.


Step 4

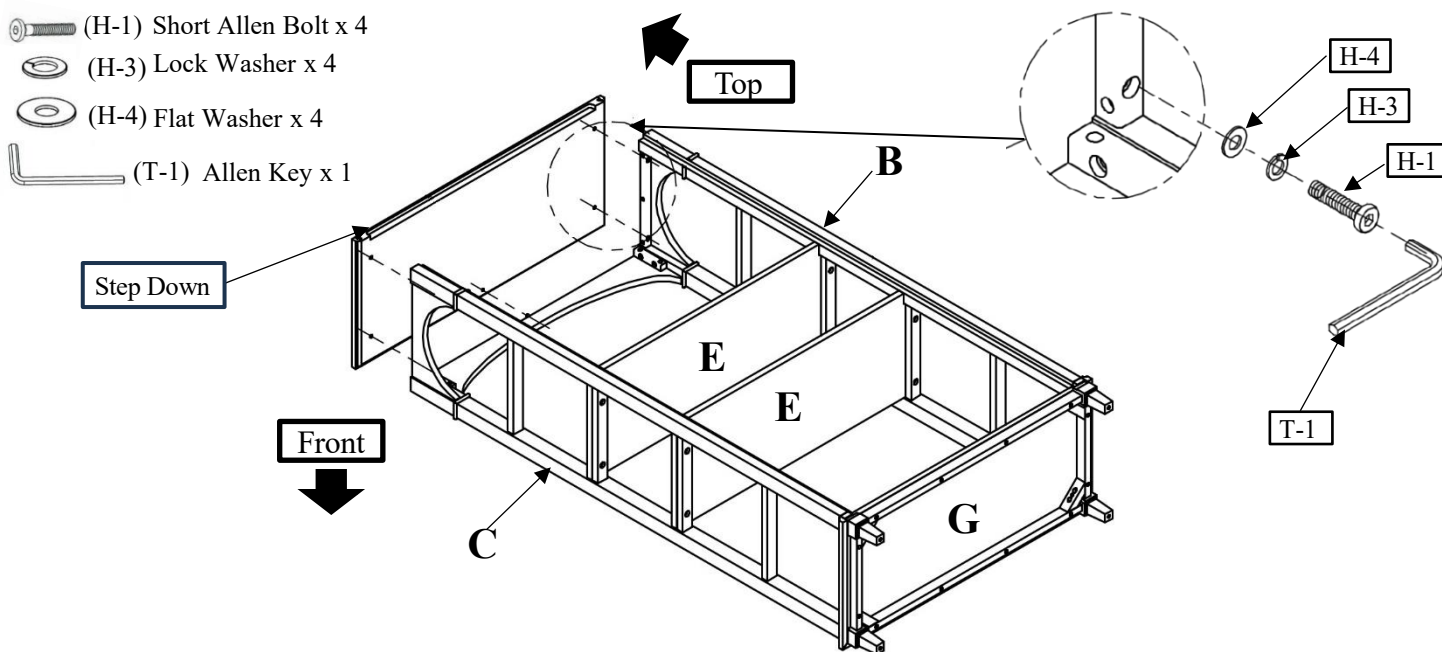

Position the Top Panel (A) with the assembly, ensuring the step down is facing up, and align the pre-drilled holes. Secure by engaging four (two per side) Flat Washers (H-4), Lock Washers (H-3) and Short Allen Bolts (H-1), stacking the hardware in the order as shown. Once engaged, fully tighten using the provided Allen Key (T-1). DO NOT OVER TIGHTEN.


Assembly Steps

Step 5

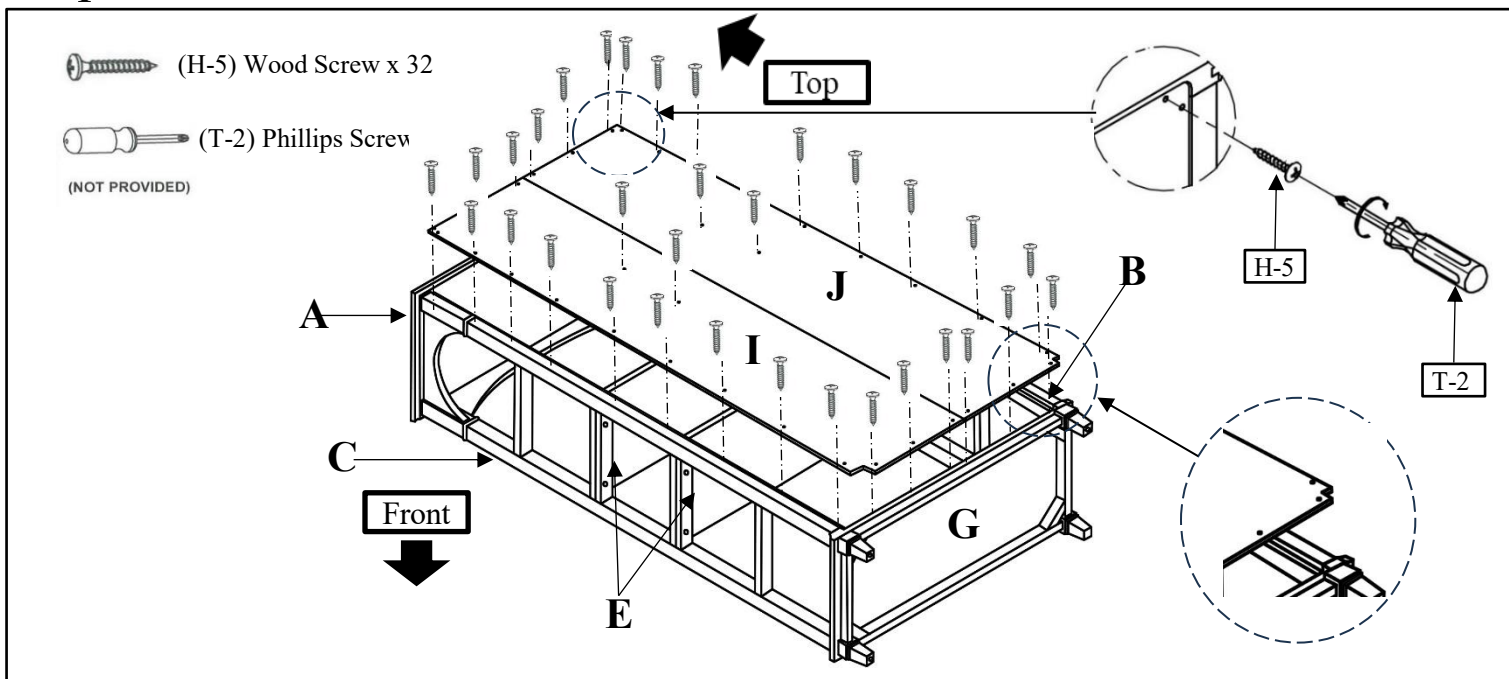

Place the Right/Left Back Panel (I/J) with the assembly so that it nests in each step down in all components. Ensure the notches are toward the bottom and that the finished sides face toward the front. Secure by engaging x32 Wood Screws (H-5) into each receiving hole on the Right/Left Back Panels (I/J) and fully tighten using a Phillips Screwdriver (T-2; not included). **DO NOT OVER TIGHTEN.**

Step 6

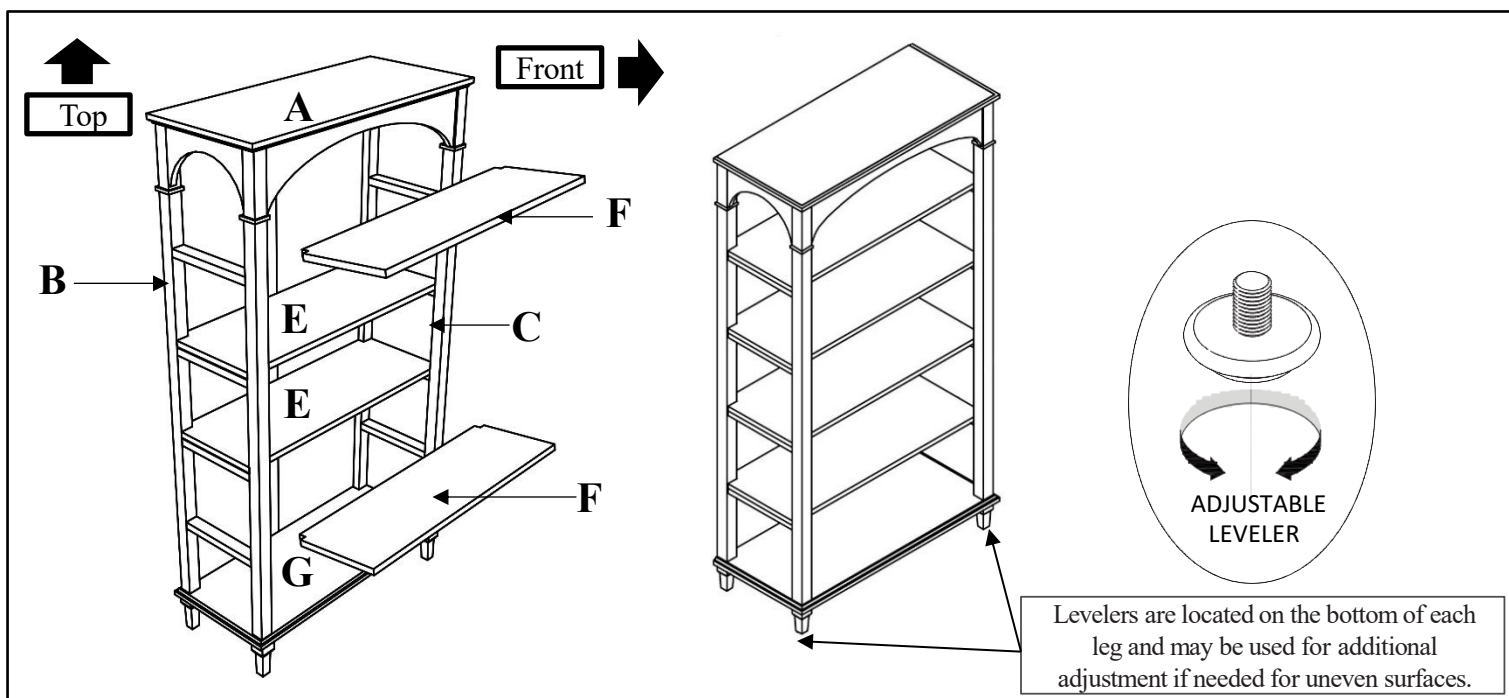

Using a second person to assist you, carefully turn assembled unit upright. Insert the Removable Shelves (F) by holding them at an angle and inserting them through the front. They will rest on the Right/Left Side Frames (B/C). Assembly is now complete and the product is ready for use. Adjustable levelers are located on the bottom of each leg and may be adjusted by turning outwards, counter-clockwise to help account for uneven surfaces. **NOTE:** Hardware may loosen over time. Periodically check that all connections remain tight and adjust as needed.

Warnings



All products sold at World Market are not for commercial use and are intended for residential use only.



WARNING: Small parts are a choking hazard. Adult supervision is required before, during and after assembly.

Care & Maintenance



DO NOT put hot items directly on furniture surface.



DO NOT clean furniture with harsh cleansers or polish.



DO NOT place furniture in direct sunlight.



DO NOT place furniture near heating or cooling vents.



DO NOT write on furniture without a padded barrier to protect the surface.



DO NOT place furniture outside. For INDOOR USE ONLY.



Dust and pick up spills using a clean, non-colored, lint-free dry cloth. **NOTE:** It is recommended to use coasters to protect the table top.

Anti-Tip Measures


WARNING

Furniture tip overs can result in death or serious injuries. To reduce the likelihood of tip over, this product should be used with the enclosed Anti-Tip Kit. This Anti-Tip Kit is only a deterrent. It is not a substitute for proper adult supervision. Manufacturer and retailer assume no liability for improper installation or excess loads placed on screws, brackets, or straps. When properly installed, this restraint provides protection against unexpected tipping of furniture. This Anti-Tip Kit **MUST** be installed into the wall using proper mounting hardware OR into a wall stud using appropriate screws. Position of the Anti-Tip Kit depends on the product and the location of the wall studs. The hardware provided is not a comprehensive solution for all wall types. Be sure to consult a professional or your local hardware store to determine the hardware needed for your specific wall type (plaster, drywall, concrete, etc.).

Anti-tip kit contents

- Metal Brackets (A)  (4)
- Restraint Straps (B)  (2)
- Short Screws (C)  (2)
- Long Screws (D)  (2)
- Anchors (E)
(for concrete wall)  (2)

Anti-tip kit installation

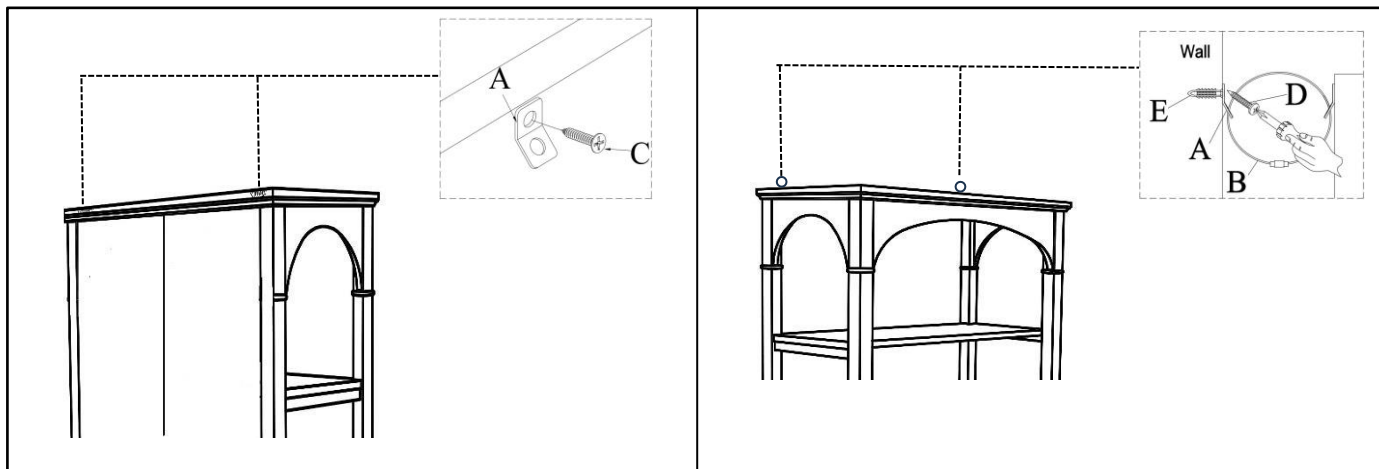

Place the unit in the desired final location against a wall. It is suggested to use a stud finder to find wall studs along the length of the unit and roughly 1 inch below the top of the unit. Where possible, mark a drill hole position on the wall where there is a stud and use a drill or screwdriver (NOT INCLUDED) to attach Metal Brackets (A) to the wall using Long Screws (D) in the location of the wall studs.

In a case where there is no wall stud, hold Metal Brackets (A) on wall and mark the drill hole positions so that they are roughly 1 inch below the top of the piece. Using a drill with a drill bit roughly the diameter of the plastic Anchors (E), drill pilot holes in marked positions. Insert the plastic Anchors (E) into the holes until the tops are roughly flush with the wall. Align the holes and insert the Long Screws (D) through Metal Brackets (A) and into the corresponding holes in the wall using a Phillips head screwdriver (NOT INCLUDED).

Next, attach remaining Metal Brackets (A) to the back of the furniture piece using Short Screws (C) so they align with Metal Brackets installed on the wall. Loop Restraint Strap (B) through Metal Brackets (A) on the furniture piece, then through Metal Brackets (A) on the wall and tighten until snug. Installation is now complete.

IMPORTANT: Check that the Metal Brackets is firmly screwed into the wall and the Restraint Strap is snug. If

there is any hesitation, please consult a professional or your local hardware store.

WORLD MARKET. LIMITED ONE-YEAR WARRANTY – Indoor Furniture

For your customer satisfaction, this product carries a LIMITED ONE-YEAR WARRANTY from the date of delivery. This limited warranty only applies to World Market brand furniture, and not to other furniture brands sold on World Market's website.

Where applicable, the limited warranty provides coverage for:

1. **Manufacturing, Material and Workmanship Defects:** Includes defects related to core frame/structure substrates (wood and metal); cracking, splitting, or complete breakage of hardwood, plywood or medium density fiberboard (MDF); cracking, splitting or lifting of wood veneer or laminated top surfaces caused by process failure; broken welds or improperly coated metal frame components (powder coating or painted); fabric or leather material defects including tears, misprints, fraying, crease marks, skip stitches or open seams; support webbing material and sinuous spring defects or damage, including method of attachment to frame; and other component failures that are a direct result of manufacturing or workmanship defects.
2. **Cushions & Cushions with Enclosed Steel Pocket Coils:** Failed or ruptured steel pocket coils enclosed inside of seat cushions, or loss of resiliency from a material breakdown of foam or fiber filling, which should not be confused with softening or settling during normal use.
3. **Leather:** Splitting or cracking of leather material. NOTE: The warranty does NOT cover natural hide markings, variations in the leather color or grain due to the authentic natural properties of processed cowhide leather.
4. **Bonded Leather or Bi-cast Leather:** Separation of the polyurethane coating, peeling or cracking of the inner layer or at the bonded seam edges (bi-cast straps).
5. **Furniture Components (Hardware & Mechanisms):** Includes defects to pre-installed components or hardware provided to the customer for assembly such as office chair hydraulic lifts, lift mechanisms, metal bases and casters, swivel plate mechanisms; for drawers, metal glides, handles/knobs; for doors, hinges, magnetic latches; and other components such as bent or stripped threaded leg posts and adjustable levelers. For missing, damaged, corroded, or misplaced hardware components such as bolts or washers, please contact Customer Service at: 877-967-5362.

This LIMITED ONE-YEAR WARRANTY does NOT cover:

1. Damage due to mishandling during transportation from store or transportation without original protective packaging.
2. Abuse, negligence (product misuse) or wear and tear that may result in or from:
 - a. **Wood & Veneer:** Mishandling, exposure to moisture, peeling or discoloration caused by exposure to moisture or excessive sunlight, heat; splintered, dented or nicked panels, legs or component edges or paint/finish blemishes; or treatment with corrosive chemicals (dyes, inks, paints or harsh cleaning products).
 - b. **Fabric & Leather (Including Bonded or Bi-Cast Leathers):** cuts, punctures, tears, burns, pet damage, or treatment with corrosive chemicals (dyes, inks, paints or harsh cleaning products), exposure to direct sunlight, fire, high heat, water, or any bright light source (natural or artificial) that may cause splitting, peeling or flaking with time.
 - c. **Foam (Cushions):** Flattening, relaxing or settling/softening of foam components that comes with normal use.
 - d. **Hardware Components:** improper installation or misuse/substitution of hardware components not defined in the Assembly Instructions for the product (if applicable)
3. Damage due to environmental exposure to direct sunlight, fire, high heat, water or extreme humidity, any bright light source (natural or artificial), or any environment that the product is not intended for.
4. This warranty is applicable for indoor furniture products purchased for residential use only.

For additional information on returns, please visit: <https://www.worldmarket.com/customer-service/return-policy.html>

All products sold at World Market are NOT FOR COMMERCIAL USE and are intended for residential use only. Products purchased for commercial use will VOID all warranty provisions as listed above.

Any claims under this LIMITED ONE-YEAR WARRANTY are valid and applicable only as to the original purchaser and must be accompanied by proof of purchase. Warranty claims should be submitted to a World Market store or through World Market Customer Service Call Center, Toll Free at 877-967-5362.

For valid warranty claims, World Market will repair or replace the product, or offer a full or partial credit, in the sole discretion of World Market. This LIMITED ONE-YEAR WARRANTY gives you specific legal rights and you may also have other rights which vary from state to state.

(INDOOR FURNITURE 1LW_v1.7_041224)