


WORLD MARKET®

Assembly Instructions

Dustin Wood & Metal Inlay Cabinet

 
 
 
 
 
 
SKU-550247

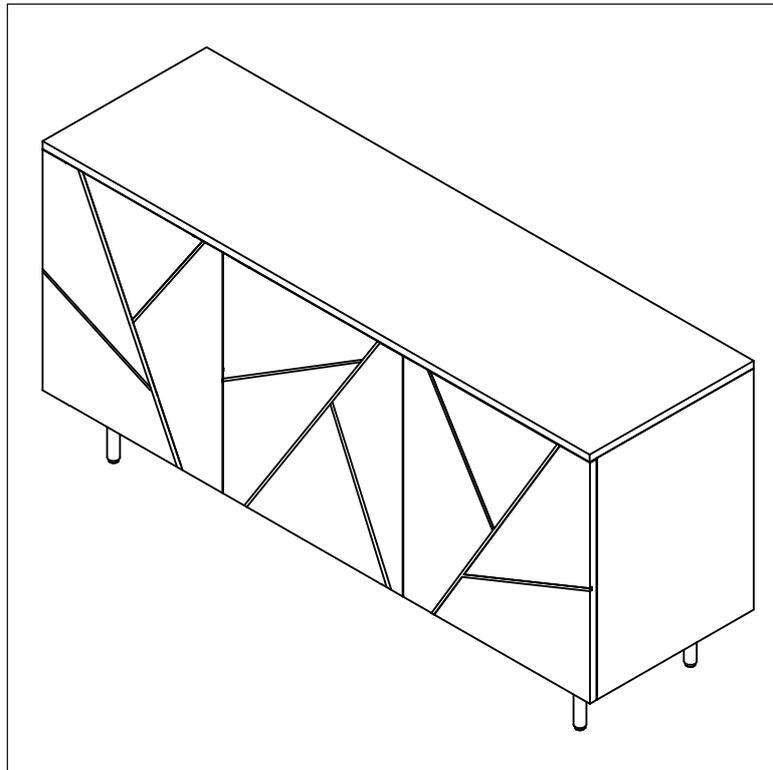


THANK YOU FOR YOUR PURCHASE. IF YOU HAVE ANY QUESTIONS
PERTAINING TO THE ASSEMBLY OF THIS FURNITURE PIECE, PLEASE CONTACT
THE NEAREST WORLD MARKET STORE.
IF YOU ARE NOT NEAR A STORE, PLEASE CALL OUR CUSTOMER SERVICE CALL
CENTER TOLL FREE AT 877- 967-5362 FOR ASSISTANCE.

All products sold at World Market are not for commercial use
and are intended for residential use only.

Component List

LABEL		DESCRIPTION	QTY
A		Left Door Panel	1
B		Right Door Panel	1
C		Middle Door Panel	1
D		Top Panel	1
E		Back Panel	1
F		Bottom Panel	1
G		Left Side Panel	1
H		Right Side Panel	1
I		Left Divider Panel	1
J		Right Divider Panel	1
K		Adjustable Shelves	3
L		Metal Legs	4
M		Middle Metal Leg	1

Hardware

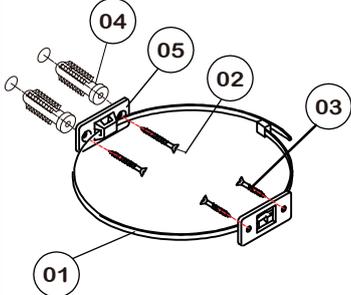
LABEL		DESCRIPTION	QTY																					
H-1		Bolts 1/4" x 5/8" x Ø15mm	20																					
H-2		Cam Lock Nuts	20																					
H-3		Cam Lock Screws	20																					
H-4		Wood Dowels	20																					
H-5		Wood Screws Ø4 x 15mm	28																					
H-6		Bolts 5/32 x 12mm	24																					
H-7		Shelf Pins	12																					
H-8		Plastic Caps	20																					
		<table border="1"> <thead> <tr> <th colspan="3">TIPPING KIT CHECK LIST</th> </tr> <tr> <th>CODE</th> <th>COMPONENT</th> <th>QTY</th> </tr> </thead> <tbody> <tr> <td>01</td> <td>NYLON RESTRAINT STRAP</td> <td>2</td> </tr> <tr> <td>02</td> <td>LONGER SCREW</td> <td>4</td> </tr> <tr> <td>03</td> <td>SHORTER SCREW</td> <td>4</td> </tr> <tr> <td>04</td> <td>PLASTIC ANCHOR</td> <td>4</td> </tr> <tr> <td>05</td> <td>MOUNTING BRACKETS</td> <td>4</td> </tr> </tbody> </table>	TIPPING KIT CHECK LIST			CODE	COMPONENT	QTY	01	NYLON RESTRAINT STRAP	2	02	LONGER SCREW	4	03	SHORTER SCREW	4	04	PLASTIC ANCHOR	4	05	MOUNTING BRACKETS	4	1 SET
TIPPING KIT CHECK LIST																								
CODE	COMPONENT	QTY																						
01	NYLON RESTRAINT STRAP	2																						
02	LONGER SCREW	4																						
03	SHORTER SCREW	4																						
04	PLASTIC ANCHOR	4																						
05	MOUNTING BRACKETS	4																						

Tool List

LABEL		DESCRIPTION	QTY
T-1		Allen Key 110mm x 30mm	1
T-2		Screw Driver (Not Provided)	1

Assembly Preparation

Before Beginning:

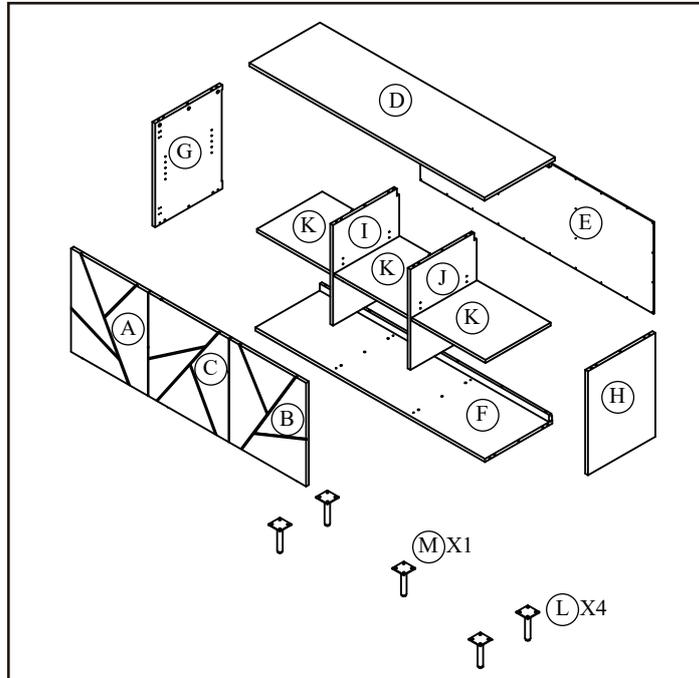

Unpack all hardware bags and components to ensure you have all parts-.



Read instructions, cover to cover.



Have 2 adults on hand for assembly.



Do not assemble on flooring or carpet.



Assemble on a clean non-marring surface (packing foam).



Save all packaging until finished.




- In case of missing parts, please contact your nearest World Market store or call our customer service call center at call 1-877-967-5362.

Assembly Steps

Step 1

(H-1)  Bolts 1/4"x5/8"xØ15 20 PCS

(T-1)  Allen Key 110mm x 30mm 1 PC

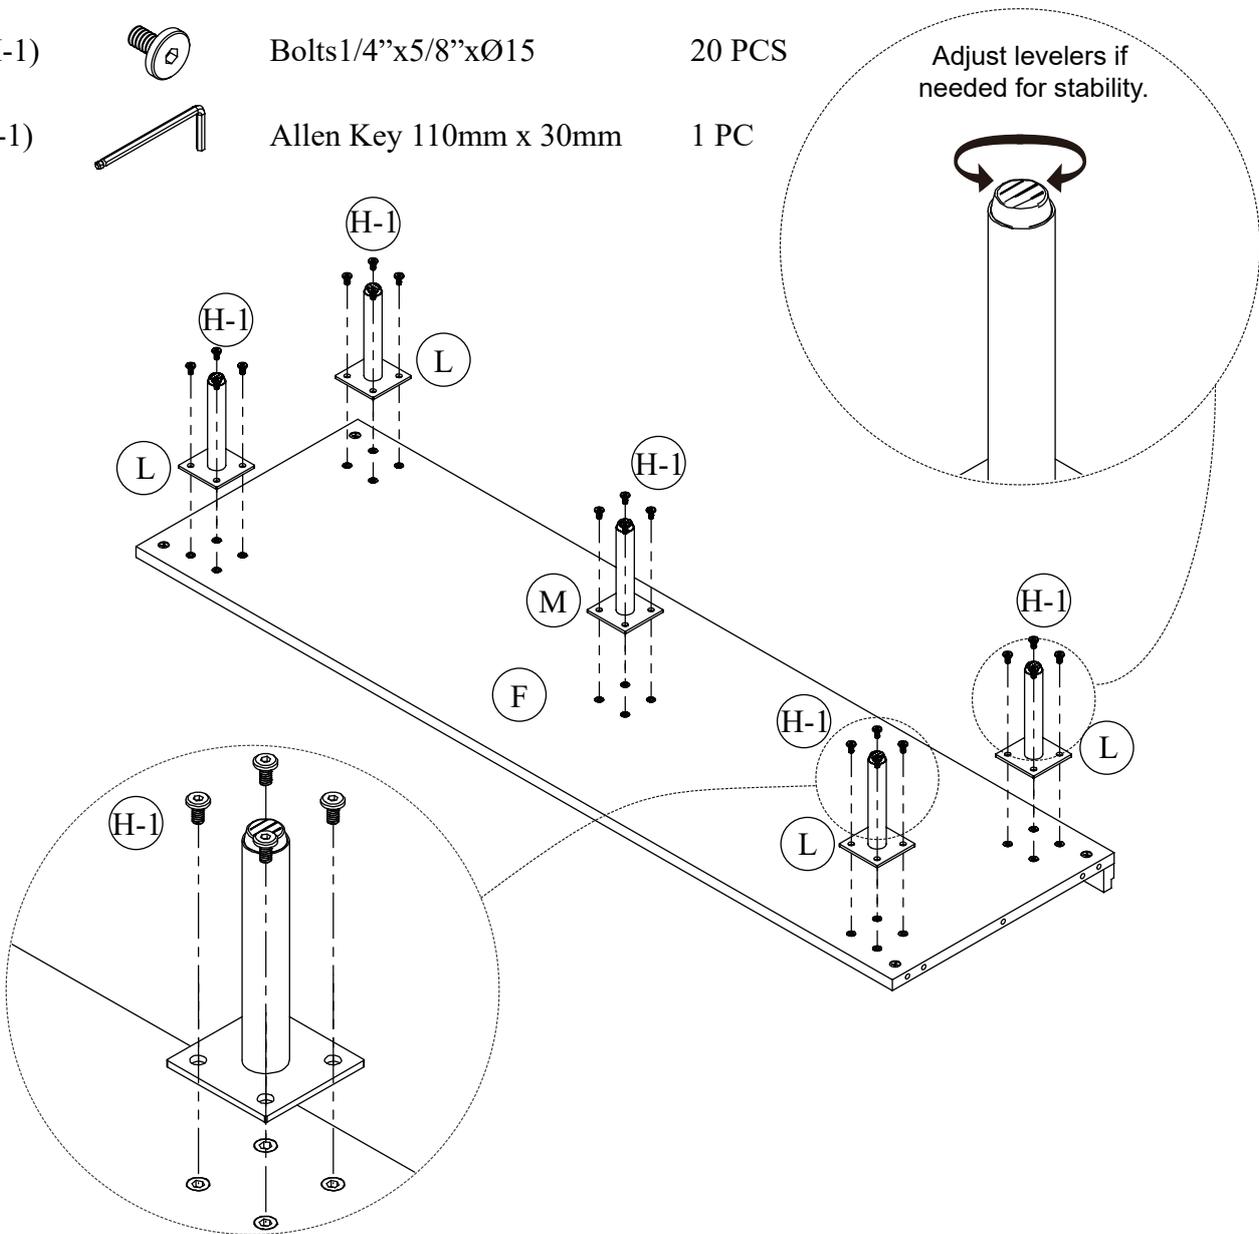

Position Metal Legs (L) and Middle Metal Leg (M) to corners and the center of Bottom Panel (F);
Secure by using Bolts (H-1) and fully tighten all bolts by Allen Key (T-1).


Step 2

(T-2)  Screw Driver (Not Provided) 1 PC

(H-2)  Cam Lock Nuts 4 PCS

(H-3)  Cam Lock Screws 4 PCS

(H-4)  Wood Dowels 6 PCS

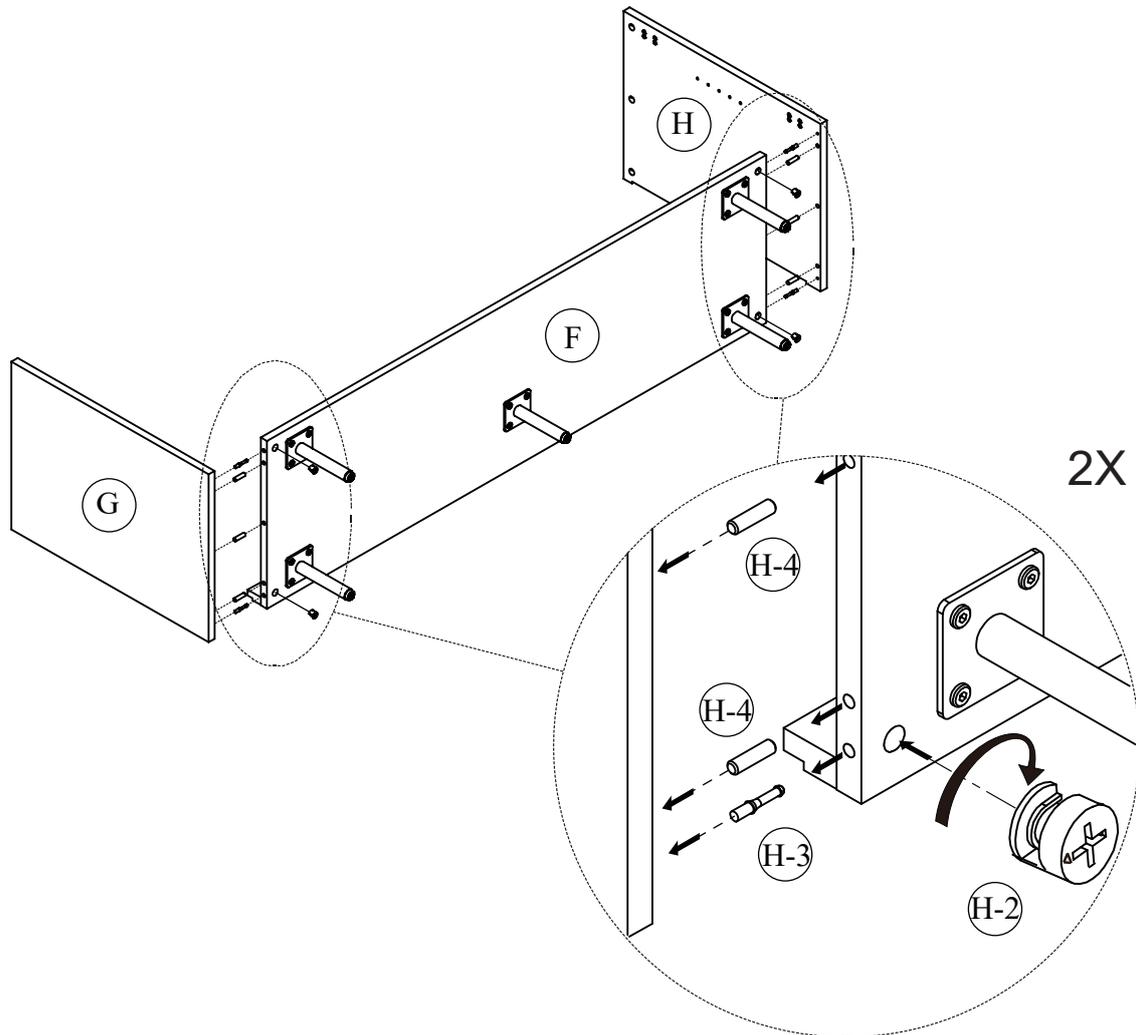

Install Cam Lock Screws (H-3) first then insert the Wood Dowels (H-4) on the Left and Right Side Panels (G&H). Fit the holes in the edge of the Bottom Panel (F) over the Cam Lock Screws (H-3) and Wood Dowels (H-4). Install Cam Lock Nuts (H-2) and tighten by turning clockwise using Screw Driver (T-2). Must follow Cam Lock Nuts (H-2) position before tighten.


Step 3

(T-2)  Screw Driver (Not Provided) 1 PC

(H-2)  Cam Lock Nuts 4 PCS

(H-3)  Cam Lock Screws 4 PCS


(H-4)  Wood Dowels 6 PCS

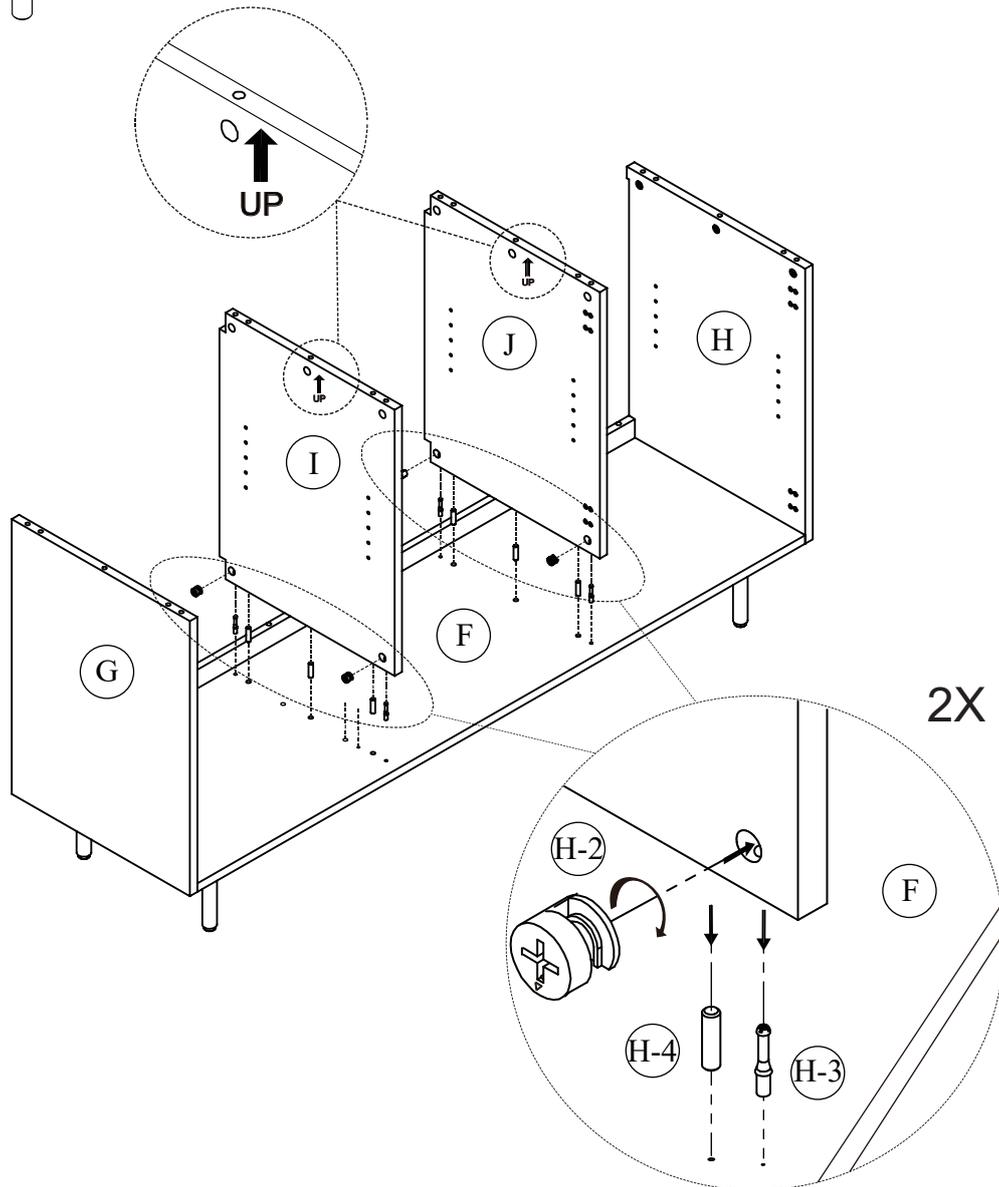

Install Cam Lock Screws (H-3) first, then insert the Wood Dowels (H-4) on the Bottom Panel (F). Fit the holes in the edge of the Left and Right Divider Panels (I&J) over the Cam Lock Screws (H-3) and Wood Dowels (H-4). Install Cam Lock Nuts (H-2) and tighten by turning clockwise using Screw Driver (T-2). Must follow Cam Lock Nuts (H-2) position before tighten.

Step 4

(T-2)		Screw Driver (Not Provided)	1 PC
(H-2)		Cam Lock Nuts	12 PCS
(H-3)		Cam Lock Screws	12 PCS
(H-4)		Wood Dowels	8 PCS

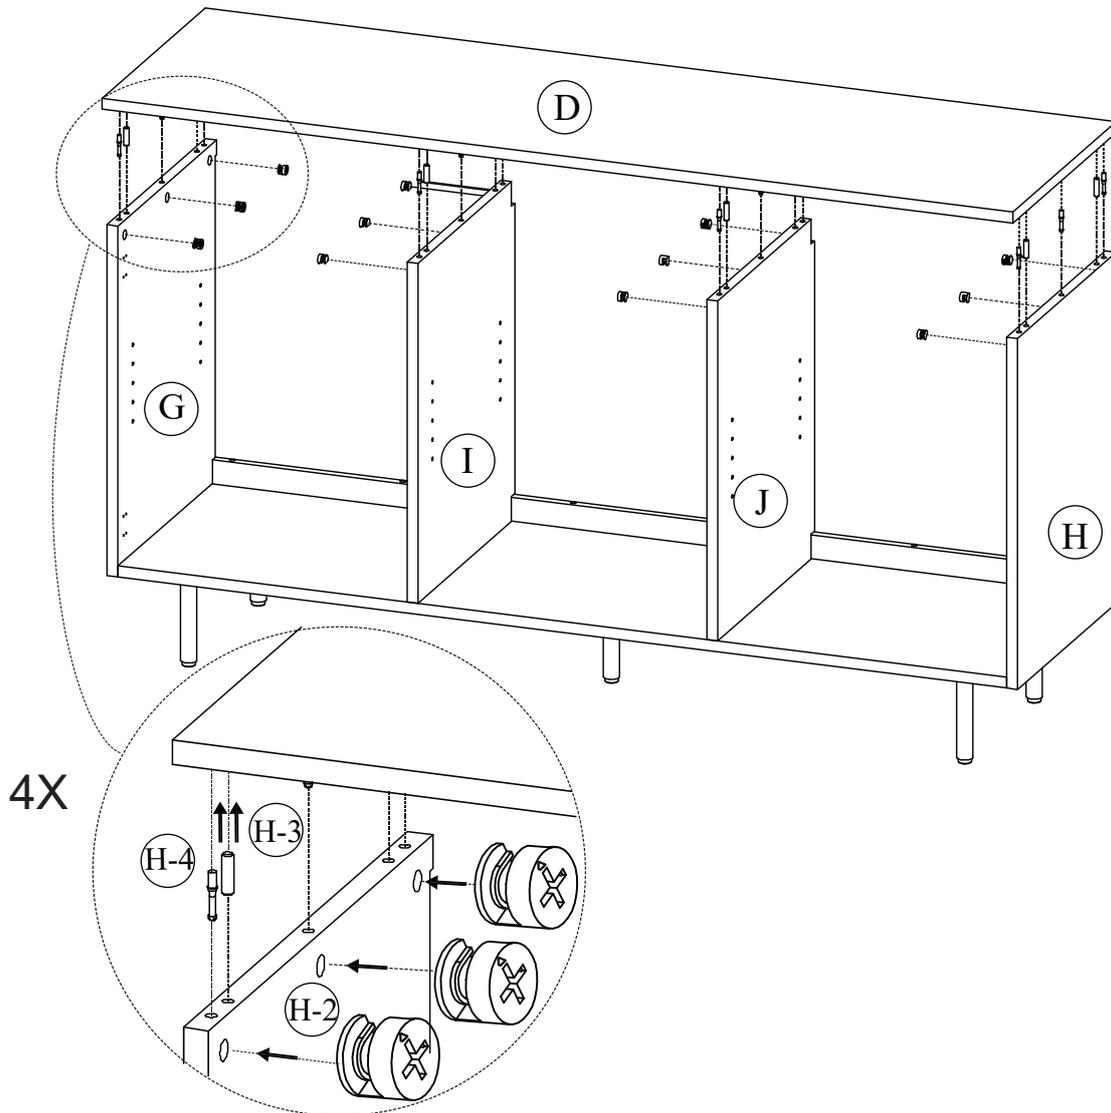


Install Cam Lock Screws (H-3) first, then insert the Wood Dowels (H-4) on the Top Panel (D). Fit the Cam Lock Screws (H-3) and the Wood Dowels (H-4) on the Top Panel (D) to the holes in the edge of the Left & Right Side Panels (G&H) and Left & Right Divider Panels (I&J). Install Cam Lock Nuts (H-2) and tighten by turning clockwise using Screw Driver (T-2). Must follow Cam Lock Nuts (H-2) position before tighten.

Step 5

(T-2)  Screw Driver (Not Provided) 1 PC

(H-5)  Wood Screws 15 x Ø4 28 PCS

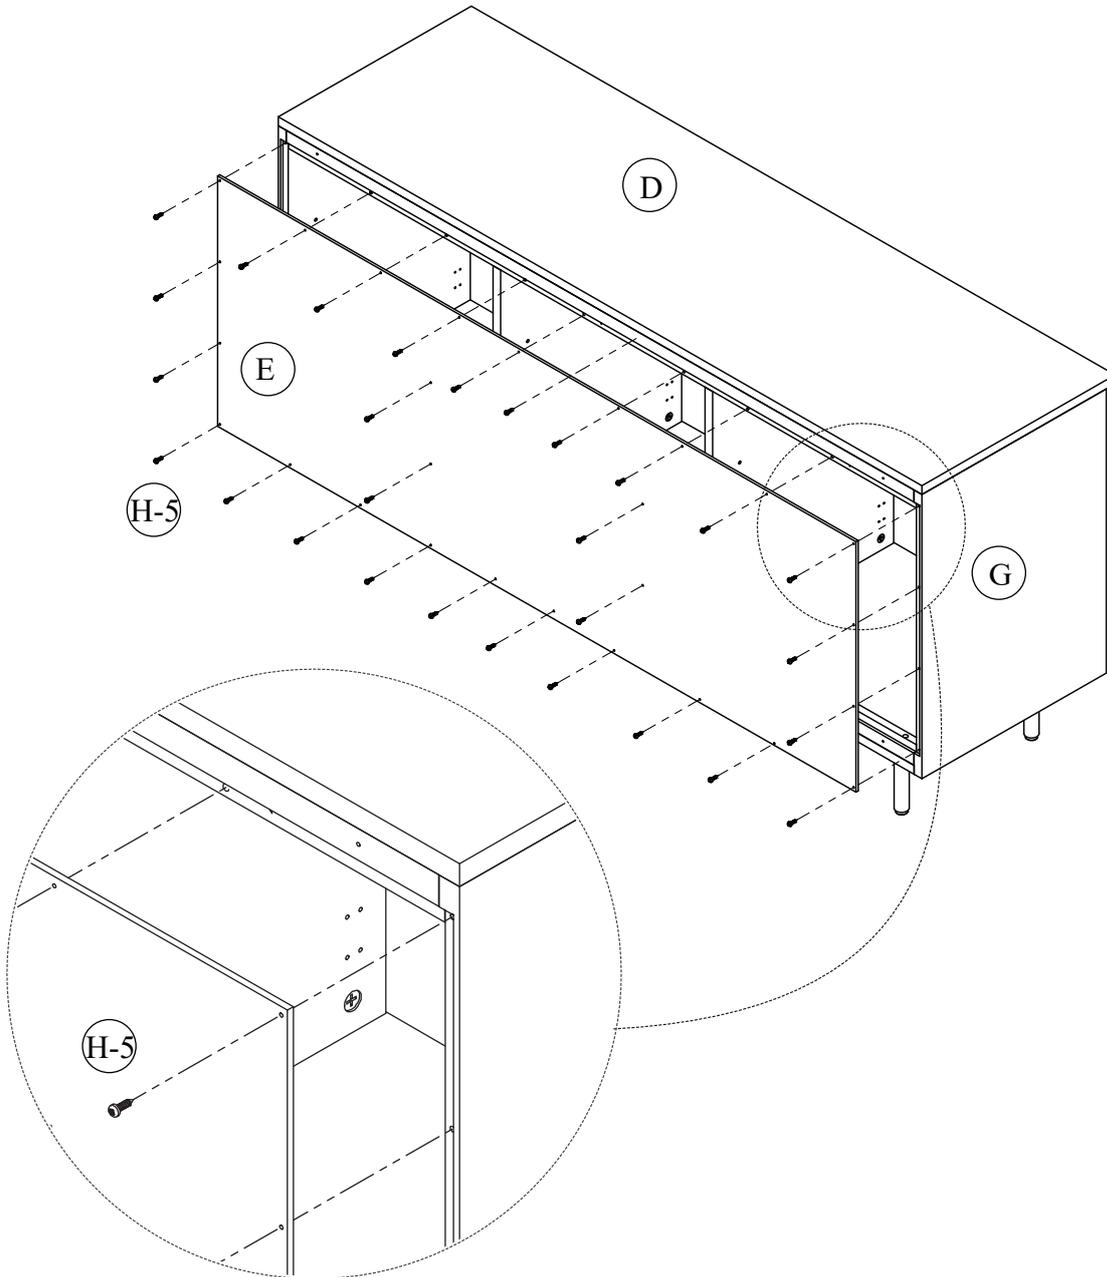


Attach Back Panel (E) into pre-assembled unit (Step 4). Secure using Wood Screws (H-5) and fully tighten by a Screw Driver (T-2).

Step 6


(T-2)  Screw Driver (Not Provided) 1 PC

(H-6)  Bolts 12 x Ø4 24 PCS

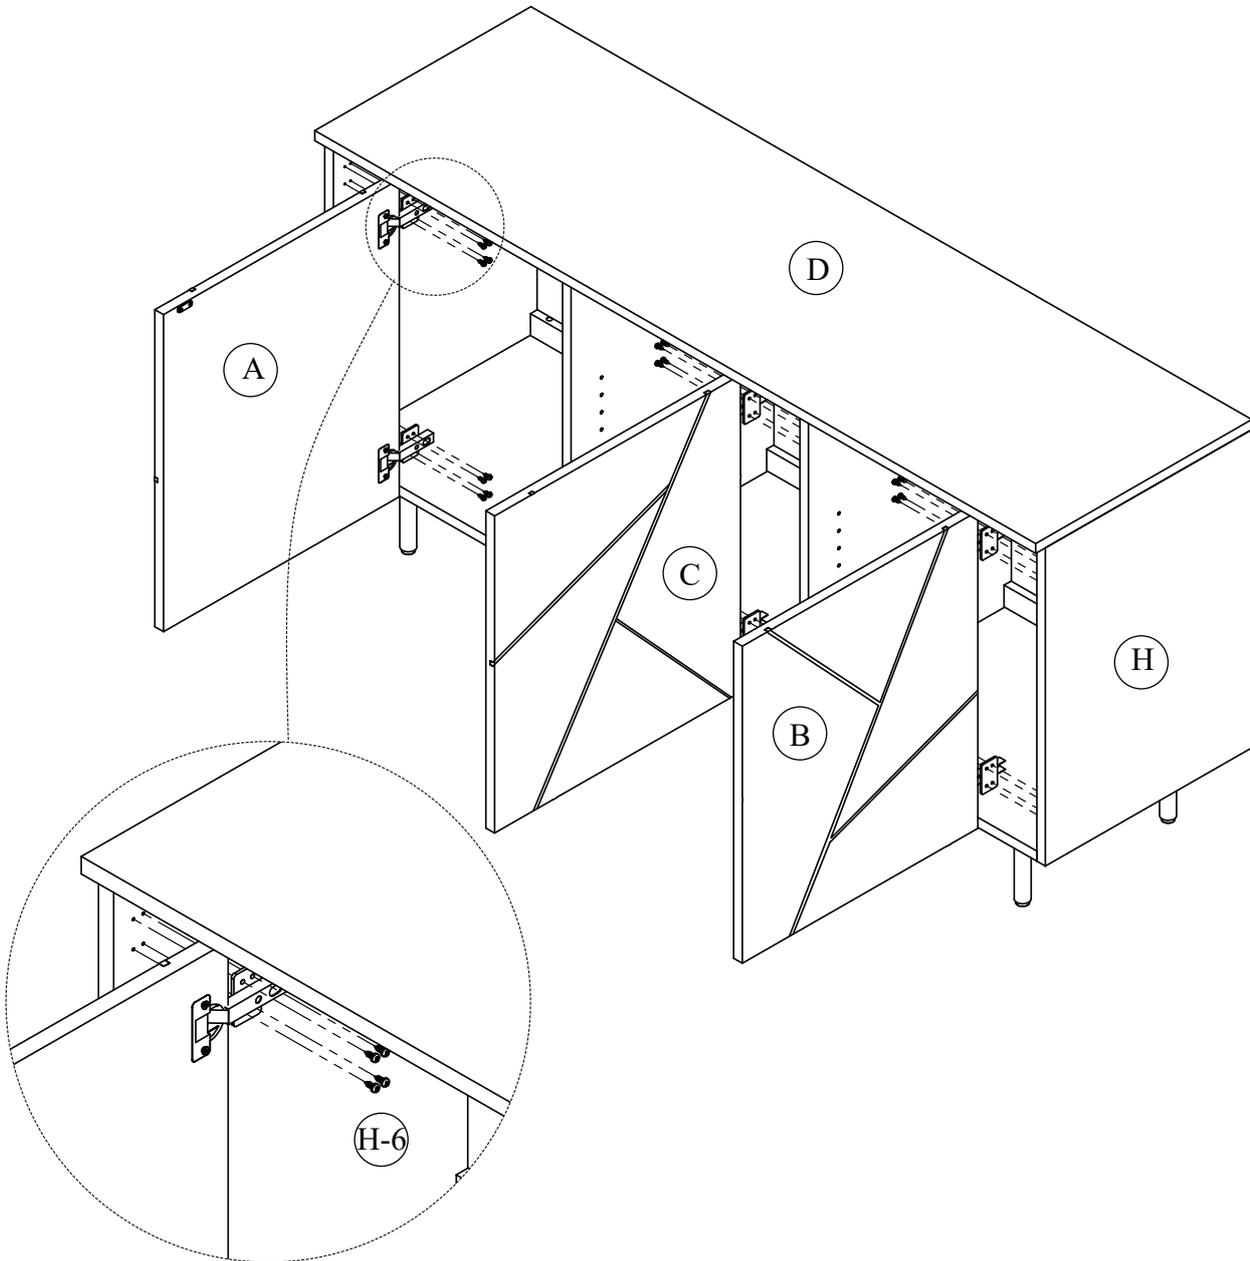


Assemble Left Door Panel (A), Right Door Panel (B), and Middle Door Panel (C) to pre-assembled unit (Step 5). Secure using Bolts (H-6) and fully tighten by a Screw Driver (T-2).

Step 7

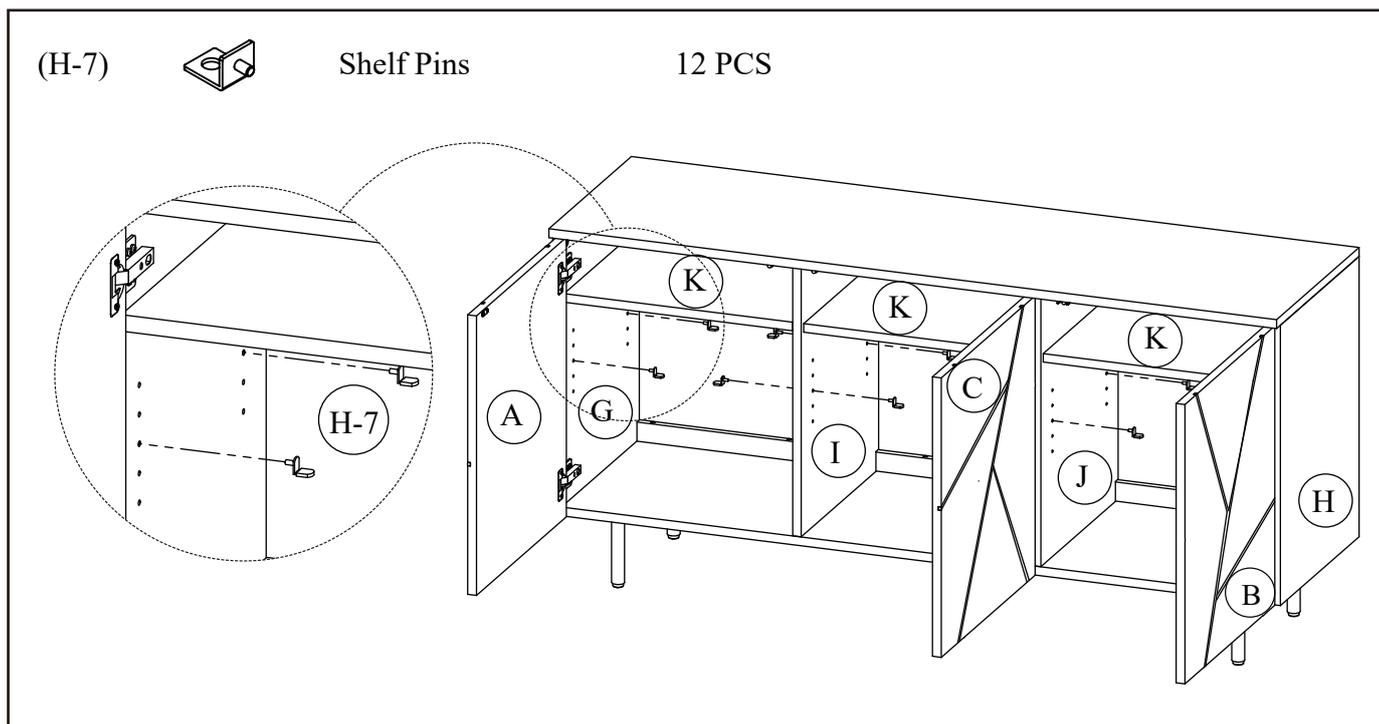


Insert Shelf Pins (H-7) into Left and Right Side Panels (G&H) and Divider Panels (I&J). Then insert Adjustable Shelves (K) into assembled unit.

Step 8

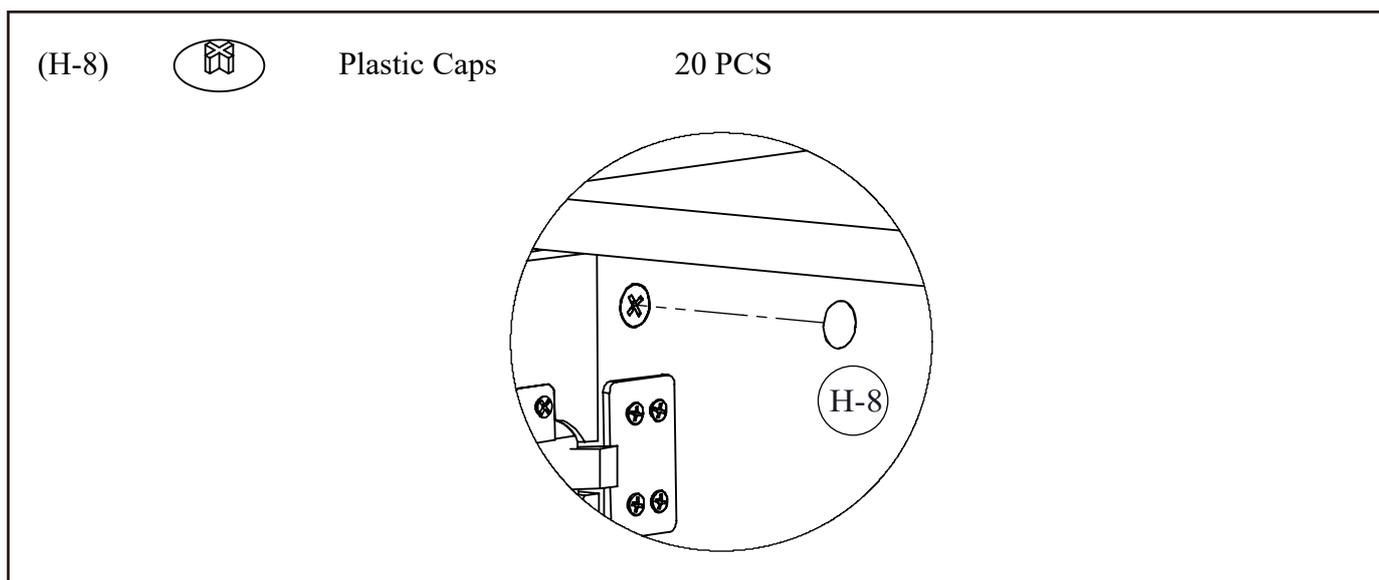


Attach Plastic Caps (H-8) into the holes of Cam Lock by hand.
Product is now completely assembled.

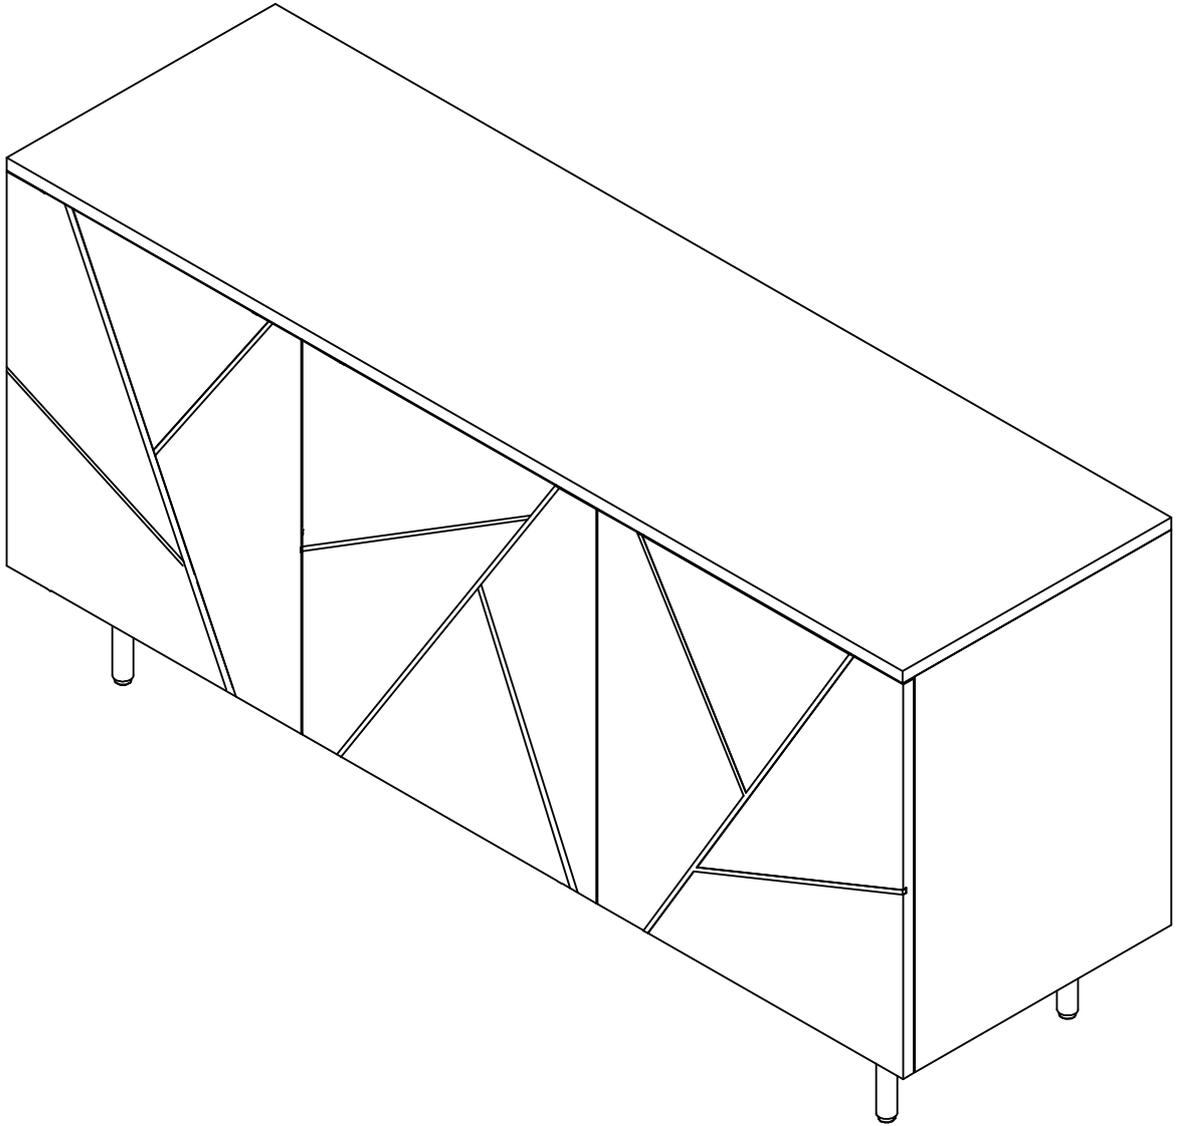

Dustin Wood & Metal Inlay Cabinet is now ready to use.

Hinge Adjustment Guide

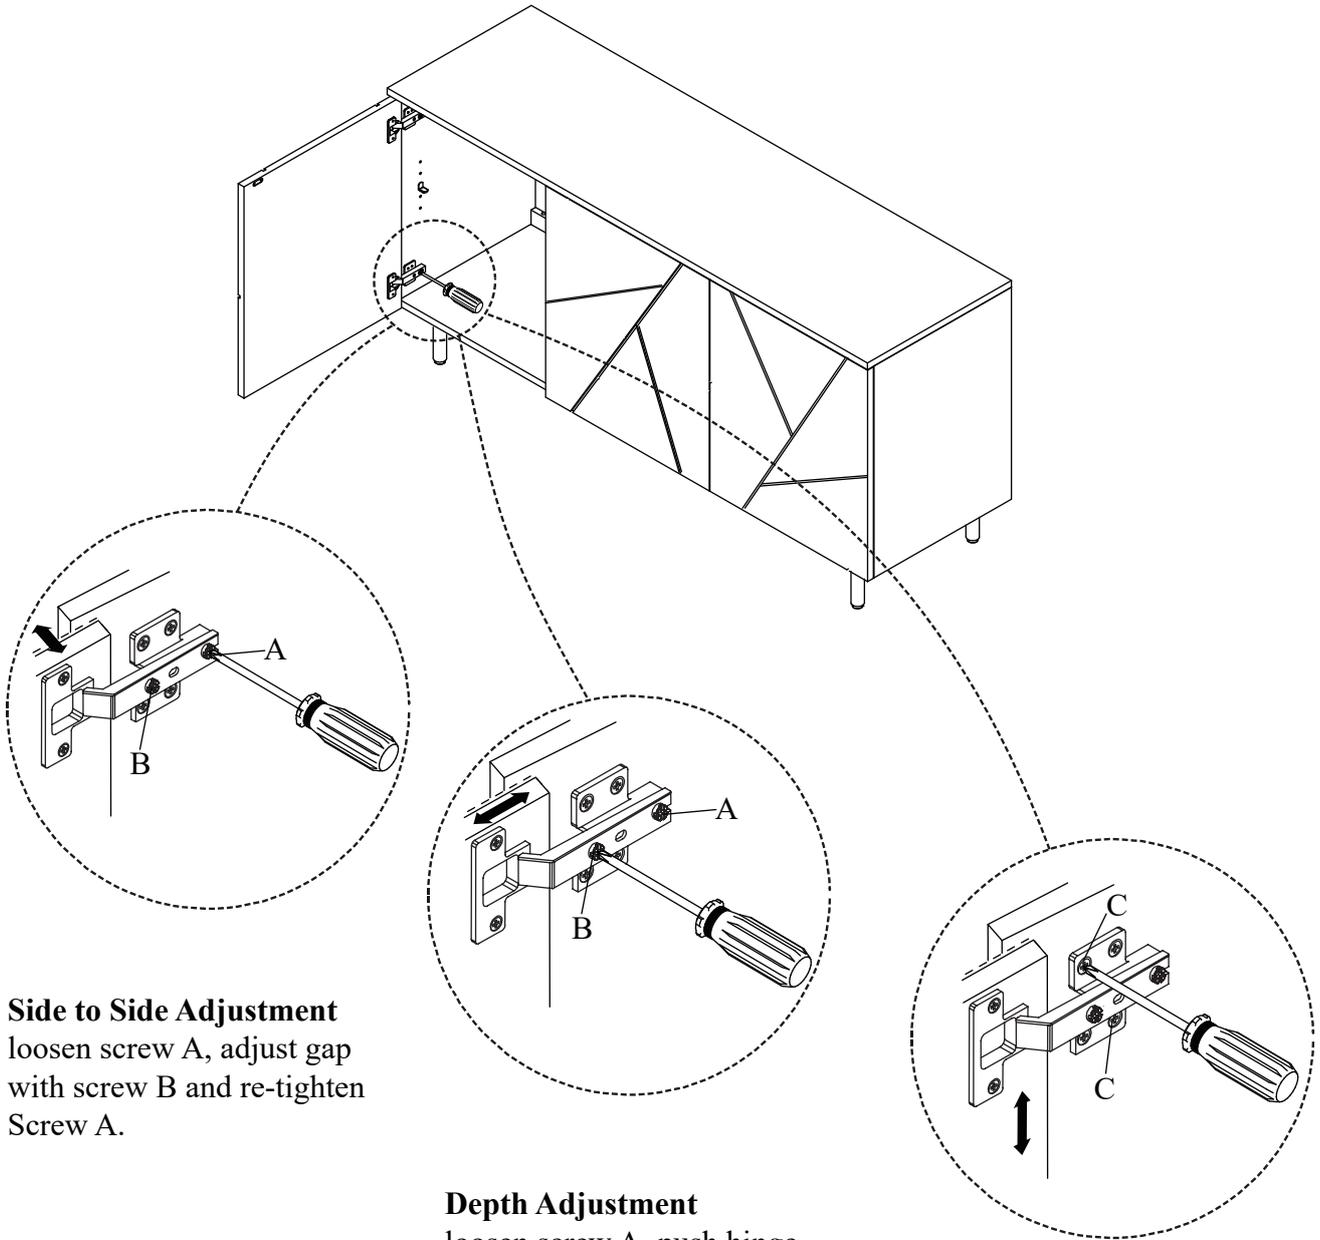


Side to Side Adjustment
loosen screw A, adjust gap
with screw B and re-tighten
Screw A.

Depth Adjustment
loosen screw A, push hinge
arm forwards or backwards,
re-tighten screw A and secure
Screw B with a 1/4 turn
clockwise.

Height Adjustment
loosen screw C, adjust door
height and re-tighten screw C.

The doors can be adjusted in all 3 directions to create an even fit between doors on this cabinet. Follow the appropriate directions above to adjust door(s) as necessary.

Push-Latch Adjustment Guide

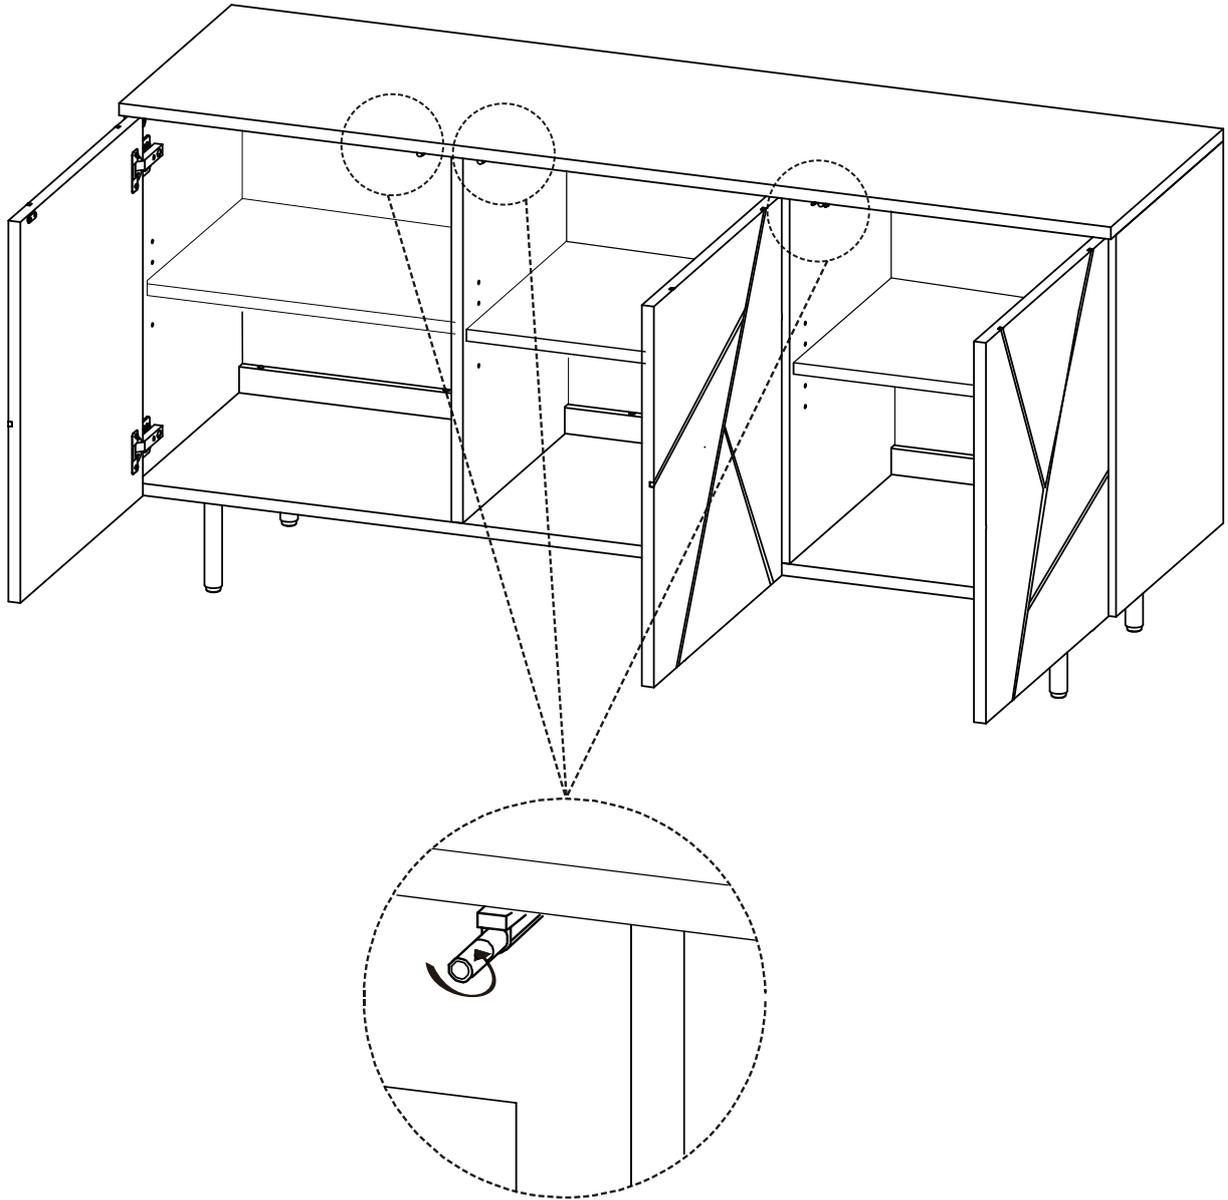

If any door failed to close properly, adjust the length of the magnetic latch's pin by turning it counterclockwise, as shown. The push pin's length will extend to allow the lock to engage. You will hear a soft click. Door will close.

Care & Maintenance



 
- Do not put hot items directly on furniture surface.



- Do not clean furniture with harsh cleansers or polish.



- Do not place furniture in direct sunlight.



- Do not place furniture near heating or cooling vents.



- Do not write on furniture without a padded barrier to protect the surface.



- Do not place furniture outside. For indoor use only.




- All products sold at World Market are not for commercial use and are intended for residential use only.



- Dust and pick-up spills using a clean, non-colored, lint-free, dry cloth.

Anti-Tip Measures

Warning - Children may be injured by tipping of furniture and the use of the Anti-Tip Kit is highly recommended. This Anti-Tip Kit is only a deterrent. It is not a substitute for proper adult supervision. Manufacturer and retailer assume no liability for improper installation or excess loads placed on screws, brackets, or straps. When properly installed, this restraint provides protection against unexpected tipping of furniture. This Anti-Tip Kit **MUST** be installed into the wall using proper mounting hardware OR into a wall stud using appropriate screws. Position of the Anti-Tip Kit depends on the product and the location of the wall studs. The hardware provided is not a comprehensive solution for all wall types. Be sure to consult a professional or your local hardware store to determine the hardware needed for your specific wall type (plaster, drywall, concrete, etc.).

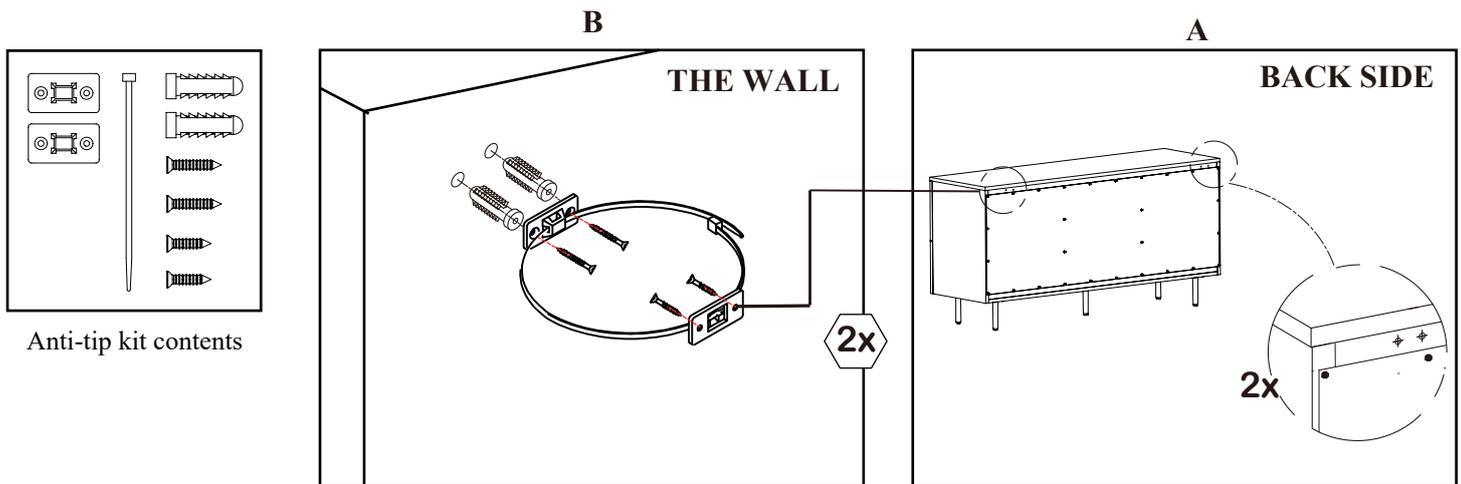


Anti-tip kit installation

⚠ WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb, or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label. Do not remove!

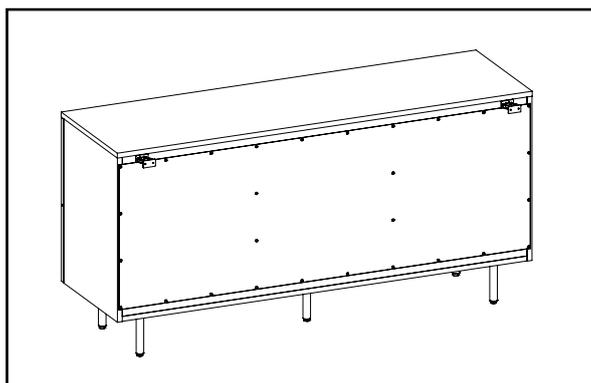

Using a second person to assist you, place the unit in the desired final location against a wall. It is suggested to use a stud finder to find wall studs along the length of the unit and roughly 1 inch below the top of the unit. Where possible, mark a drill hole position on the wall where there is a stud and Screws (02) in the location of the wall studs.

In a case where there is no wall stud, hold Brackets (05) on wall and mark the drill hole positions so that they are roughly 1 inch below the top of the piece. Using a drill with a drill bit roughly the diameter of the plastic Wall Anchors (04), drill pilot holes in marked positions. Insert the plastic Wall Anchors (04) into the holes until the tops are roughly flush with the wall. Align the holes and insert the Long Screws (02) through Brackets (05) and into the corresponding holes in the wall using a phillips head screwdriver (NOT INCLUDED).

Next, attach remaining 2 Mounting Brackets (05) to the back of the piece using Short Screws (03) so they align with Brackets installed on the wall. Loop Nylon Restraint Straps (01) through Mounting Brackets (05) on the furniture piece, then through Brackets on the wall and tighten until snug. Installation is now complete.

IMPORTANT: Check that the Wall Bracket is firmly screwed into the wall and the Cable Tie is snug.

If there is any hesitation, please consult a professional or your local hardware store.

WORLD MARKET LIMITED ONE-YEAR WARRANTY – Indoor Furniture

For your customer satisfaction, this product carries a LIMITED ONE-YEAR WARRANTY from the date of purchase. This limited warranty only applies to World Market brand furniture, and not to other furniture brands sold on World Market's website.

Where applicable, the limited warranty provides coverage for:

1. **Manufacturing, Material and Workmanship Defects:** Includes defects related to core frame/structure substrates (wood and metal); cracking, splitting, or complete breakage of hardwood, plywood or medium density fiberboard (MDF); cracking, splitting or lifting of wood veneer or laminated top surfaces caused by process failure; broken welds or improperly coated metal frame components (powder coating or painted); fabric or leather material defects including tears, misprints, fraying, crease marks, skip stitches or open seams; support webbing material and sinuous spring defects or damage, including method of attachment to frame; and other component failures that are a direct result of manufacturing or workmanship defects.
2. **Cushions & Cushions with Enclosed Steel Pocket Coils:** Failed or ruptured steel pocket coils enclosed inside of seat cushions, or loss of resiliency from a material breakdown of foam or fiber filling, which should not be confused with softening or settling during normal use.
3. **Leather:** Splitting or cracking of leather material. NOTE: The warranty does NOT cover natural hide markings, variations in the leather color or grain due to the authentic natural properties of processed cowhide leather.
4. **Bonded Leather or Bi-cast Leather:** Separation of the polyurethane coating, peeling or cracking of the inner layer or at the bonded seam edges (bi-cast straps).
5. **Furniture Components (Hardware & Mechanisms):** Includes defects to pre-installed components or hardware provided to the customer for assembly such as office chair hydraulic lifts, lift mechanisms, metal bases and casters, swivel plate mechanisms; for drawers, metal glides, handles/knobs; for doors, hinges, magnetic latches; and other components such as bent or stripped threaded leg posts and adjustable levelers. For missing, damaged, corroded, or misplaced hardware components such as bolts or washers, please contact Customer Service at: 877-967-5362.

This LIMITED ONE-YEAR WARRANTY does NOT cover:

1. Damage due to mishandling during transportation from store or transportation without original protective packaging.
2. Abuse, negligence (product misuse) or wear and tear that may result in or from:
 - a. **Wood & Veneer:** Mishandling, exposure to moisture, peeling or discoloration caused by exposure to moisture or excessive sunlight, heat; splintered, dented or nicked panels, legs or component edges or paint/finish blemishes; or treatment with corrosive chemicals (dyes, inks, paints or harsh cleaning products).
 - b. **Fabric & Leather (Including Bonded or Bi-Cast Leathers):** cuts, punctures, tears, burns, pet damage, or treatment with corrosive chemicals (dyes, inks, paints or harsh cleaning products), exposure to direct sunlight, fire, high heat, water, or any bright light source (natural or artificial) that may cause splitting, peeling or flaking with time.
 - c. **Foam (Cushions):** Flattening, relaxing or settling/softening of foam components that comes with normal use.
 - d. **Hardware Components:** improper installation or misuse/substitution of hardware components not defined in the Assembly Instructions for the product (if applicable)
3. Damage due to environmental exposure to direct sunlight, fire, high heat, water or extreme humidity, any bright light source (natural or artificial), or any environment that the product is not intended for.
4. This warranty is applicable for indoor furniture products purchased for residential use only.

For additional information on returns, please visit: <https://www.worldmarket.com/category/customer-service/returns.do>

All products sold at World Market are NOT FOR COMMERCIAL USE and are intended for residential use only. Products purchased for commercial use will VOID all warranty provisions as listed above.

Any claims under this LIMITED ONE-YEAR WARRANTY are valid and applicable only as to the original purchaser and must be accompanied by proof of purchase. Warranty claims should be submitted to a World Market store or through World Market Customer Service Call Center, Toll Free at 877-967-5362.

For valid warranty claims, World Market will repair or replace the product, or offer a full or partial credit, in the sole discretion of World Market. This LIMITED ONE-YEAR WARRANTY gives you specific legal rights and you may also have other rights which vary from state to state.

(INDOOR FURNITURE 1LW_v1.5_051122)