


ASSEMBLY INSTRUCTION

Sunpan Product Name: BAXLEY DINING CHAIR

PARTS LIST Before you begin, please layout all parts and ensure you have the correct count.				
PARTS	DESCRIPTION	QUANTITY	ILLUSTRATION	
А	Cushion Seat	1		
В	Back Leg(R&L)	2		
С	Back Apron	1		
D	Back Rest	1		
E	Front Leg(R&L)	2		
F	Screw(Ø6*40MM)	10	••••••••••••••••••••••••••••••••••••••	
G	Screw(Ø6*60MM)	4		
Н	S.Washer(1/4")	14		

I	F.Washer(1/4")	10	•
J	Allen Key M4	1	
К	Screw(Ø4*32MM)	2	**###################################
L	Dowel(Ø10*35MM)	2	

ASSEMBLY INSTRUCTIONS STEPS DESCRIPTION ILLUSTRATION Insert the Front Leg®(got 4x hole marking)with Cushion Seat(A)by inserting (E) F.Washer(1/4")(I),S.Washer (1/4")(H)and 1 Screw(6*40mm)(F)by using Allen Key M4(J).Then,assemble the Front Leg(L)with same step and the same hardware. Then,insert the Dowel(10*35mm)(L)into 2 the Top of Back Leg(R&L)(B) as figure as the picture. After that,insert the Back Apron© with Back Leg(R&L)by inserting Screw(4*32mm)(K)by using Screwdriver(NOT PROVIDED). Then, screw up 3 the Back Leg(R&L)(B)with Cushion Seat(A)by inserting F.Washer(1/4")(I),S.Washer (B) (1/4")(H)and Screw(6*40mm)(F)by using Allen Key M4(J). Last,align the Back Leg(R&L)(B)hole and the Dowel(10*35mm)(L)with BackRest(D)hole.Then,scre w up with S.Washer(1/4")(H)and Screw(6*60mm)(G).

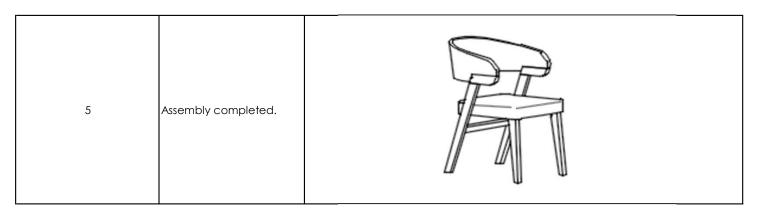

ASSEMBLY TIPS:

Please check parts and hardware before assembling. Follow each instruction step by step.

Place a protective pad or piece of cardboard on the floor while assembling your item on top of it.

Remove all parts from the carton and separate them into part numbers/groups as indicated on the part list.

Please follow instructions in the sequence as numbered to assure fast/easy assembly.

WARNING:

Don't attempt to repair or modify parts that are broken or defective - if you find a broken part please contact us for replacement. Keep all hardware parts out of the reach of children.

FURNITURE CARE:

Following these few basic steps will help to ensure that you enjoy your furniture for a long time:

Do not expose your furniture to direct sunlight, dampness or any heat, like a hot cup of coffee or tea. Always use a coaster.

Excessive exposure to sunlight may cause fading.

Excessive temperature and humidity or cold may cause cracking or splitting.

Dust with a clean, damp, lint free cloth.

Use a damp cloth with water or mild detergent to clean all surfaces - do not use chemicals or paint thinner which will fade the surface.

Place a piece of felt or a pad under the legs of your furniture to avoid scratching the floor.