

NOTICE

*Please make sure that you have all part indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

*This item may require periodic tightening.

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

*Before beginning assembly of product, make sure all part are present. Compare part with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.

*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (Not included): Screwdriver


CARE AND MAINTENANCE

Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies.

Objects placed on articles of furniture should rest on non abrasive material as to prevent damage to the wood finish. Objects whose composition consists of plastic and rubber are known to discolor and damage the wood surfaces on which they rest. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills.


How often you apply the wax depends on how much wear the furniture receives

Part List

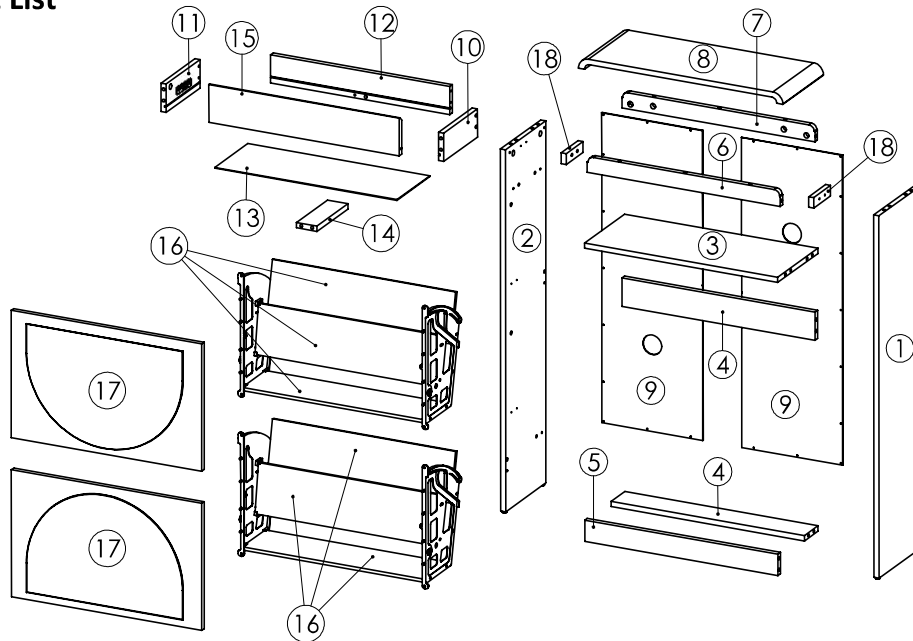

Model# STG3100

Product Dimensions: W 23,62" x D 9,44"x H 41,33"

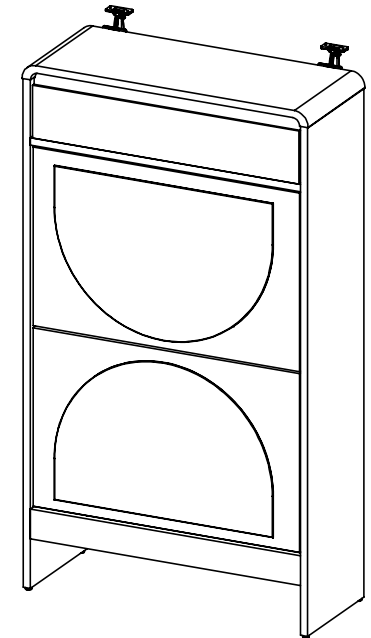

WARNING

TOTAL WEIGHT CAPACITY: 28 LBS

Top Load Capacity: 15 lbs


Drawer Load Capacity : 3 lbs


Shelf Load Capacity : 10 lbs

Warning: Do not stand on shoerack

Warning: Do not over torque bolt

Hardware List

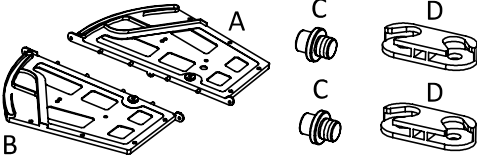HW1x25  Ø6x32 mm	HW2x25  Ø15x12 mm	HW3x20  Ø8x32 mm	HW4x5  Ø7x32 mm	HW6x45  Ø6x12 mm	HW8x15  Ø20 mm Oak
HW9x1  60x15 mm	HW10x4  Ø6x19 mm	HW13x2 		HW14x2  Ø66 mm	HW15x22  ØM3x12 mm

Anti-Tip Restraint Pack	
HW5x4  Ø6x15 mm	HW12x2SET  300 mm
HW7x4  Ø10x50 mm	HW11x4  Ø8x35 mm

Part List & HW

Piece	Description	Qty	Carton Call
1	Right side panel	1	1 of 1
2	Left side panel	1	1 of 1
3	Fixed shelf	1	1 of 1
4	Back Frame	2	1 of 1
5	Front bottom frame	1	1 of 1
6	Front top frame	1	1 of 1
7	Back top frame	1	1 of 1
8	Top panel	1	1 of 1
9	Back panel	2	1 of 1
10	Right side drawer	1	1 of 1
11	Left side drawer	1	1 of 1
12	Drawer back	1	1 of 1
13	Drawer base	1	1 of 1
14	Drawer base support	1	1 of 1
15	Front drawer	1	1 of 1
16	Shoe rack base	6	1 of 1
17	Front Shoe rack	2	1 of 1
18	Drawer resistance	2	1 of 1


Piece	Description	Qty	Carton Call
HW1	Cambolt Ø6x32 mm	25	1 of 1
HW2	Camlock Ø15x12 mm	25	1 of 1
HW3	Wooden dowel Ø8x32 mm	20	1 of 1
HW4	Screw M7 x 32 mm	5	1 of 1
HW5	Screw M6 x 15 mm	4	1 of 1
HW6	Screw M6 x 12 mm	45	1 of 1
HW7	Screw M10 x 50 mm	4	1 of 1
HW8	Cover Cap Sticker Ø20 mm	15	1 of 1
HW9	Stopper 60x15 mm	1	1 of 1
HW10	Screw M6 x 19 mm	4	1 of 1
HW11	Plug M8 x 35 mm	4	1 of 1
HW12	Anti-tip 300 mm	2	1 of 1
HW13	Shoe rack fan	2	1 of 1
HW14	Air Vent Cover Ø66 mm	2	1 of 1
HW15	Screw M3 x 12 mm	22	1 of 1

PREPARATION


Before beginning assembly of product, make sure all part are present. Compare part with part contents list and hardware contents list.

If any part is missing or damaged, do not attempt to assemble the product.


Estimated Assembly Time: 60 minutes.

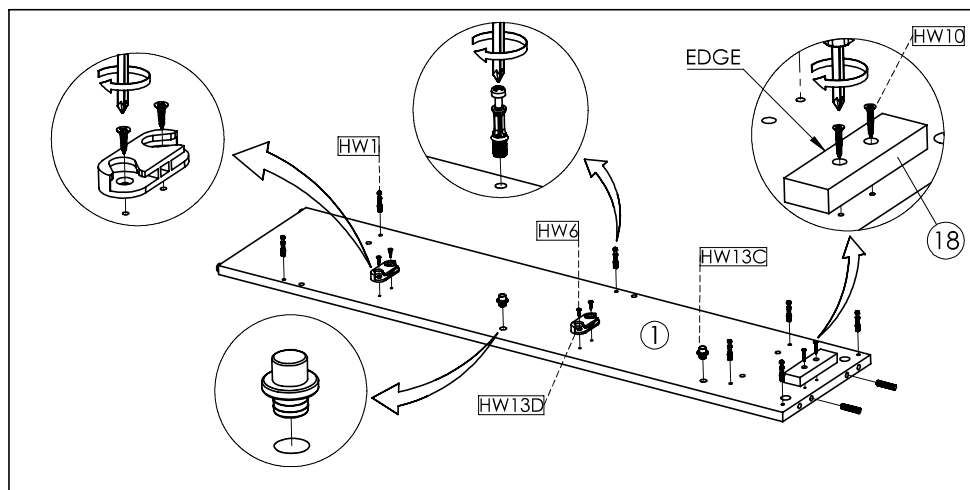


STEP1: Insert Cambolt (HW1), Shoe rack fan (HW13C), into Right Side Panel (1)
Continue with securing part of the Shoe rack fan (HW13D), into position as the above image, using screw M6x12mm (HW6).
Continue with securing part of the Drawer resistance (18), into position as the above image, using screw M6x19mm (HW10)

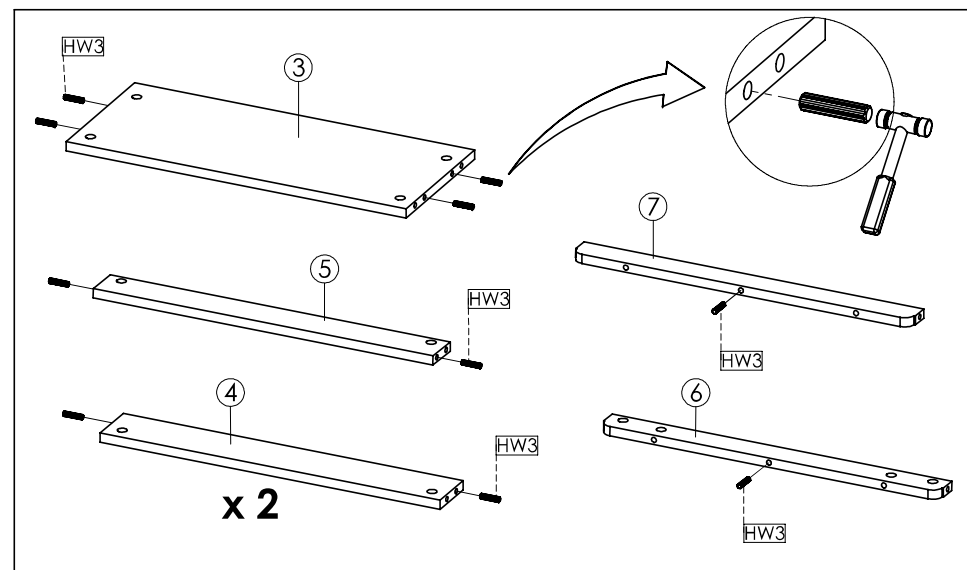





STEP2: Insert Wooden Dowel (HW3) into Fixed shelf (3), Back frame (4), Front Bottom Frame (5), Front Top Frame (6), And Back Top Frame (7)

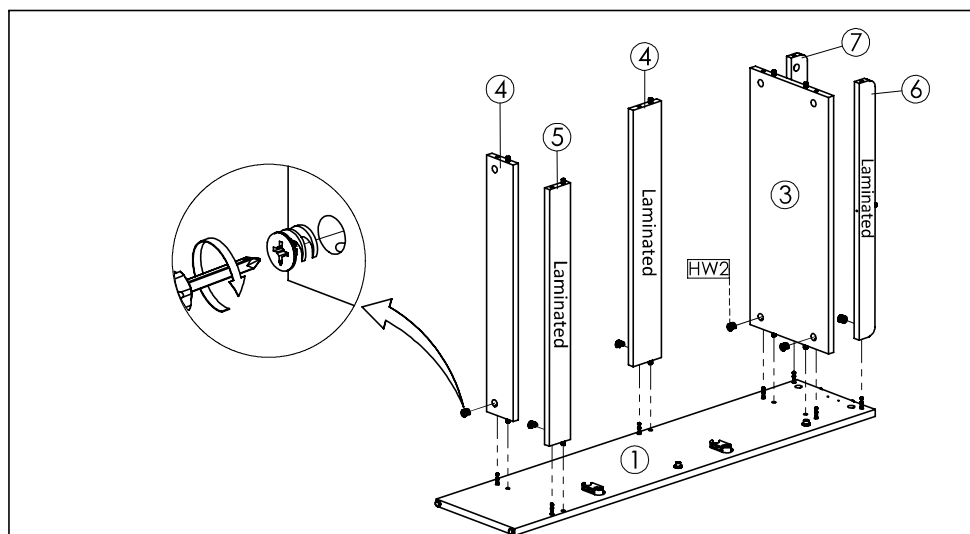


STEP3: Attach Fixed shelf (3), Back frame (4), Front Bottom Frame (5), Front Top Frame (6), And Back Top Frame (7) into Right side panel (1).
Secure with Camlock (HW2) and tighten it using screwdriver.

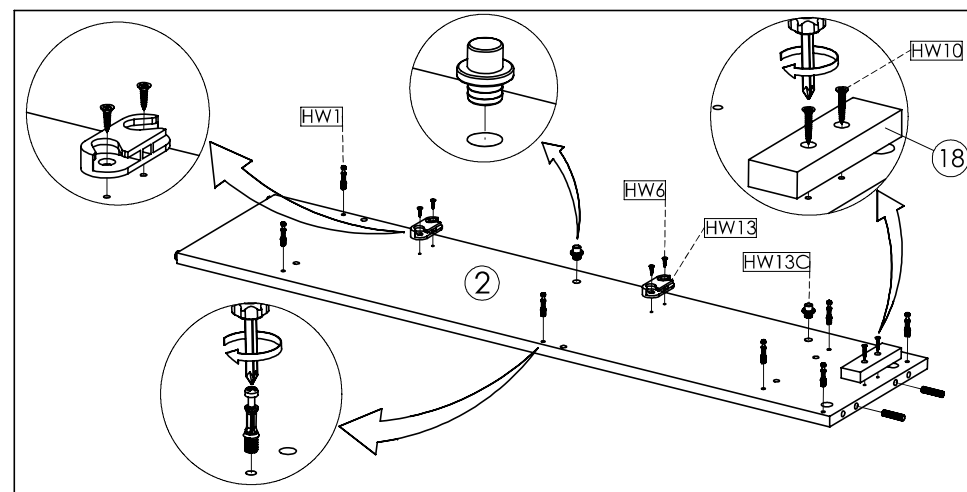


STEP4: Insert Cambolt (HW1), Shoe rack fan (HW13C), into Left Side Panel (2)
Continue with securing part of the Shoe rack fan (HW13D), into position as the above image, using screw M6x12mm (HW6).
Continue with securing part of the Drawer resistance (18), into position as the above image, using screw M6x19mm (HW10)

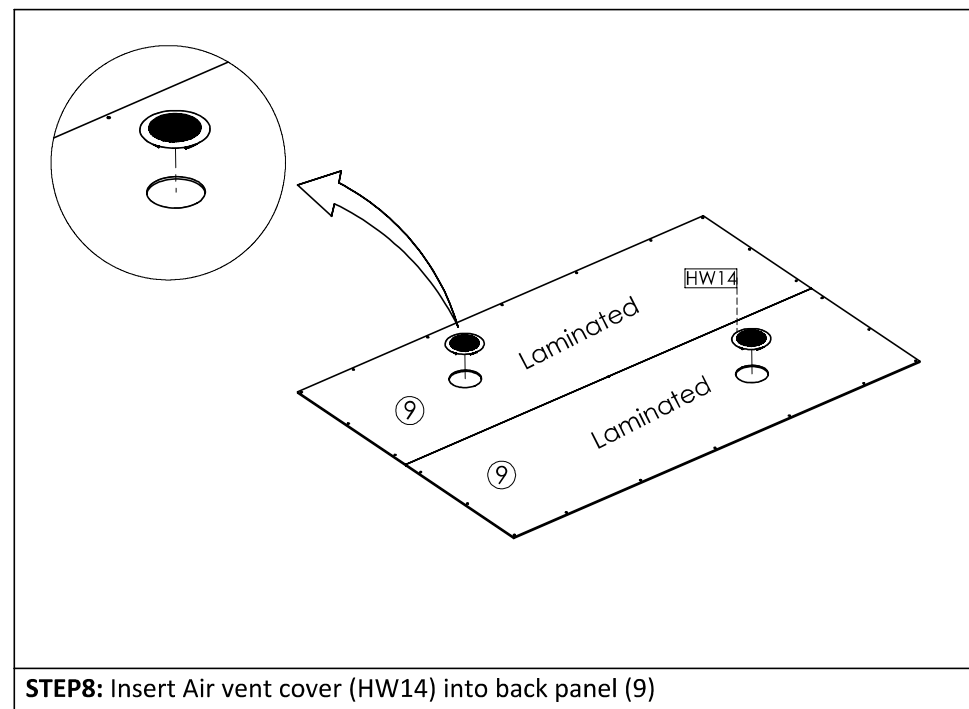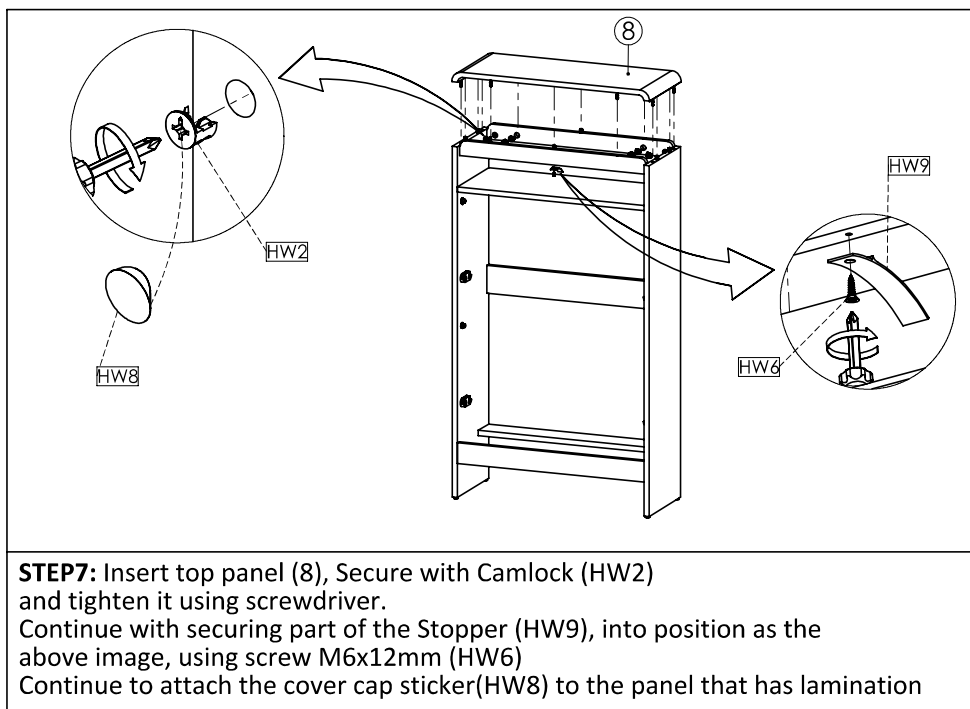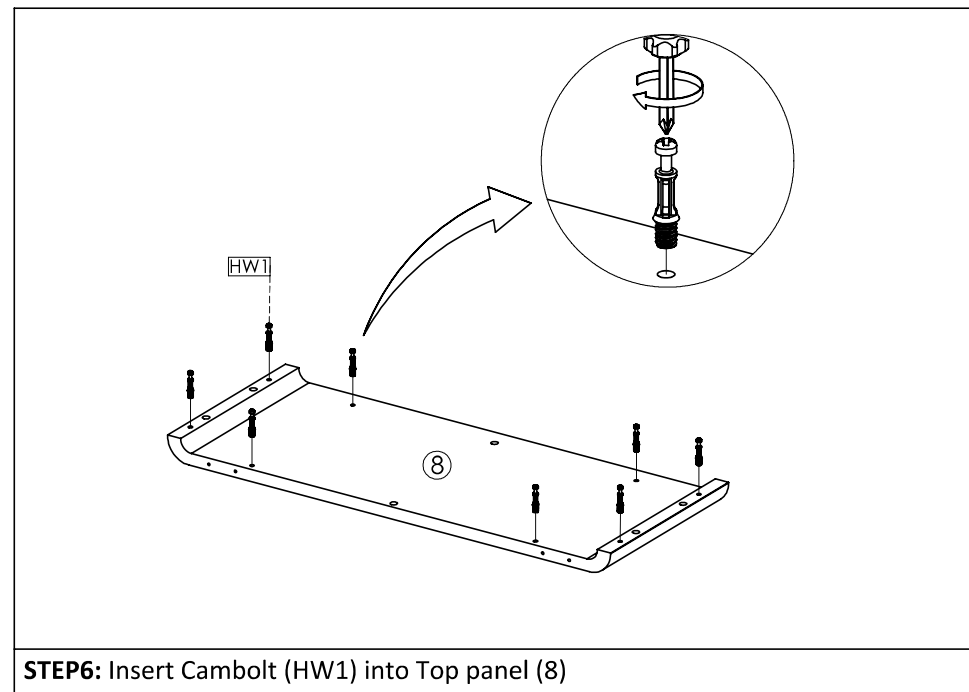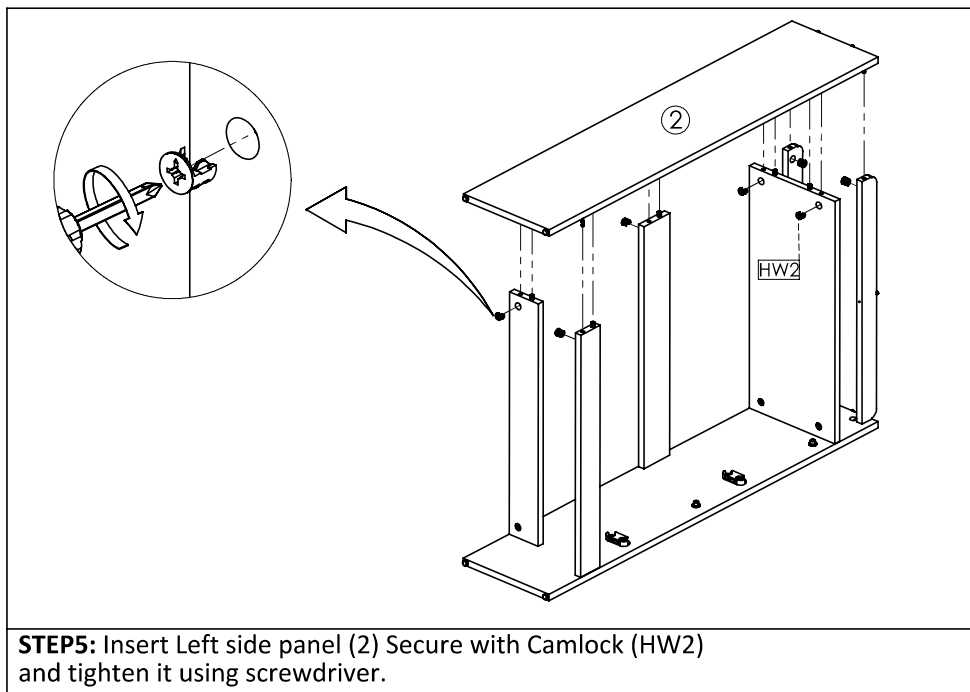


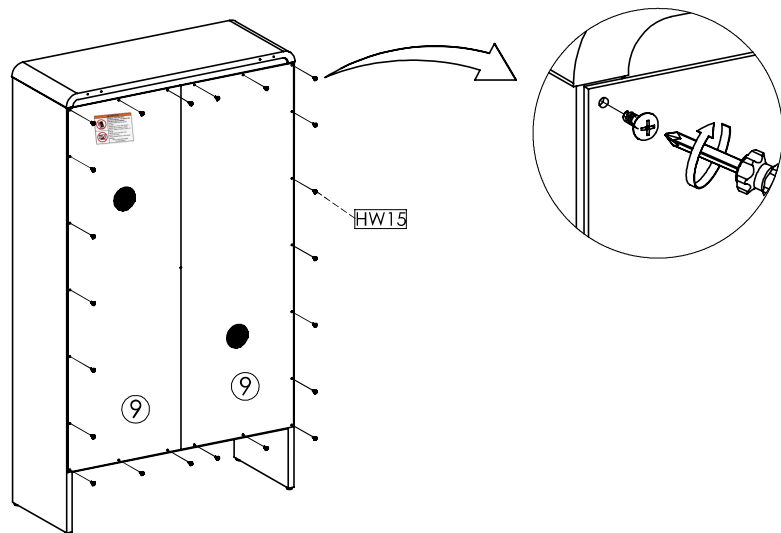


STEP9: Attach Back Panel (9), Secure with Screw M3 x 12 mm (HW15) and tighten it using screwdriver.

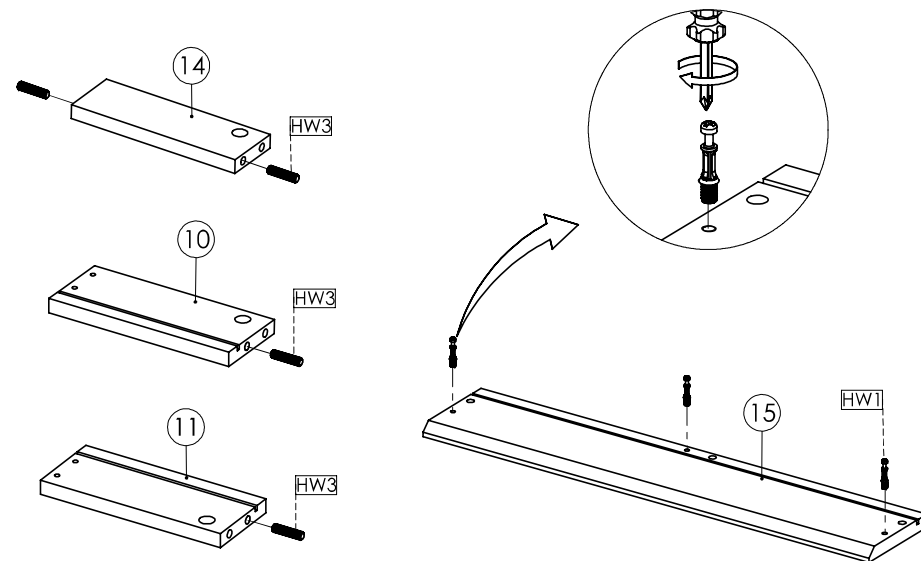





STEP10: Insert Cambolt (HW1) into Front drawer (15). Insert Wooden Dowel (HW3) into Side Drawers (10&11) And Drawer Base Support (14).

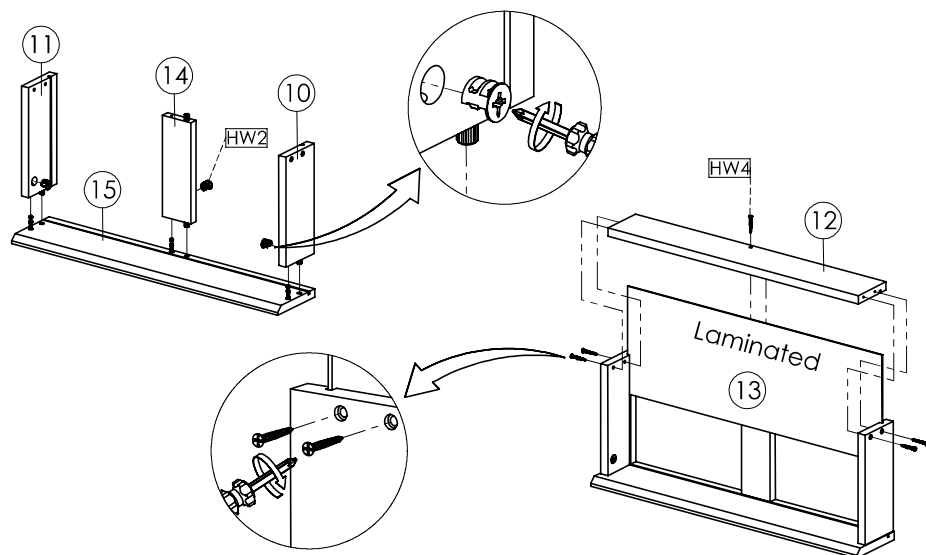

STEP11: Combine Side Drawers (10 & 11) and Support Drawer (14) into Front Drawer (15) then tighten camlock (HW2) using screwdriver. Insert Drawer base (13), then put Drawer Back (12) with laminated face facing upward then secure with Screw M7x32mm (HW4).

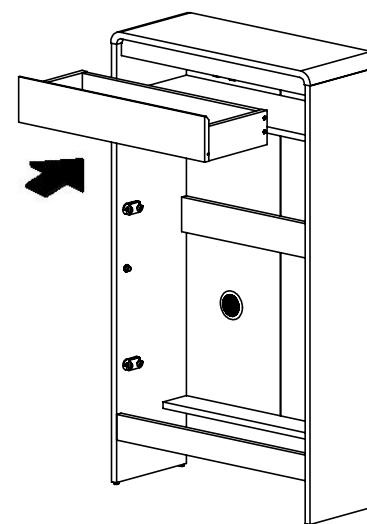

STEP12: Insert the attached drawer into the panel

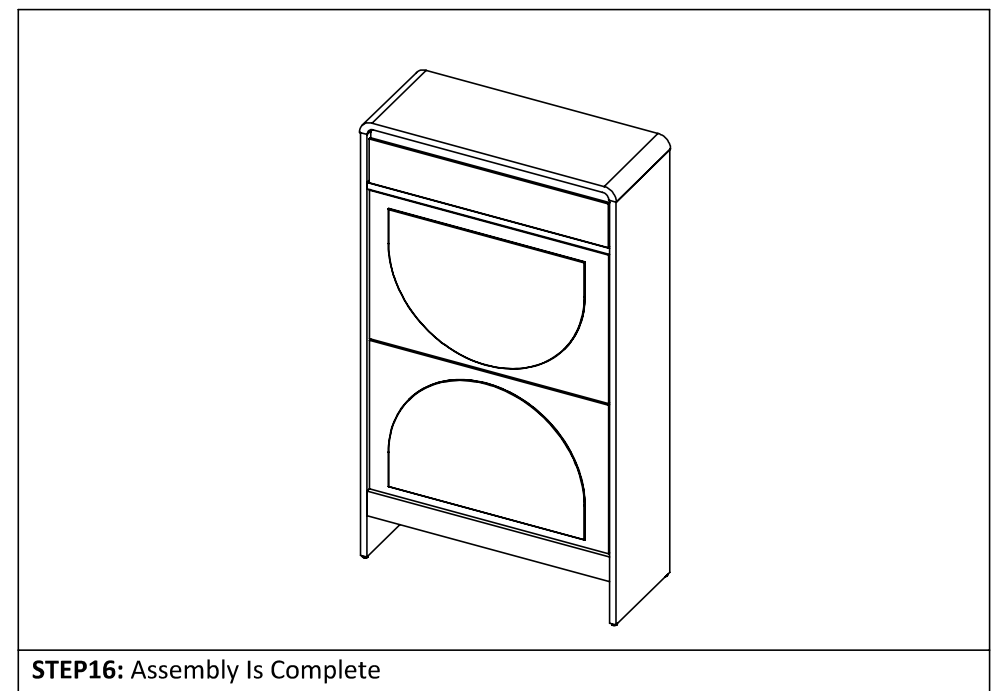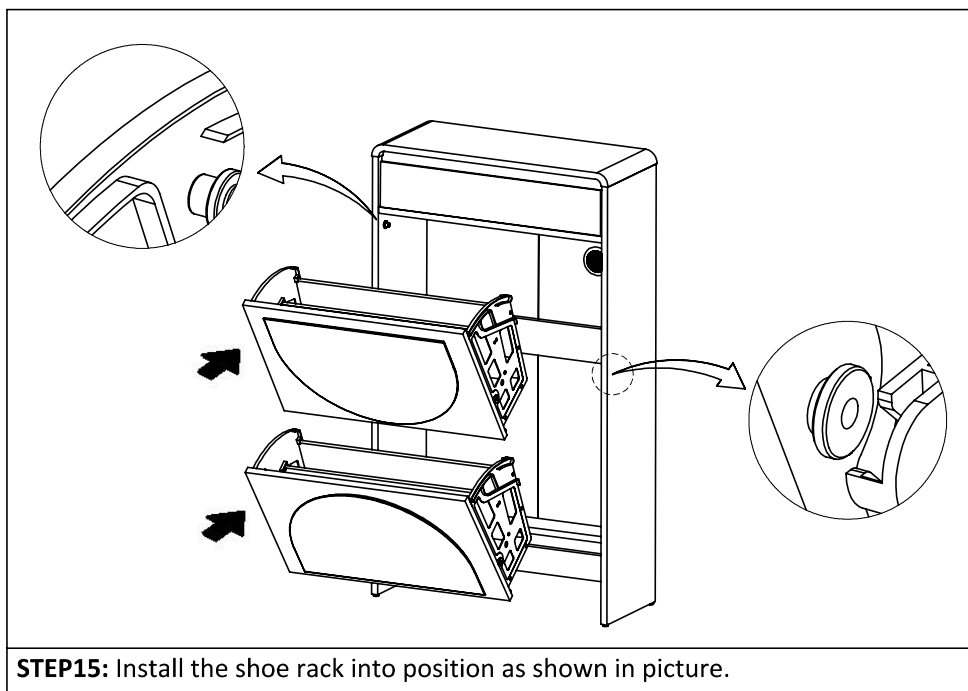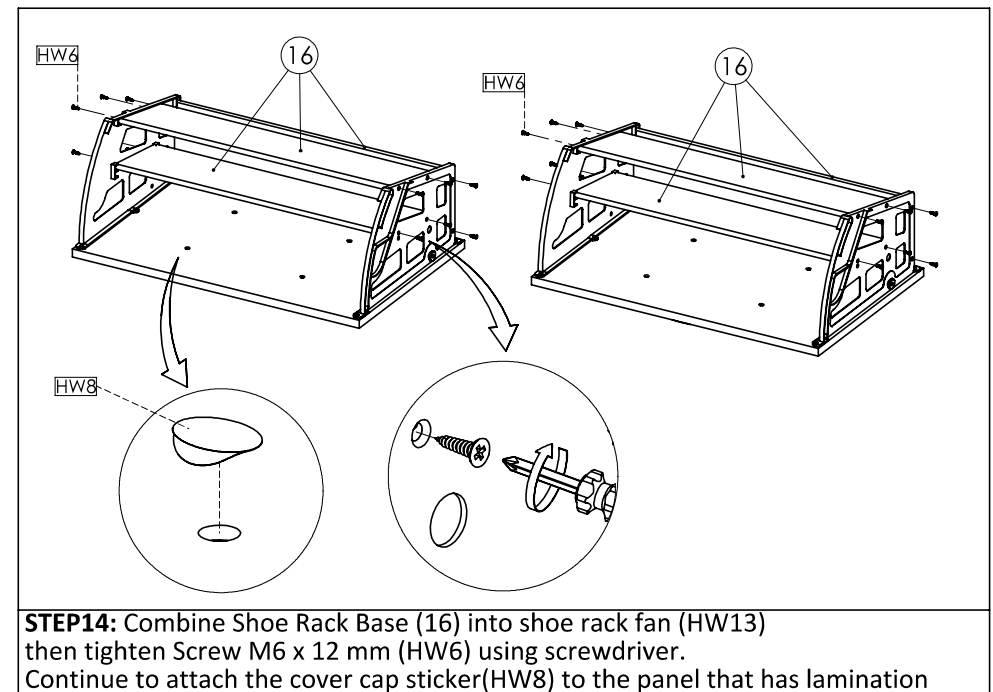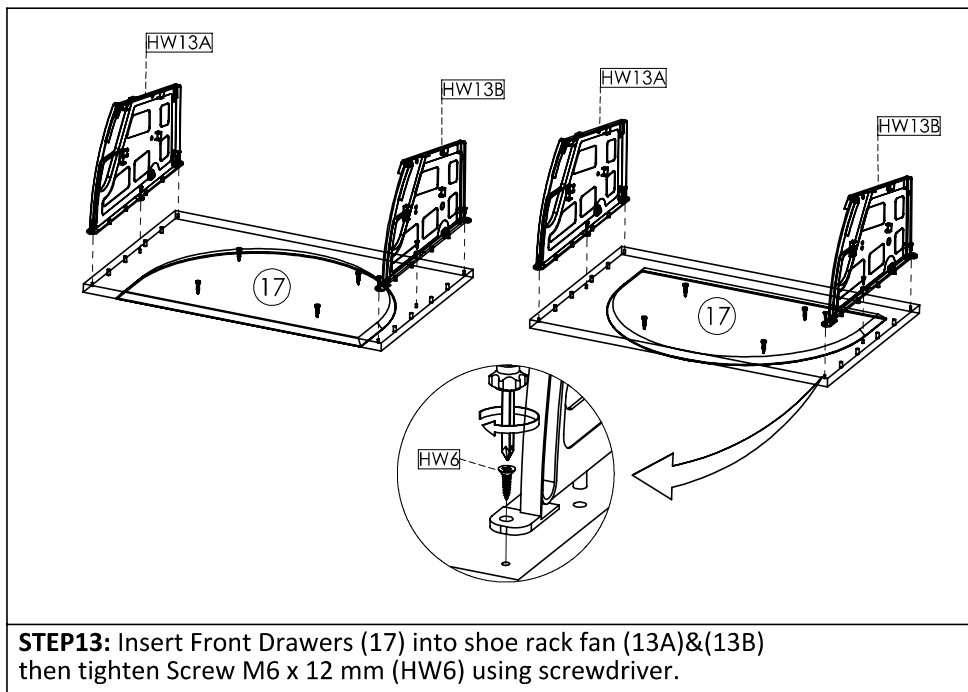




ANTI-TIP RESTRAINT INSTALLATION


! WARNING!

Children have died from furniture tipover.
To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lower drawers.

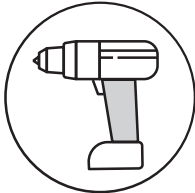


REQUIRED TOOL
8MM / 5/16" DRILL BIT

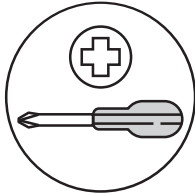

REQUIRED TOOL




Hardware (HW11 / HW7) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.

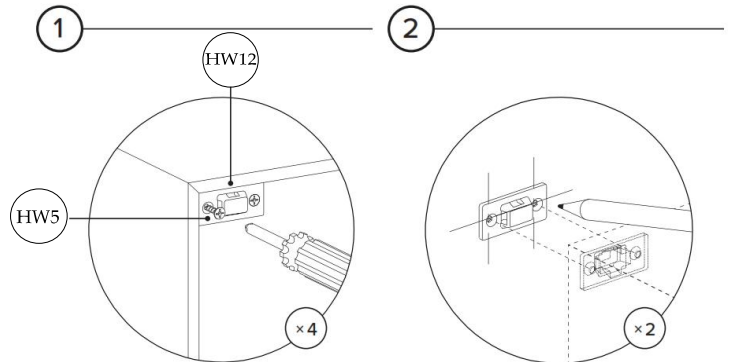


Attach pair of brackets to "Top Panel" of the unit. Note there are no existing pilot holes on the product.


Mark on wall where second pair of brackets should be placed.

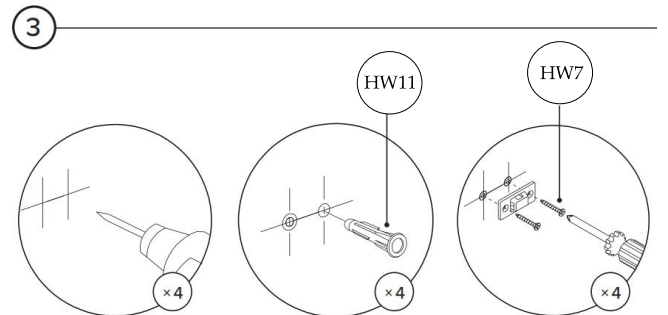

Drill holes in wall using 8mm / 5/16" drill bit.

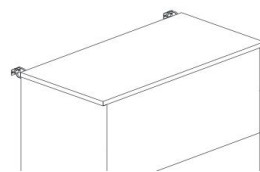

Align brackets on unit with brackets on wall.

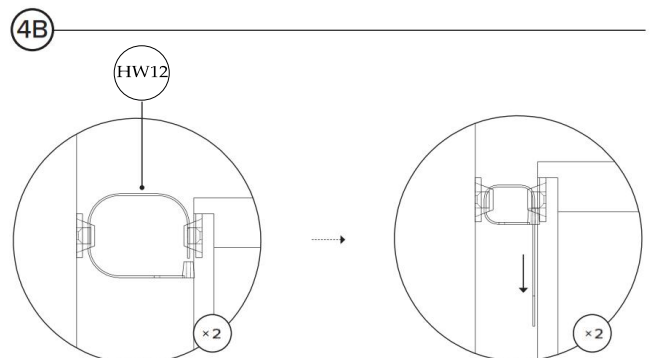

Pull strap down until it snap-locks.

ANTI-TIP RESTRAINT PACK

ID	DESCRIPTION	QTY
HW12	BRACKET 	4
HW5	M6 × 15MM SCREW 	4
HW11	M8 × 35MM PLUG 	4
HW7	M10 × 50MM SCREW 	4
HW12	STRAP 	2