


ASSEMBLY INSTRUCTIONS
TEAK STORAGE BOX 60" W
IT-370324T

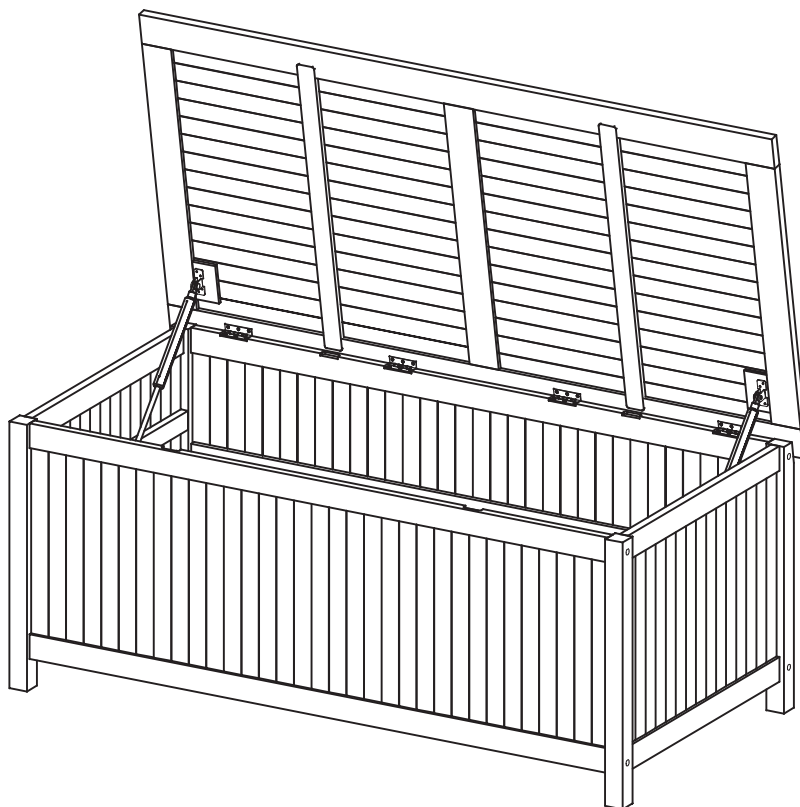

CUSTOMER SERVICE INFORMATION

Please do not return to the store. If any pieces are missing call our toll free number at 1-888-287-4275 from 9:00 am to 5.00 pm CST (Monday to Friday) for replacement parts.
For faster service, have the style number handy when calling.



GENERAL INFORMATION & TIPS

1. Please read the assembly instructions prior to assembling the Storage box.
2. To avoid damage, assemble the storage box on a non-abrasive surface such as carpet.
3. Make sure all bolts, screws, and nuts tightly fastened before the storage box is used.
4. This storage box is not for commercial use.







Please make sure you have all parts before beginning assembly. Please wait until all steps are completed before tightening bolts, screws, and nuts.

TOOLS REQUIRED


1. 8" Philips screwdriver (Not provided).
- For tightening all bolts and screws.
2. Rubber Mallet (Not provided).
- For tapping in the wooden caps.
3. Wrench (Provided)
- For tightening all nuts



PARTS AND HARDWARE LIST

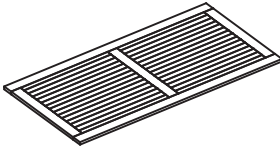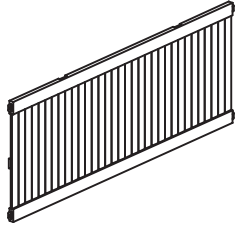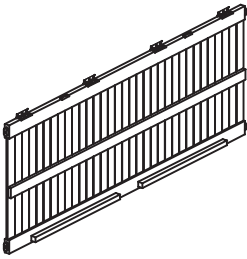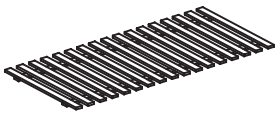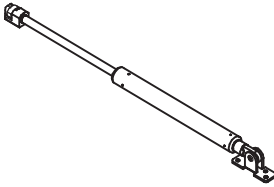A1. Right side frame	A2. Left side frame	B. Top frame	C. Front frame
			
Qty : 1 Pc	Qty : 1 Pc	Qty : 1 Pc	Qty : 1 Pc
D. Back frame	E. Base frame	F. 1 1/2" Bolt	G. 16mm Screw
			
Qty : 1 Pc	Qty : 1 Pc	Qty : 8 Pcs + 1	Qty : 8 Pcs + 1
H. 5/8" Screw	I. Wooden cap	J. Lid support	K. Lid nut
			
Qty : 12 Pcs + 1	Qty : 8 Pcs + 1	Qty : 2 Pcs	Qty : 2 Pcs

STEP 1

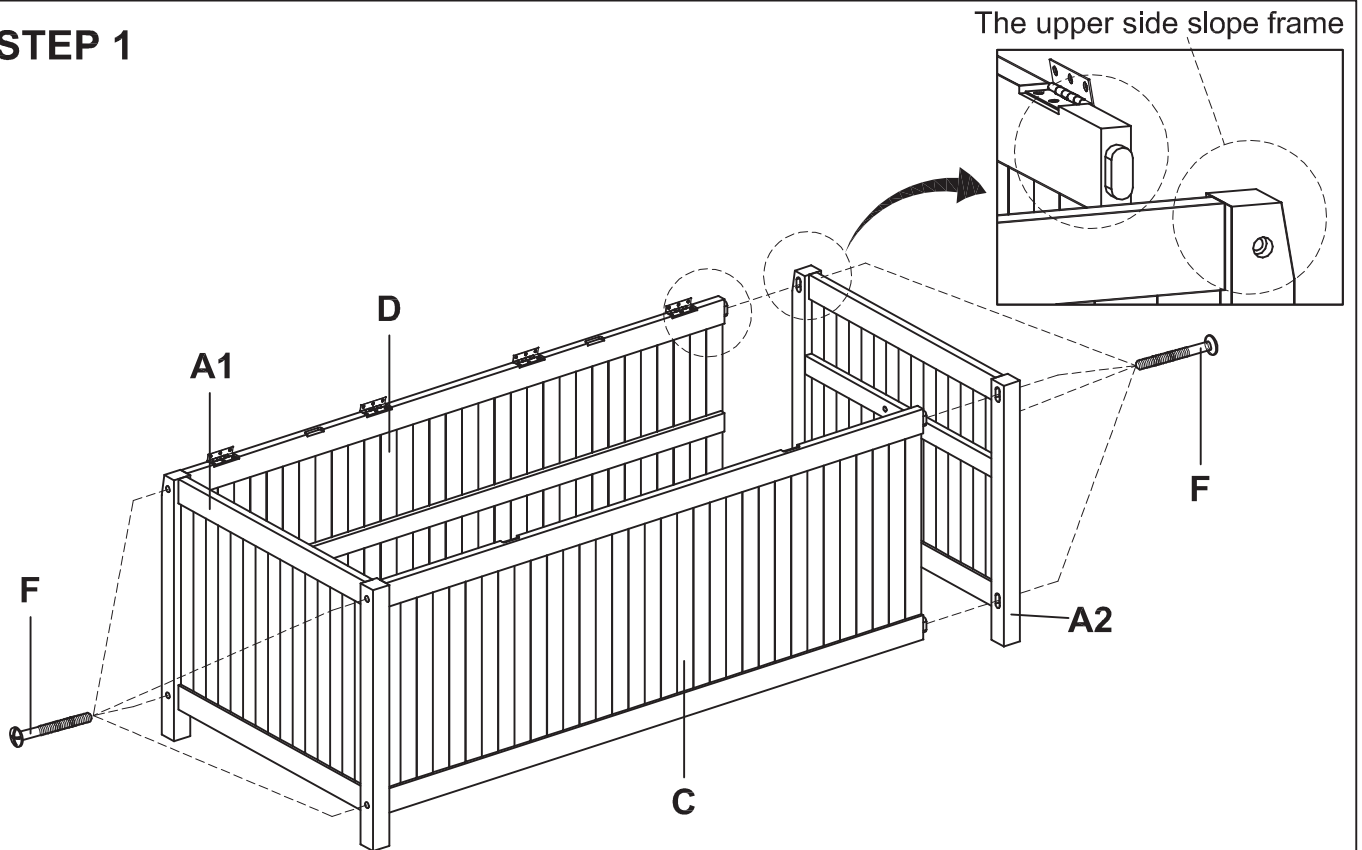


Attach the front and back frame (C & D) to matching hole of the right and left side frame (A1 & A2). Insert 1 1/2" Bolts (F) to secure frame (A1 & A2), position as shown.

**** NOTE : Installation right side frame (A1) and left side frame (A2) do not reverse.**


**** Do not fully tighten the bolts yet.**

STEP 2

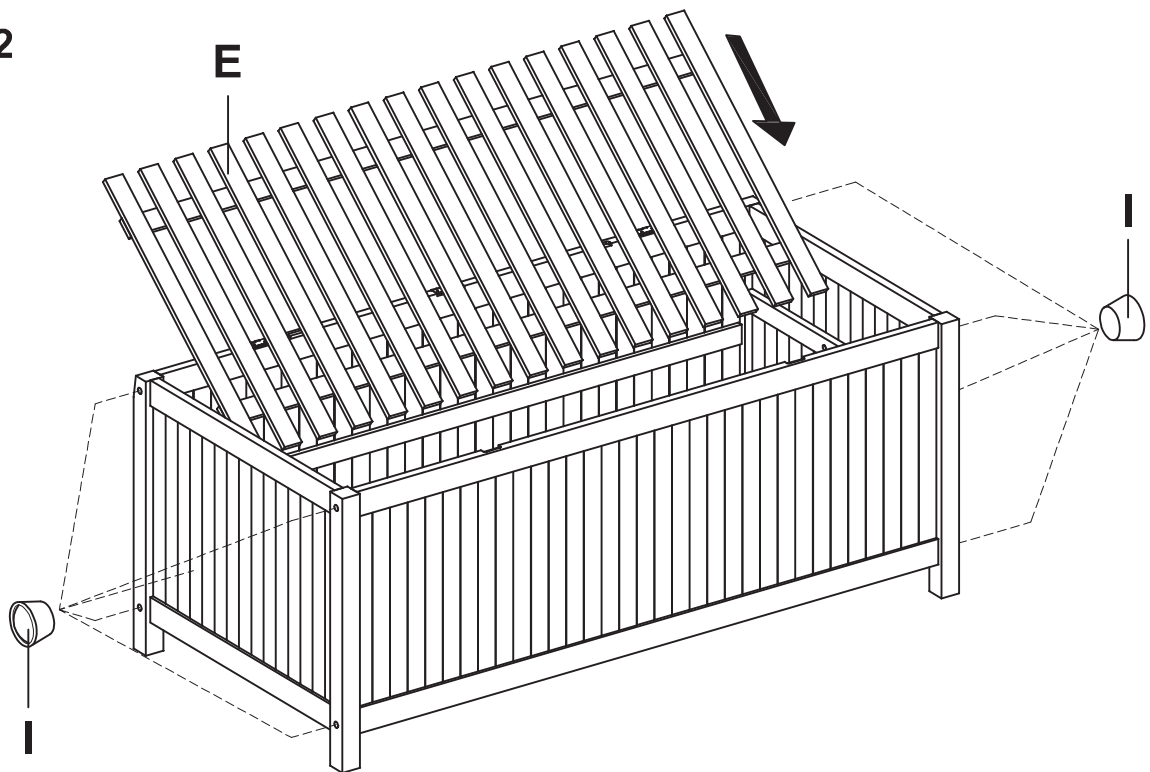

Attach the Base frame (E) to the assembly from step 1. Tapping in the wooden caps (I) to cover bolts head using rubber mallet.


STEP 3

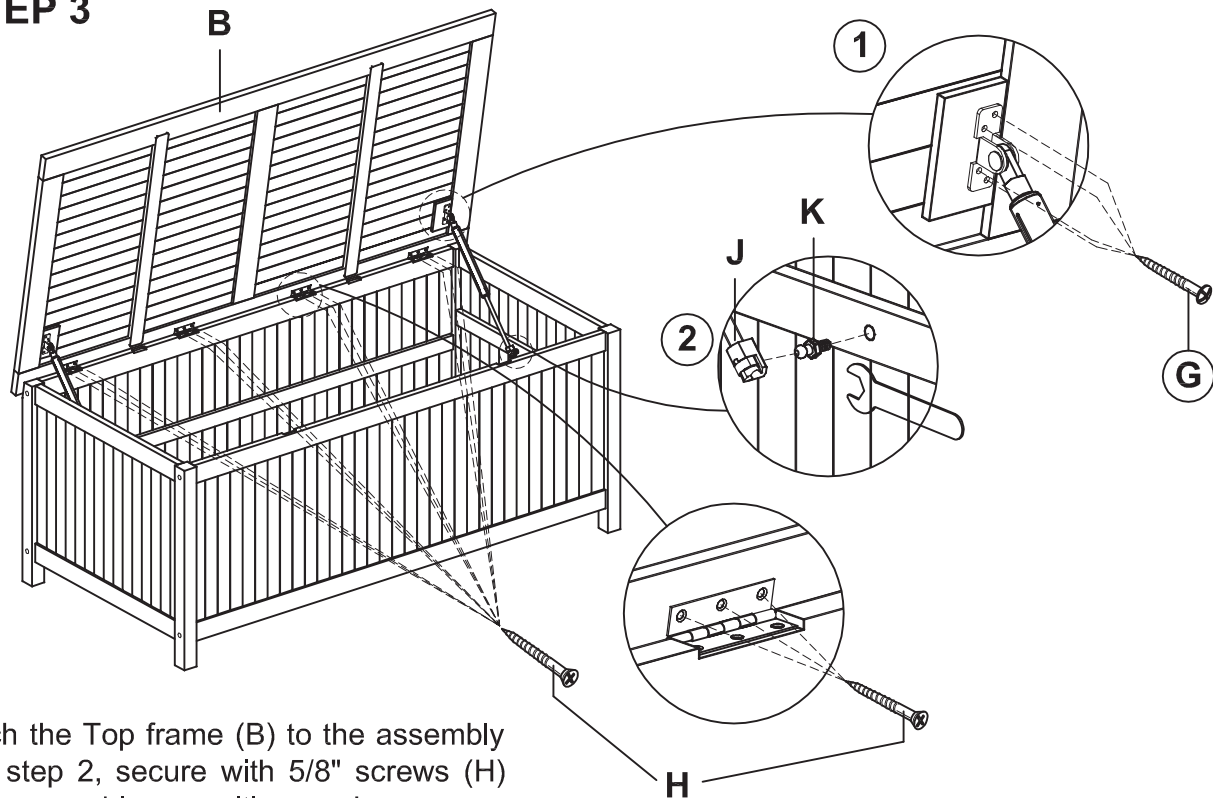

Attach the Top frame (B) to the assembly from step 2, secure with 5/8" screws (H) using screwdriver, position as shown.

Then, attach the lid support (J) into top frame (B), secure with 16mm screws (G), as shown (figure 1). Next, attach lid nut (K) and lid support bottom (J) to the right and left side frame (A1&A2), using wrench (figure 2).

STEP 4

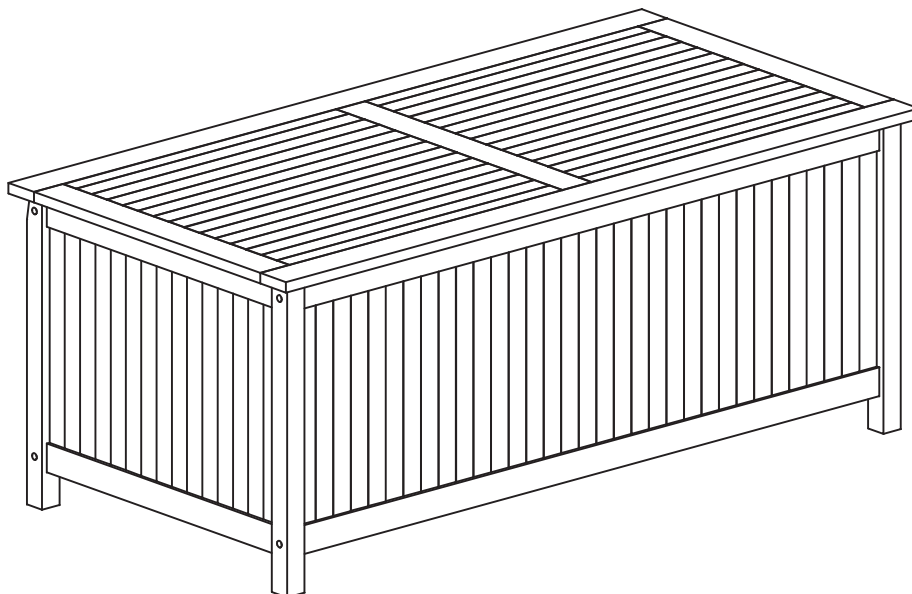

THE STORAGE BOX IS NOW READY TO USE